



grass valley

A **BELDEN** BRAND

KMX-4911

SCALABLE KALEIDO MULTIVIEWER FOR GV NODE

Installation & Service Manual

M3033-9902-102

2017-08-11

www.grassvalley.com

Copyright & Trademark Notice

Copyright © 2015–2017, Grass Valley Canada. All rights reserved.

Belden, Belden Sending All The Right Signals, and the Belden logo are trademarks or registered trademarks of Belden Inc. or its affiliated companies in the United States and other jurisdictions. Grass Valley, GV Node, KMX-4911, Kaleido-X, iControl, and Densité are trademarks or registered trademarks of Grass Valley Canada. Belden Inc., Grass Valley Canada, and other parties may also have trademark rights in other terms used herein.

SD, SDHC and SDXC Logos are trademarks or registered trademarks of SD-3C LLC in the United States, other countries or both.

Terms and Conditions

Please read the following terms and conditions carefully. By using Kaleido multiviewer documentation, you agree to the following terms and conditions.

Grass Valley hereby grants permission and license to owners of Kaleido multiviewers to use their product manuals for their own internal business use. Manuals for Grass Valley products may not be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose unless specifically authorized in writing by Grass Valley.

A Grass Valley manual may have been revised to reflect changes made to the product during its manufacturing life. Thus, different versions of a manual may exist for any given product. Care should be taken to ensure that one obtains the proper manual version for a specific product serial number.

Information in this document is subject to change without notice and does not represent a commitment on the part of Grass Valley.

Warranty information is available from the Legal Terms and Conditions section of Grass Valley's website (www.grassvalley.com).

Title	KMX-4911 Installation & Service Manual
Part Number	M3033-9902-102
Revision	2017-08-11, 16:58

Electrostatic Discharge (ESD) Protection



Electrostatic discharge occurs when electronic components are improperly handled and can result in intermittent failure or complete damage adversely affecting an electrical circuit. When you remove and replace any card from a frame always follow ESD-prevention procedures:

- Ensure that the frame is electrically connected to earth ground through the power cord or any other means if available.
- Wear an ESD wrist strap ensuring that it makes good skin contact. Connect the grounding clip to an *unpainted surface* of the chassis frame to safely ground unwanted ESD voltages. If no wrist strap is available, ground yourself by touching the *unpainted* metal part of the chassis.
- For safety, periodically check the resistance value of the antistatic strap, which should be between 1 and 10 megohms.
- When temporarily storing a card make sure it is placed in an ESD bag.
- Cards in an earth grounded metal frame or casing do not require any special ESD protection.

Protection contre les décharges électrostatiques (DES)



Une décharge électrostatique peut se produire lorsque des composants électroniques ne sont pas manipulés de manière adéquate, ce qui peut entraîner des défaillances intermittentes ou endommager irrémédiablement un circuit électrique. Au moment de remplacer une carte dans un châssis, prenez toujours les mesures de protection antistatique appropriées :

- Assurez-vous que le châssis est relié électriquement à la terre par le cordon d'alimentation ou tout autre moyen disponible.
- Portez un bracelet antistatique et assurez-vous qu'il est bien en contact avec la peau. Connectez la pince de masse à une *surface non peinte* du châssis pour détourner à la terre toute tension électrostatique indésirable. En l'absence de bracelet antistatique, déchargez l'électricité statique de votre corps en touchant une surface métallique *non peinte* du châssis.
- Pour plus de sécurité, vérifiez périodiquement la valeur de résistance du bracelet antistatique. Elle doit se situer entre 1 et 10 mégohms.
- Si vous devez mettre une carte de côté, assurez-vous de la ranger dans un sac protecteur antistatique.
- Les cartes qui sont reliées à un châssis ou boîtier métallique mis à la terre ne nécessitent pas de protection antistatique spéciale.

Recycling

Visit www.grassvalley.com for recycling information.

Certification and Compliance

Safety of Laser Modules



This equipment may incorporate modules containing Class 1 lasers. These modules are certified by the manufacturer to comply with:

- IEC/EN 60825-1:2014 Safety of laser products

Electromagnetic Compatibility



This equipment has been tested for verification of compliance with FCC Code of Federal Regulations, Title 47, Part 15 (47 CFR 15), Subpart B, Class A, Digital Devices, Unintentional Radiators.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



This equipment has been tested and found to comply with the requirements of the EMC directive 2014/30/EU:

- EN 55022:2010 Class A radiated and conducted emissions
- EN 61000-3-2:2014 Limits for harmonic current emissions
- EN 61000-3-3:2013 Limitation of voltage changes, voltage fluctuations and flicker
- EN 61000-4-2:2009 Electrostatic discharge immunity
- EN 61000-4-3:2006+A1:2008+A2:2010 Radiated, radio-frequency, electromagnetic field immunity
- EN 61000-4-4:2004+A1:2010 Electrical fast transient/burst immunity
- EN 61000-4-5:2006 Surge transient immunity
- EN 61000-4-6:2009 Conducted disturbances immunity
- EN 61000-4-8:2010 Power frequency magnetic field immunity
- EN 61000-4-11:2004 Voltage dips, short interruptions and voltage variations immunity

Environmental Compliance

部件名称 Part name	有毒有害物质或元素 (Toxic or hazardous substances and elements)					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6)	多溴联苯 (PBB)	多溴二苯 (PBDE)
电缆及电缆组件 Cables and cable assemblies	X	O	O	O	O	O
电路模块 Circuit modules	X	O	O	O	O	O
组装风扇 Fan assemblies	X	O	O	O	O	O

O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T 26572-2011 规定的限量要求以下。

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572-2011.

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572-2011 规定的限量要求。

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement in GB/T 26572-2011.

技术条款解释：此声明所依据之数据由 Grass Valley 环境管理部门向我们的部件供应商获取。Grass Valley 公司相信此信息的正确性，但由于数据来源于公司外部，我们无法保证它的完整和准确。所有这些特性可能在未获通知的情况下更改。

Technical explanations: This statement is based on the information provided by our suppliers of components and collected through our Grass Valley's environmental management system. Grass Valley believes this environmental information to be correct but cannot guarantee its completeness or accuracy as it is based on data received from sources outside our company. All specifications are subject to change without notice.

toc

Table of Contents

1 Overview	11
Related Documentation	11
Software and Firmware Updates	12
Introduction	12
Features	12
Current Limitations	13
KMX-4911 Models and Related Hardware	13
KMX-4911 Multiviewer Cards	14
KMX-4911 Rear Panels	14
Multiviewer Scaling	16
Compatible SFP Modules	18
Quad-Link 3G to HDMI 2.0 Converter	18
Optional Ancillary Equipment	19
Kaleido Software Minimum Version Compatibility	19
Overview of the KMX-4911 System	20
Functional Block Diagram	20
2 Installation	21
Getting Organized / Unpacking	21
Required Tools	21
Required Material	21
GV Node Frame Physical Interface	22
Installation of the KMX-4911 in the GV Node Frame	23
Installation overview	23
Where to locate the KMX-4911 card(s) in the GV Node frame	29
Installation requirements	29
Install the KMX-4911 Rear Panel	30
Install the KMX-4911 Modular Card(s)	31
Install the Optional SFP Module(s)	31
Routing Inputs and Mosaic Returns between the Multiviewer and the GV Node's Fabric	32
Video Streams	32
Audio Streams	32
Audio / Video Source Example	34
3 Multiviewer Cabling	37
Cabling Diagrams	37
Multiviewer SFP Module Mosaic Output to Display Input Cable Connections	38
Multiviewer SFP Module Mosaic Output to a 4K Display Input Cable Connections	41
Landscape Multiviewer Display Orientation	42
Portrait Multiviewer Display Orientation	42

About HDMI-Type Signal Connections	43
Commissioning the Multiviewer	43
Avoiding Networked Equipment IP Address Conflicts.....	43
To make the multiviewer operational	44
4 Frame Operation and IP Network Setup	45
Card Interface and Troubleshooting.....	46
Using the GV Node Frame Control Panel	47
CPU-ETH3 Local Control Panel	47
Navigating the Local Control Panel Menu	48
Local Control Panel Menu Structure	48
Changing the Mosaic Output Resolution	49
Enabling EDID Auto-Detection from the Monitor Wall	50
Networking Essentials	51
Assigning an IP Address to Each Device in your System	51
Setting the Multiviewer's IP addresses.....	51
Network Switch Considerations.....	52
Changing the Multiviewer's IP Address.....	52
Network Considerations	54
TCP/UDP Port Usage.....	54
Network Considerations for a Multiviewer Cluster	58
5 System Configuration.....	59
System Requirements for a Client PC	59
Multiviewer Model Representation in XEdit and XAdmin.....	59
XEdit Installation	60
Installing the Kaleido Software Client Applications.....	60
Installing XEdit from your Multiviewer's Home Page	60
Uninstalling XEdit	64
Installing Router Control.....	65
Uninstalling Router Control.....	68
Installing Signal Path Viewer	68
Uninstalling Signal Path Viewer	70
Opening XAdmin.....	71
Connecting to a Multiviewer with a Different XEdit Version from your PC's Version	71
Ways to Access XAdmin	72
Opening XAdmin from a Browser	72
Opening XAdmin from XEdit.....	73
Opening XAdmin from iControl or iControl Solo	75
Registering your Multiviewer's Security Credentials with your Browser	76
Enabling the Compatibility View in Internet Explorer	84
XAdmin Access Control.....	84
Enabling XAdmin Access Control	84
Changing the XAdmin Password	86
Disabling XAdmin Access Control.....	87
Closing a Password-Protected XAdmin Session	88
Opening Signal Path Viewer	89
Configuring a Multiviewer's IP Settings with XAdmin	89

Remote Control Using iControl.....	90
KMX-4911 Service Control Panels in iControl	91
Output Configuration Settings Panel.....	92
Input Status Panel	93
Network Settings Panel.....	94
Options Panel	94
Factory Panel.....	95
Alarm Configuration Panel.....	97
Information Panel	101
Configuring the RCP-200	103
Configuring the RCP-200's IP settings	103
Specifying multiviewers for the RCP-200	103
Specifying lookup servers for the RCP-200.....	103
Logging on to the RCP-200	104
Correlating Monitor Wall Destinations and KX Router Logical Routers for the RCP-200	105
Configuring the Kaleido-RCP2	106
Assigning a static IP address to the Kaleido-RCP2.....	107
Selecting a room for the Kaleido-RCP2	107
Connecting the Kaleido-RCP2 to Other Kaleido Multiviewer Systems	107
Logging on to the Kaleido-RCP2	108
Available Hardware and Software Options.....	108
Enabling Options.....	110

6 Maintenance & Troubleshooting 113

System Verification	113
Verifying the KMX-4911 Multiviewer Status.....	113
Verifying the Kaleido-RCP2	115
Loading a Layout.....	115
Customizing Layouts, Logical Sources, and other Kaleido-IP Elements.....	116
Finding the Multiviewer's IP Address and Application Version.....	116
Maintenance	117
Required Tools	117
Field Replaceable Units.....	117
Opening and Closing the Front Door.....	117
Replacing Cards	117
Cooling Fan Replacement	119
Replacing KMX-4911 Card Fans	122
Generating a System Snapshot	126
Upgrading the Multiviewer	126
Installing the Kaleido Software Upgrade.....	127
About Swapping KMX-4911 Cards into the Multiviewer.....	128
Troubleshooting	129
Troubleshooting with the card's front edge USB connector	129
Dashboard Messages.....	129

7 Specifications	131
KMX-4911 Multiviewer Cards	131
Video	131
Electrical	133
Physical	134
Appendix A Installing the SFP Output Module.....	135
Introduction.....	135
Installing an SFP module.....	135
Connecting the fiber optic cables	136
Removing the fiber optic cables.....	136
Removing the SFP module.....	136
Contact Us	138

1 Overview

Welcome to the Kaleido family of multiviewers! This Installation & Service Manual is designed to help you get your KMX-4911 multiviewer up and running. The following chapters will guide you through the installation of a KMX-4911 system in its default configuration. This chapter provides an overview of the KMX-4911 unit.

The KMX-4911 is a flexible and scalable 4K- and IP-ready multiviewer for TV production optimized for the space, power and weight considerations found in studios and outside broadcast trucks. The KMX-4911 multiviewer modules are part of the GV Node IP aggregation, processing, and edge routing platform, designed for live broadcast production.

Related Documentation

Use the following related documentation to configure the multiviewer and to better understand the features available with this multiviewer. You can obtain the latest product documentation from the Documentation Library section of Grass Valley's website (www.grassvalley.com/docs/multiviewers).

Document Number	Title
M770-2800	Kaleido Software User's Manual
M770-2103	Kaleido Software Release Notes
M770-9904	Kaleido Multiviewer Product Comparison Charts
GVB-1-0577B-EN-DS	KMX-4911 Datasheet
M770-9905	Kaleido Multiviewer Documentation Resource Guide
M3033-9902	KMX-4911 Installation & Service Manual
M6103-9805	GV Node Quick Start Guide
M6103-9800	GV Node IP Aggregation, Processing and Edge Routing Platform User Manual
M735-9902	Kaleido-RCP2 Guide to Installation and Operation
M876-9900	RCP-200 Guide to Installation and Operation
M770-0900	Kaleido Remote Control Protocol (Gateway) User's Guide
M807-9700	KXI-DVI-Bridge User's Manual
M407-9900	iControl Router User Guide
Published online	iControl Online Help iControl Solo Online Help

Software and Firmware Updates

You can obtain the latest software, drivers, and sample databases from the *Downloads* section of the Grass Valley's website (www.grassvalley.com/dl/multiviewers).

Introduction

KMX-4911 cards are installed in a GV Node frame with a corresponding back panel that is installed at the rear of the GV Node frame. Each KMX-4911 card can display up to nine GV Node video sources in up to nine video windows across one or two high-resolution mosaic outputs. Combine up to six KMX-4911 cards, to configure a dual- or quad-mosaic output system in the following sizes: 9×1 , 9×2 , 18×2 , 18×4 , 27×2 , 27×4 , 36×2 , 36×4 , 54×2 , and 54×4 . According to the number of KMX-4911 cards chosen for an installation, a correspondingly sized rear panel is used to interconnect the cards.

KMX-4911 inputs are sourced from the GV Node's fabric module, and thus from any SDI input or IP input available to the GV Node. KMX-4911 mosaic outputs are made available to the GV Node's fabric module where they can be routed within the frame as any other signal for IP distribution and these mosaic outputs are also optionally available on the rear panel of the GV Node through one or two SFP output modules for connection to a display.

A single 4 RU GV Node frame can hold up to 16 KMX-4911 multiviewer cards, which can be combined into various multiviewer combinations with appropriate rears. The KMX-4911 is ideal for production monitoring in trucks. It integrates tightly with other Densité signal processing cards, routers and production switchers.

Features

KMX-4911 features

Space-efficient modular design	Modular design offers wide range of input/output configurations, for streamlined, cost-saving cabling and optimization of space usage. Standard GV Node frame housings enable <i>mix-and-match</i> capability of multiviewers with signal processing modules, URS frame reference, and GPI I/O via GPI-1501 cards.
Unmatched image quality	Unmatched multiviewer picture quality, and superior on-screen graphics. Mosaic outputs at full 1080p 50/60Hz resolution on up to four multiviewer displays. Input signal processing up to 3 Gb/s signal formats. Capable of handling 4K UHD quad-link sources seamlessly recombining them into a pixel perfect image.
Robust and serviceable design	Hot swappable cards with unique auto-recovery feature, which provides fast automated recovery after a <i>cold</i> spare is inserted. 4 RU GV Node frame housings, with redundant power supplies, and quiet cooling.
Multi-room, multi-user oriented	A single KMX-4911 multiviewer can be used to share sources across multiple rooms or operator positions, with fully independent displays, audio monitoring and control panels dedicated to each operator.

KMX-4911 features (continued)

Seamless control across multiple multiviewers	Kaleido multiviewers can be <i>mixed and matched</i> to create a seamless monitoring system across a facility. Choice of control options such as the standalone Kaleido-RCP2 or RCP-200 panels, integrated with router control systems and panels, iControl, and third-party control systems.
Scalable for the largest systems	Virtually limitless multiviewer system expansion with upstream COTS IP switches.

Current Limitations

The KMX-4911 multiviewer supports a subset of the features offered by other Kaleido Multiviewer series models. The KMX-4911 currently does not support the following Kaleido Software V8.70 features:

- Sending alarms via SNMP
- Layout, and video display:
 - Duplicated/repeated video
 - Overlapping video monitors
 - Custom cropping and zooming vertically
 - Overscan mode
 - Automatic aspect ratio adjustment based on decoded AFD/WSS information
 - Video monitors larger than 1920×1080 pixels
 - Custom display resolutions

KMX-4911 Models and Related Hardware

The following components when added to a GV Node Frame creates a multiviewer.


- KMX-4911 Multiviewer Cards
- KMX-4911 Rear Panel
- Optional SFP Module(s)

Certain optional features must be licensed to make to make the feature available for use. See the datasheet for more information.

KMX-4911 Multiviewer Cards

The KMX-4911 is available in a number of models shown in the table below.

KMX-4911 module selection	Description
KMX-4911-9X1	9x1 Kaleido multiviewer card for GV Node (SD/HD/3G SDI).
KMX-4911-9X2	9x2 Kaleido multiviewer card for GV Node (SD/HD/3G SDI).

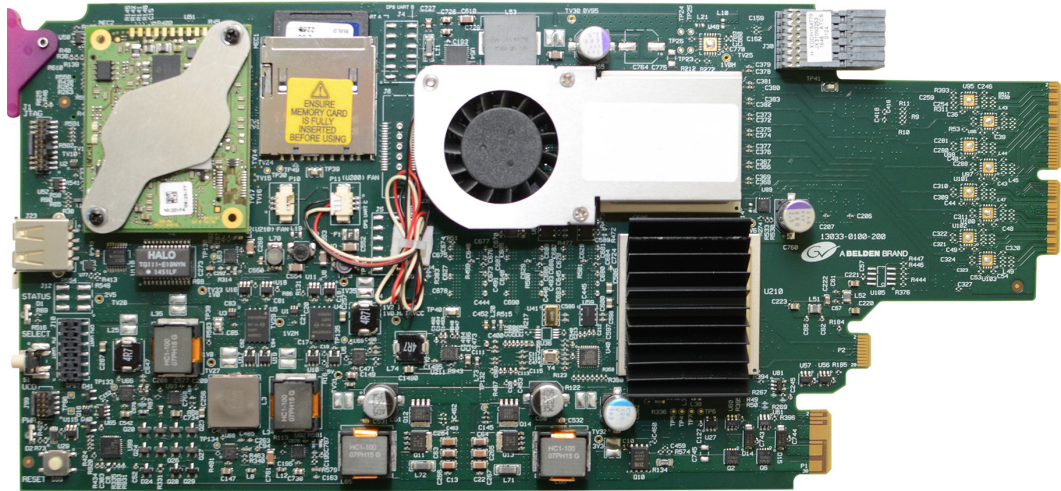

Note: Certain models have two cooling fans.

KMX-4911 Rear Panels

The KMX-4911 rear panels provide SFP slots for optional rear panel connection for up to four displays. Rear panels that support between two and six cards also serve to

interconnect the KMX-4911 cards. These rear panels are available in a number of models shown in the table below.

KMX-4911 rear panel selection	Description
KMX-4911-9X2-4SRP	Single rear panel with a single SFP slot for one KMX-4911 card.
KMX-4911-18X4-4DRP	Double rear panel with dual SFP slots for two KMX-4911 cards.
KMX-4911-27X4-4TRP	Triple rear panel with dual SFP slots for three KMX-4911 cards.
KMX-4911-36X4-4QRP	Quadruple rear panel with dual SFP slots for four KMX-4911 cards.
KMX-4911-54X4-4HRP	Sextuple rear panel with dual SFP slots for six KMX-4911 cards.



Multiviewer Scaling

The multiviewer is scaled by selecting an appropriate KMX-4911 rear panel model for your solution with the corresponding number of KMX-4911 cards to be used with that rear panel as shown below.

KMX-4911-9X2-4SRP Rear Panel

Multiviewer Capacity	Required Multiviewer Cards	SFP Module Requirements
9 × 1	1 × KMX-4911-9X1	One single Tx SFP module is required to support this capacity when displays are directly connected to the multiviewer's rear panel.
9 × 2	1 × KMX-4911-9X2	One dual Tx SFP module is required to support this capacity when displays are directly connected to the multiviewer's rear panel.

KMX-4911-18X4-4DRP Rear Panel

Multiviewer Capacity	Required Multiviewer Cards	SFP Module Requirements
18 × 1	2 × KMX-4911-9X1	One single Tx SFP module is required to support this capacity when displays are directly connected to the multiviewer's rear panel.
18 × 2	2 × KMX-4911-9X2	Two single Tx SFP modules or one dual Tx SFP module is required to support this capacity when displays are directly connected to the multiviewer's rear panel.
18 × 4	2 × KMX-4911-9X2	Two dual Tx SFP modules are required to support this capacity when displays are directly connected to the multiviewer's rear panel.

KMX-4911-27X4-4TRP Rear Panel

Multiviewer Capacity	Required Multiviewer Cards	SFP Module Requirements
27 × 1	3 × KMX-4911-9X1	One single Tx SFP module is required to support this capacity when displays are directly connected to the multiviewer's rear panel.

Multiviewer Capacity	Required Multiviewer Cards	SFP Module Requirements
27 × 2	3 × KMX-4911-9X2	Two single Tx SFP modules or one dual Tx SFP module is required to support this capacity when displays are directly connected to the multiviewer's rear panel.
27 × 4	3 × KMX-4911-9X2	Two dual Tx SFP modules are required to support this capacity when displays are directly connected to the multiviewer's rear panel.

KMX-4911-36X4-4QRP Rear Panel

Multiviewer Capacity	Required Multiviewer Cards	SFP Module Requirements
36 × 1	4 × KMX-4911-9X1	One single Tx SFP module is required to support this capacity when displays are directly connected to the multiviewer's rear panel.
36 × 2	4 × KMX-4911-9X2	Two single Tx SFP modules or one dual Tx SFP module is required to support this capacity when displays are directly connected to the multiviewer's rear panel.
36 × 4	4 × KMX-4911-9X2	Two dual Tx SFP modules are required to support this capacity when displays are directly connected to the multiviewer's rear panel.

KMX-4911-54X4-4HRP Rear Panel

Multiviewer Capacity	Required Multiviewer Cards	SFP Module Requirements
54 × 1	6 × KMX-4911-9X1	One single Tx SFP module is required to support this capacity when displays are directly connected to the multiviewer's rear panel.
54 × 2	6 × KMX-4911-9X2	Two single Tx SFP modules or one dual Tx SFP module is required to support this capacity when displays are directly connected to the multiviewer's rear panel.
54 × 4	6 × KMX-4911-9X2	Two dual Tx SFP modules are required to support this capacity when displays are directly connected to the multiviewer's rear panel.

Compatible SFP Modules

When display(s) are directly connected to the multiviewer's rear panel, the appropriate SFP module(s) must also be ordered.

SFP module selection	Description
SFP-3G-2OUT-L	Dual output HD/3G SDI long-reach coaxial SFP with DIN 1.0/2.3 connectors.
SFP-HDMI-OUT	Single output HDMI type D SFP with retention lock, cable not included (see below).
SFP-T-S13-LC	Single Tx Fiber Module at 1310nm with LC Connector.
SFP-TT-S13S13-LC	Dual Fiber Tx (output) cartridge at 1310nm with LC/PC connector.
SFP-TT-W13W15-LC	Single fiber dual Tx cartridge at 1310 & 1550nm with WDM LC/PC connector
SFP-T-IP6-S13-LC	Single output SMPTE 2022-6 transmitter, 10GBASE-LR interface, single mode 1310 nm, LC/PC connector
SFP-TT-IP6-S13-LC	Dual output SMPTE 2022-6 transmitter, 10GBASE-LR interface, single mode 1310 nm, LC/PC connector



For more SFP fiber options refer to http://www.grassvalley.com/products/sfp_optical_plugin_cartridges. See also Grass Valley's [DXF-300 Optical AV Media Extender](#).

Note: All dual SFP transmitter modules require the purchase of the multiple head activation option.

Cable for SFP Modules

Cable for SFP module selection	Description
HDMI-D-A-2	HDMI type D to A cable (2m) with retention lock.

Quad-Link 3G to HDMI 2.0 Converter

For 18 × 4, 27 × 4, 36 × 4, and 54 × 4 multiviewers, a 2160p output is available through an optional external quad-link 3G to HDMI 2.0 converter.

Quad-Link converter selection	Description
KMX-4K-QL-TO-HDMI	4K quad-link square division to HDMI 2.0 converter

Optional Ancillary Equipment

The following optional equipment may be supplied with your order.

- Kaleido RCP-2 or RCP-200 multi-function remote control panel

Kaleido Software Minimum Version Compatibility

The Kaleido Software version currently loaded into a KMX-4911 card must meet the minimum Kaleido Software version number required by the multiviewer into which the KMX-4911 card is going to be installed. The minimum Kaleido Software version number varies according to the multiviewer's capacity.

Multiviewer Capacity	Minimum required Kaleido Software version number
9 × 1, 9 × 2	8.00 or higher
18 × 1, 18 × 2, 18 × 4	8.20 or higher
27 × 1, 27 × 2, 27 × 4	8.30 or higher
36 × 1, 36 × 2, 36 × 4	8.30 or higher
54 × 1, 54 × 2, 54 × 4	8.70 or higher

To upgrade a multiviewer, see [Upgrading the Multiviewer](#), on page 126.


Whenever possible, upgrade the multiviewer to use the latest Kaleido Software version to take advantage of the latest bug fixes and stability enhancements. See the Kaleido Software Release Notes for more information about a Kaleido Software release.

Kaleido Software Version 8.51 or higher is required for the fan monitor status to work correctly with KMX-4911 multiviewer cards that have two fans.


For a multiviewer that has two or more KMX-4911 multiviewer cards, and all multiviewer cards meet the minimum version according to the above table, all multiviewer cards will be automatically upgraded or downgraded to the Kaleido Software version currently loaded on multiviewer card 'A', as a function of the live-update (auto-upgrade) feature. See [Installation of the KMX-4911 in the GV Node Frame](#), on page 23 for the location of card 'A' in each multiviewer model. When a KMX-4911 multiviewer card does not meet the minimum version according to the above table is inserted to a multiviewer, special upgrade procedures will be required for this card in order to make the multiviewer fully functional. See [About Swapping KMX-4911 Cards into the Multiviewer](#), on page 128

Overview of the KMX-4911 System

Between one to six KMX-4911 modules are interconnected through their rear panels according to your application's sizing as shown below.

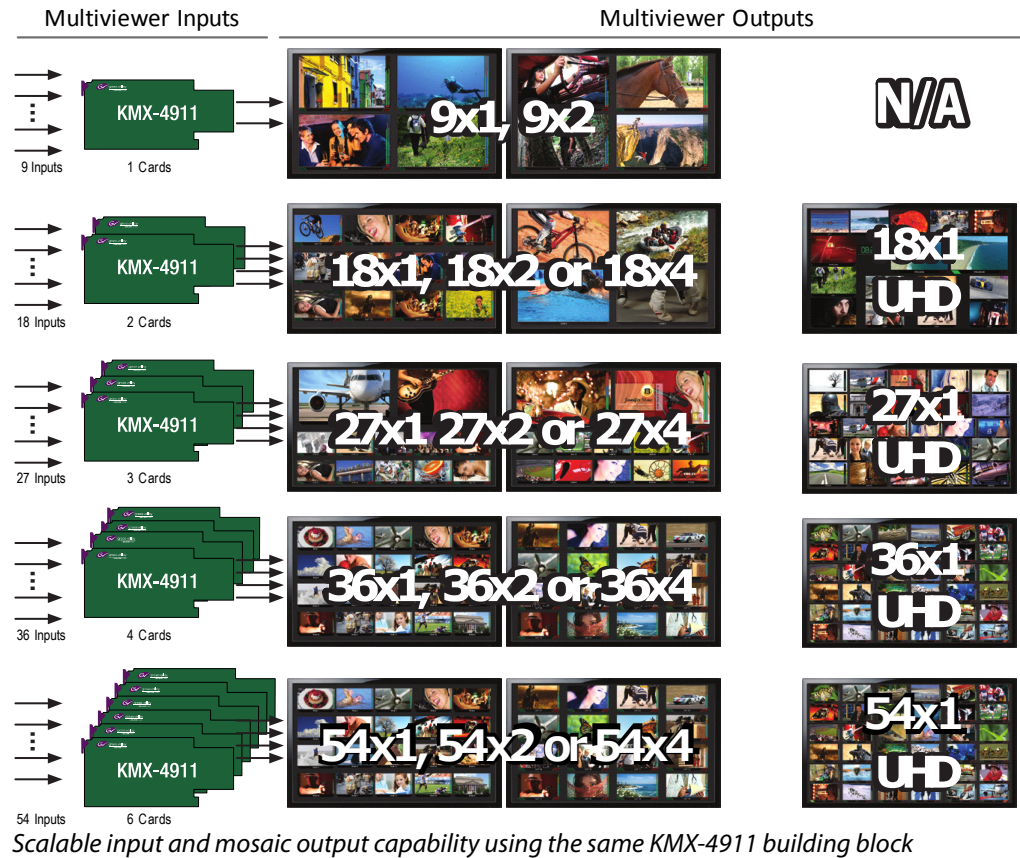

Functional Block Diagram

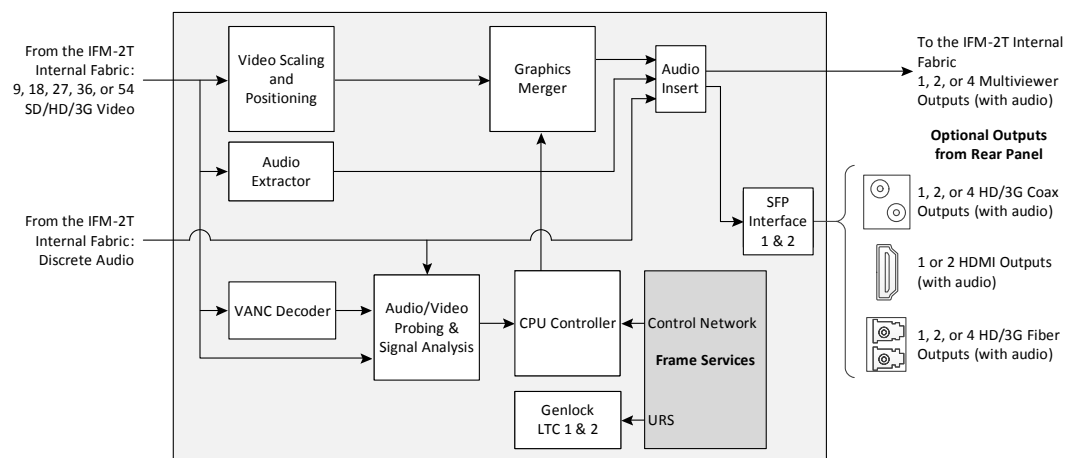

KMX-4911 functional block diagram

2 Installation

This chapter provides information about system requirements, items shipped with your KMX-4911 multiviewer and it will guide you through the installation of a KMX-4911 multiviewer.

Getting Organized / Unpacking

Make sure the following items have been shipped with your KMX-4911 order. If any of these are missing, contact your distributor or Grass Valley (see , on page 138).

Your KMX-4911 package includes the following:

- KMX-4911 cards (front and rear modules), as per order
- SFP modules, as per order, with adapter cables if required
- Kaleido Multiviewers Documentation Resource Guide

Required Tools

In addition to the above, you will need the following tools (field supplied):

- Phillips #2 screwdriver to remove and install rear panels


Required Material

In addition to the above, you will need the following (field supplied):

- Up to 4 displays
- Client PC
- Display cables (to connect your multiviewer to displays)
- At least one GV Node housing frame with available modular card slots
- Ethernet network connectivity


GV Node Frame Physical Interface

The KMX-4911 cards are installed in up to six consecutive modular card slots in the GV Node frame. When the frame door is closed, the status LEDs on each of the cards in the frame is visible through the door.

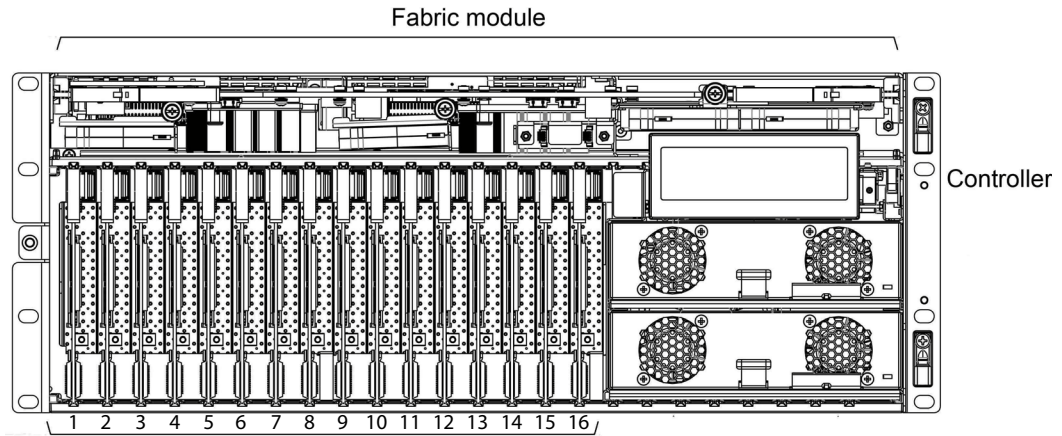

Modular cards (16 slots)
Front of GV Node frame (door removed) with modular card slot numbers labelled 1 to 16

The rear panel for the KMX-4911 card(s) are installed at the rear of the GV Node frame. The rear panel must be installed on the same modular card slots used by the KMX-4911 card(s).

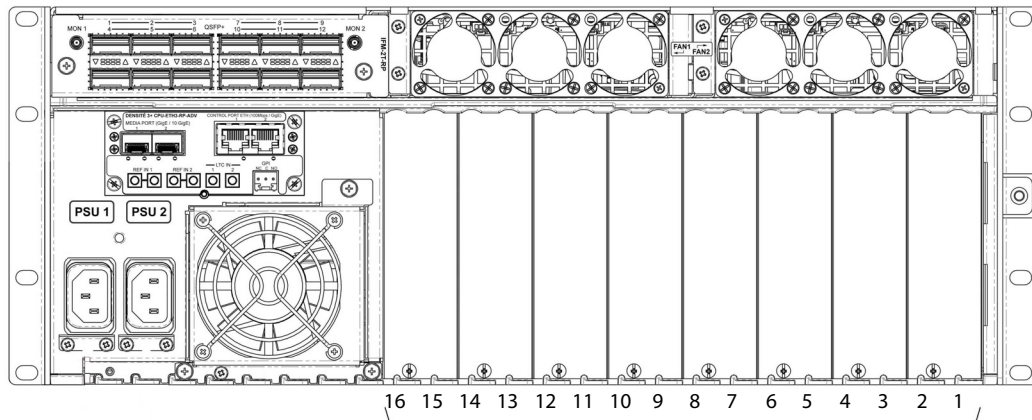

Rear panels for modular cards
Rear of GV Node frame with modular card slot numbers labelled 1 to 16

To open the front door, see [Opening and Closing the Front Door](#), on page 117.

Installation of the KMX-4911 in the GV Node Frame


Installation overview

The KMX-4911 multiviewer is installed in a GV Node frame. As such, the GV Node frame must be networked and powered, and configured for use. To avoid any network IP address conflict, see [Avoiding Networked Equipment IP Address Conflicts](#), on page 43.

The KMX-4911 cards are installed in a GV Node frame along with the associated rear panel. The rear panel must be installed in the GV Node frame before the card can be inserted into the frame. If the KMX-4911 card is to directly support a video wall mosaic output, one or two SFP module(s) must installed in the rear panel. See [KMX-4911 Models and Related Hardware](#), on page 13 for a summary of the hardware that can be installed. See also the GV Node Quick Start Guide for information about how to install, power up, and configure a GV Node frame.

Multiviewer with a KMX-4911-9x2-4SRP Rear Panel

The one KMX-4911 cards are installed in a GV Node Frame slot that the KMX-4911-9x2-4SRP rear panel occupies.

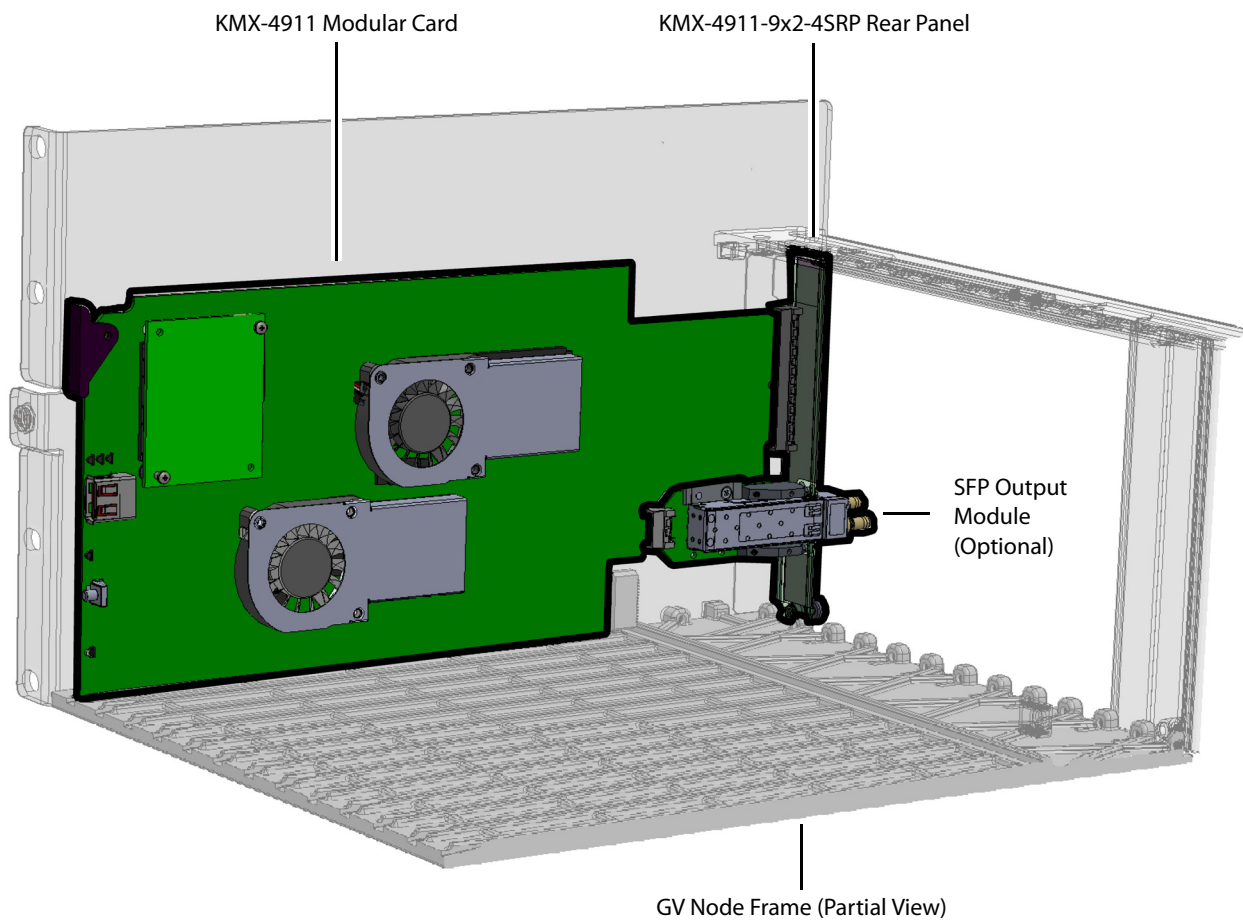


A KMX-4911 Card shown Assembled with a KMX-4911-9x2-4SRP Rear Panel in a GV Node Frame

This KMX-4911 card accepts up to 9 video inputs from the GV Node frame's fabric and can source up to 2 mosaic returns to the GV Node frame's fabric. It can also accept up to 64 discrete and 144 embedded audio channels from the GV Node frame's fabric.

The slot a given KMX-4911 card is installed in determines the input range / mosaic return range the card will use to interact with the GV Node frame's fabric. See [Routing Inputs and Mosaic Returns between the Multiviewer and the GV Node's Fabric](#), on page 32.

Multiviewer with a KMX-4911-18X4-4DRP Rear Panel

The two KMX-4911 cards are installed in two consecutive GV Node Frame slots that the KMX-4911-18X4-4DRP rear panel occupies.

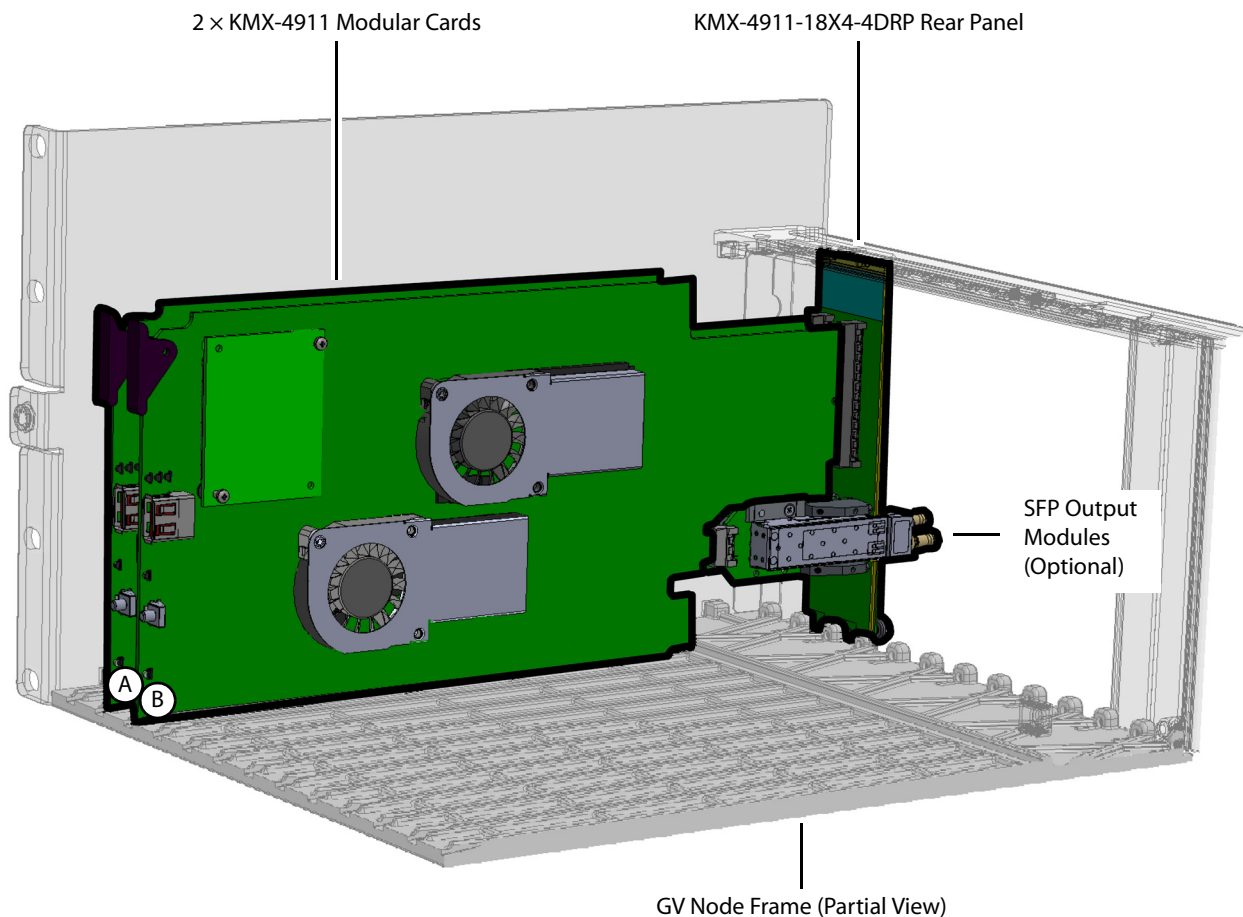

Two KMX-4911 Cards shown Assembled with a KMX-4911-18X4-4DRP Rear Panel in a GV Node Frame


In the above diagram, the cards are identified with letters. How individual cards interact with the GV Node's fabric is explained in the table below.

Identification Letter	Inputs from GV Node frame's fabric	Mosaic returns to GV Node frame's fabric
A & B	Up to 9 video inputs per KMX-4911 card. Up to 18 video inputs total. Up to 64 discrete and 144 embedded audio channels for each KMX-4911 card in these slots. Up to 128 discrete and 288 embedded audio channels total.	Up to 2 mosaic returns per KMX-4911 card. Up to 4 mosaic returns total.

The slot a given KMX-4911 card is installed in determines the input range / mosaic return range the card will use to interact with the GV Node frame's fabric. See [Routing Inputs and Mosaic Returns between the Multiviewer and the GV Node's Fabric](#), on page 32.

Multiviewer with a KMX-4911-27X4-4TRP Rear Panel

The three KMX-4911 cards are installed in three consecutive GV Node Frame slots that the KMX-4911-27X4-4TRP rear panel occupies.

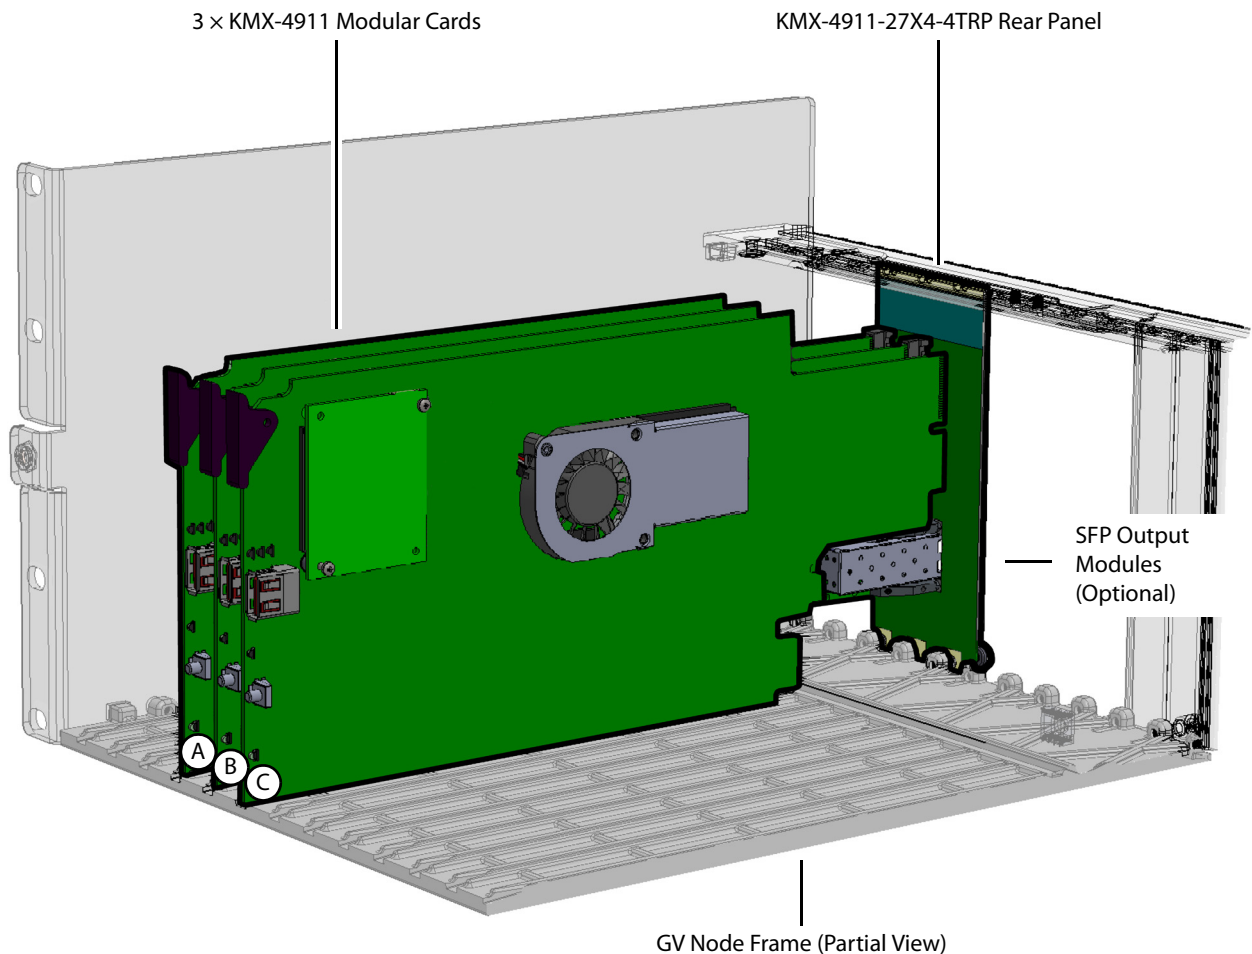

Three KMX-4911 Cards shown Assembled with a KMX-4911-27X4-4TRP Rear Panel in a GV Node Frame


In the above diagram, the cards are identified with letters. How individual cards interact with the GV Node's fabric is explained in the table below.

Identification Letter	Inputs from GV Node frame's fabric	Mosaic returns to GV Node frame's fabric
A & B	Up to 9 video inputs per KMX-4911 card. Up to 64 discrete and 144 embedded audio channels for each KMX-4911 card in these slots.	Up to 2 mosaic returns per KMX-4911 card.
C	Up to 9 video inputs. Up to 64 discrete and 144 embedded audio channels for the KMX-4911 card in this slot.	0
Total for A, B, & C	Up to 27 video inputs total. Up to 192 discrete and 432 embedded audio channels total.	Up to 4 mosaic returns total.

The slot a given KMX-4911 card is installed in determines the input range / mosaic return range the card will use to interact with the GV Node frame's fabric. See [Routing Inputs and Mosaic Returns between the Multiviewer and the GV Node's Fabric](#), on page 32.

Multiviewer with a KMX-4911-36X4-4QRP Rear Panel

The four KMX-4911 cards are installed in four consecutive GV Node Frame slots that the KMX-4911-36X4-4QRP rear panel occupies.

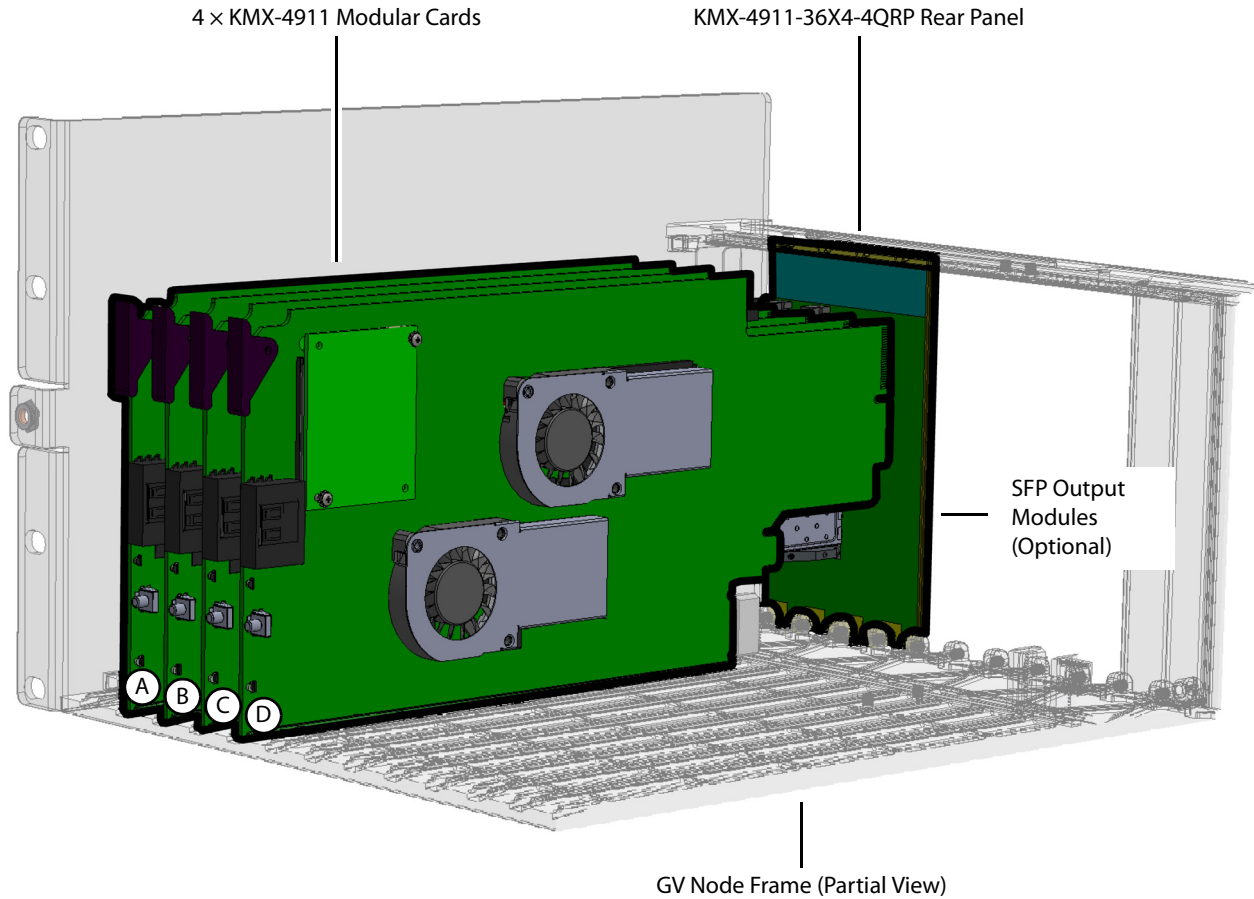

Four KMX-4911 Cards shown Assembled with a KMX-4911-36X4-4QRP Rear Panel in a GV Node Frame


In the above diagram, the cards are identified with letters. How individual cards interact with the GV Node's fabric is explained in the table below.

Identification Letter	Inputs from GV Node frame's fabric	Mosaic returns to GV Node frame's fabric
A & B	Up to 9 video inputs per KMX-4911 card. Up to 64 discrete and 144 embedded audio channels for each KMX-4911 card in these slots.	Up to 2 mosaic returns per KMX-4911 card.
C & D	Up to 9 video inputs per KMX-4911 card. Up to 64 discrete and 144 embedded audio channels for each KMX-4911 card in these slots.	0
Total for A, B, C, & D	Up to 36 video inputs total. Up to 256 discrete and 576 embedded audio channels total.	Up to 4 mosaic returns total.

The slot a given KMX-4911 card is installed in determines the input range / mosaic return range the card will use to interact with the GV Node frame's fabric. See [Routing Inputs and Mosaic Returns between the Multiviewer and the GV Node's Fabric](#), on page 32.

Multiviewer with a KMX-4911-54X4-4HRP Rear Panel

The six KMX-4911 cards are installed in six consecutive GV Node Frame slots that the KMX-4911-54X4-4HRP rear panel occupies.

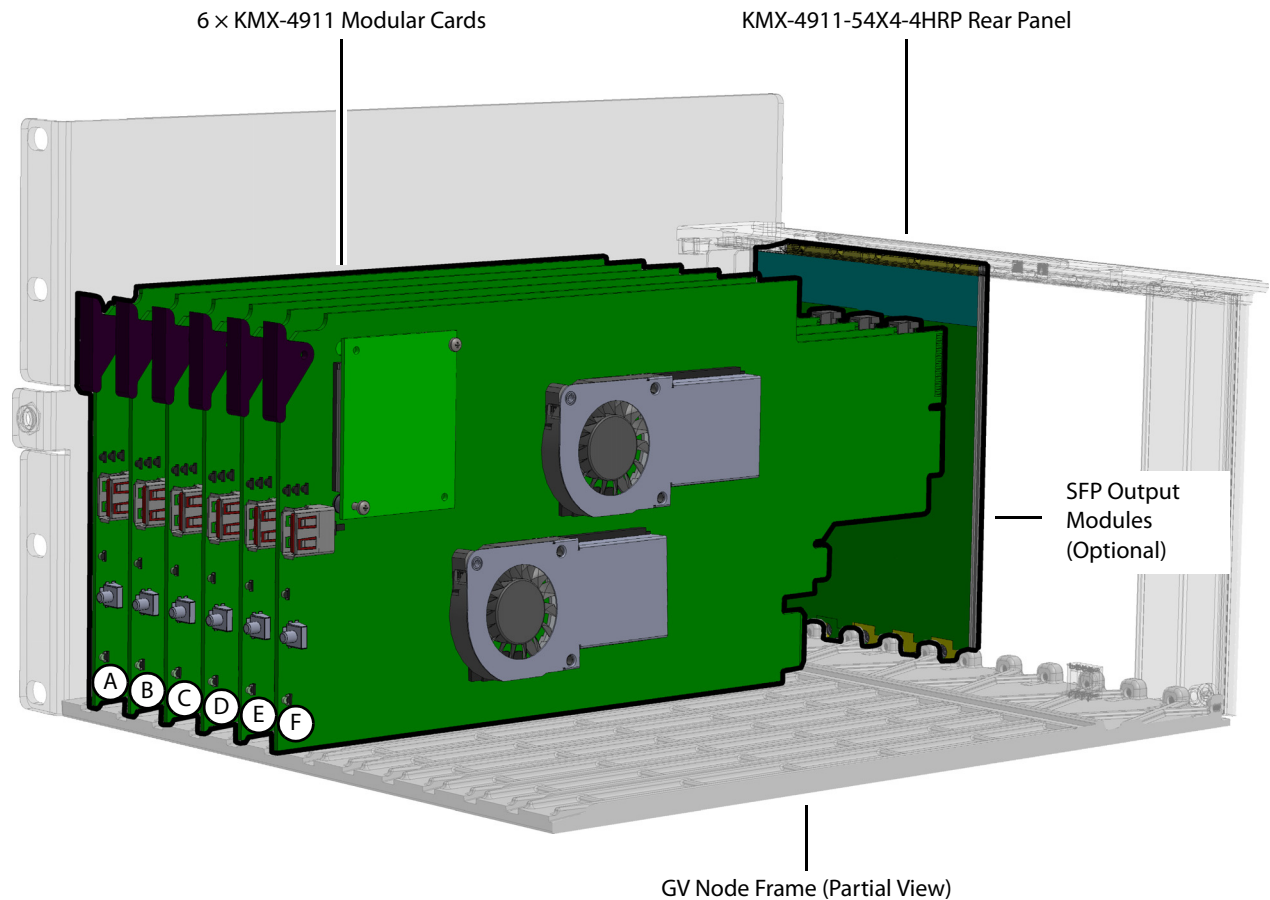

Six KMX-4911 Cards shown Assembled with a KMX-4911-54X4-4HRP Rear Panel in a GV Node Frame

In the above diagram, the cards are identified with letters. How individual cards interact with the GV Node's fabric is explained in the table below.

Identification Letter	Inputs from GV Node frame's fabric	Mosaic returns to GV Node frame's fabric
A & B	Up to 9 video inputs per KMX-4911 card. Up to 64 discrete and 144 embedded audio channels for each KMX-4911 card in these slots.	Up to 2 mosaic returns per KMX-4911 card.

Identification Letter	Inputs from GV Node frame's fabric	Mosaic returns to GV Node frame's fabric
C, D, E, & F	Up to 9 video inputs per KMX-4911 card. Up to 64 discrete and 144 embedded audio channels for each KMX-4911 card in these slots.	0
Total for A, B, C, D, E, & F	Up to 54 video inputs total. Up to 256 discrete and 864 embedded audio channels total.	Up to 4 mosaic returns total.

The slot a given KMX-4911 card is installed in determines the input range / mosaic return range the card will use to interact with the GV Node frame's fabric. See [Routing Inputs and Mosaic Returns between the Multiviewer and the GV Node's Fabric](#), on page 32.

Where to locate the KMX-4911 card(s) in the GV Node frame

The GV Node frame has space for 16 modular card slots. Identify the space in the GV Node frame the multiviewer is to be located. A single KMX-4911 card can be installed in any one of the 16 modular card slots with its corresponding rear panel. When there are between two and six KMX-4911 cards to be installed, they must be installed together side-by-side in a series and use the same common rear panel to form a multiviewer system. More than one multiviewer system can be installed in one GV Node frame, however, each multiviewer system will be functionally independent of each other.

Installation requirements


It is not necessary to switch off the frame's power when installing or removing a card.

Install the KMX-4911 Rear Panel

Each card has connectors which plug into a mid-frame mother board for distribution of power and for connection to the controller card, and a second connector which for certain cards plug directly into the rear panel for mosaic SFP output connections to the display(s).

First remove cards in any modular card slot where the rear panel is going to be installed.

- To remove an existing card from the modular card slot, lift up the swivel handle on the front of the card to lever the connectors apart, then use the handle to pull the card straight out of the modular card slot.

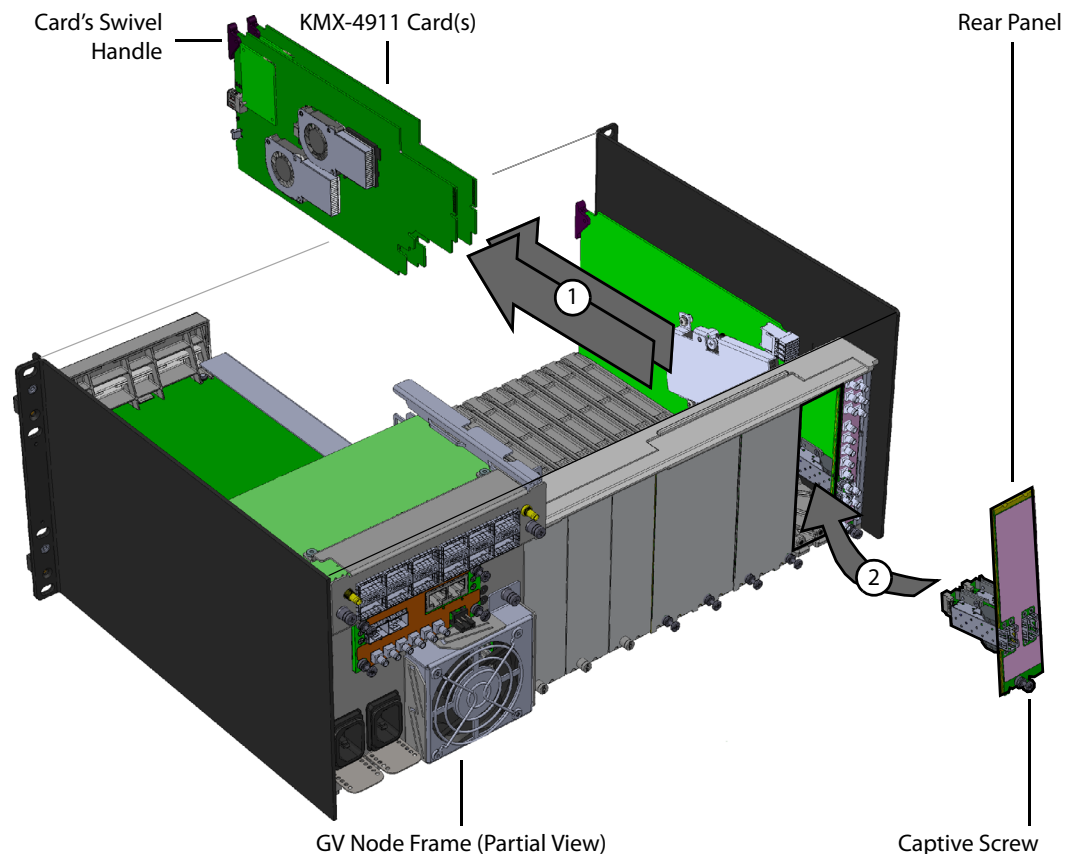

Example installation of a KMX-4911-18X4-4DRP Rear Panel in slots 2 and 3 in a GV Node Frame

For example, when installing a KMX-4911-18X4-4DRP rear panel in slots 2 and 3, first remove any cards located in modular card slots 2 and 3 as shown above.

To install the rear panel

- 1 If a card is installed in the modular card slot whose rear panel is being changed, remove it as described above.
- 2 Remove the existing rear panel (either blank or belonging to an existing card that is being changed out) by releasing the captive screw(s) at the bottom.

- 3 Slide the top edge of the new rear panel under the lip at the top of the empty space and secure the panel in place with the captive screw(s) on the bottom.

Install the KMX-4911 Modular Card(s)

The rear panel occupies between 1 and 6 modular card slots in the frame. One KMX-4911 card must be installed in each modular card slot covered by the rear panel. Once the rear panel has been installed, install the KMX-4911 card(s) as follows:

- 1 Open the frame's front door. See [Opening and Closing the Front Door](#), on page 117.
- 2 Orient the card such that the card is up right with the swivel handle located at the top edge of the card.
- 3 While holding the card by its swivel handle, slide the KMX-4911 card into the slot and gently push on the swivel handle to seat the connectors.
- 4 Insert any remaining cards into the frame in the same manner.
- 5 Close the frame's front door. See [Opening and Closing the Front Door](#), on page 117.

Install the Optional SFP Module(s)

If the KMX-4911 card is to directly support a video wall mosaic output, install the SFP module(s) into the Rear Panel. See [Installing the SFP Output Module](#), on page 135.

Routing Inputs and Mosaic Returns between the Multiviewer and the GV Node's Fabric

The GV Node's internal router, the IFM-2T fabric module, controls the signal flows into and out of the multiviewer's KMX-4911 cards. To know the quantity of GV Node frame inputs from fabric and mosaic returns to fabric each KMX-4911 card supports, see [Installation of the KMX-4911 in the GV Node Frame](#), on page 19. The slot a given KMX-4911 card is installed in determines the input range / mosaic return range the card will use to interact with the GV Node frame's fabric. This is shown in the following tables. Under certain conditions, audio stream signals are managed separately from video stream signals and are managed through a separate GV Node audio router.

Video Streams

KMX-4911 Card Video Matrix Input from Fabric Number / Mosaic Return to Fabric Number for each GV Node Frame Slot

Card's Input from GV Node Fabric / Mosaic Return to GV Node Fabric	GV Node Frame Slot Number															
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
First Input / Mosaic Return 1	1	10	19	28	37	46	55	64	73	82	91	100	109	118	127	136
Second Input / Mosaic Return 2	2	11	20	29	38	47	56	65	74	83	92	101	110	119	128	137
Third Input	3	12	21	30	39	48	57	66	75	84	93	102	111	120	129	138
Fourth Input	4	13	22	31	40	49	58	67	76	85	94	103	112	121	130	139
Fifth Input	5	14	23	32	41	50	59	68	77	86	95	104	113	122	131	140
Sixth Input	6	15	24	33	42	51	60	69	78	87	96	105	114	123	132	141
Seventh Input	7	16	25	34	43	52	61	70	79	88	97	106	115	124	133	142
Eighth Input	8	17	26	35	44	53	62	71	80	89	98	107	116	125	134	143
Ninth Input	9	18	27	36	45	54	63	72	81	90	99	108	117	126	135	144

Audio Streams

The multiviewer has the following modes for processing audio source.

- MDX mode: enables embedding of discrete audio sources into the corresponding video source prior to monitoring/metering being done. This mode will replace any pre-existing embedded audio in the video source.
- Non-MDX mode: existing embedded audio is preserved and is monitored/metered by the multiviewer. Discrete audio is also monitored/metered separately by the multiviewer.

The MDX mode is set in the GV Node Manager application under *Enabled Options*.

MDX Mode: KMX-4911 Card Audio Matrix (discrete to embedded audio) Input from Fabric Number for each GV Node Frame Slot

Card's Input from GV Node Fabric	GV Node Frame Slot Number															
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
First Input	1 to 16	145 to 160	289 to 304	433 to 448	577 to 592	721 to 736	865 to 880	1009 to 1024	1153 to 1168	1297 to 1312	1441 to 1456	1585 to 1600	1729 to 1744	1873 to 1888	2017 to 2032	2161 to 2176
Second Input	17 to 32	161 to 176	305 to 320	449 to 464	593 to 608	737 to 752	881 to 896	1025 to 1040	1169 to 1184	1313 to 1328	1457 to 1472	1601 to 1616	1745 to 1760	1889 to 1904	2033 to 2048	2177 to 2192
Third Input	33 to 48	177 to 192	321 to 336	465 to 480	609 to 624	753 to 768	897 to 912	1041 to 1056	1185 to 1200	1329 to 1344	1473 to 1488	1617 to 1632	1761 to 1776	1905 to 1920	2049 to 2064	2193 to 2208
Fourth Input	49 to 64	193 to 208	337 to 352	481 to 496	625 to 640	769 to 784	913 to 928	1057 to 1072	1201 to 1216	1345 to 1360	1489 to 1504	1633 to 1648	1777 to 1792	1921 to 1936	2065 to 2080	2209 to 2224
Fifth Input	65 to 80	209 to 224	353 to 368	497 to 512	641 to 656	785 to 800	929 to 944	1073 to 1088	1217 to 1232	1361 to 1376	1505 to 1520	1649 to 1664	1793 to 1808	1937 to 1952	2081 to 2096	2225 to 2240
Sixth Input	81 to 96	225 to 240	369 to 384	513 to 528	657 to 672	801 to 816	945 to 960	1089 to 1104	1233 to 1248	1377 to 1392	1521 to 1536	1665 to 1680	1809 to 1824	1953 to 1968	2097 to 2112	2241 to 2256
Seventh Input	97 to 112	241 to 256	385 to 400	529 to 544	673 to 688	817 to 832	961 to 976	1105 to 1120	1249 to 1264	1393 to 1408	1537 to 1552	1681 to 1696	1825 to 1840	1969 to 1984	2113 to 2128	2257 to 2272
Eighth Input	113 to 128	257 to 272	401 to 416	545 to 560	689 to 704	833 to 848	977 to 992	1121 to 1136	1265 to 1280	1409 to 1424	1553 to 1568	1697 to 1712	1841 to 1856	1986 to 2001	2129 to 2144	2273 to 2288
Ninth Input	129 to 144	273 to 288	417 to 432	561 to 576	705 to 720	849 to 864	993 to 1008	1137 to 1152	1281 to 1296	1425 to 1440	1569 to 1584	1713 to 1728	1857 to 1872	2001 to 2016	2145 to 2160	2289 to 2304

Non-MDX Mode: KMX-4911 Card Audio Matrix (discrete audio) Input from Fabric Number for each GV Node Frame Slot

Card's that Support Input from GV Node Fabric	GV Node Frame Slot Number															
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Standalone, 'A', or 'B' cards only	1 to 64	145 to 208	289 to 352	433 to 496	577 to 640	721 to 784	865 to 928	1009 to 1072	1153 to 1216	1297 to 1360	1441 to 1504	1585 to 1648	1729 to 1792	1873 to 1936	2017 to 2080	2161 to 2224


Note that in the non-MDX mode, only the first four cards (when equipped) receive discrete audio inputs from the GV Node fabric.

Note: Monitoring audio is embedded in the multiviewer's mosaic video outputs only, either through the GV Node's fabric or through an SFP output(s). The multiviewer does not provide any discrete audio monitoring outputs.

To control the IFM-2T fabric module, use Grass Valley's NV9000 or GV Convergent router control system.

Audio / Video Source Example

For example, a six KMX-4911 card multiviewer is installed in slots 2, 3, 4, 5, 6, and 7 of a GV Node Frame as shown below. We want to know the video matrix input from fabric number and the mosaic return to fabric number for these cards.

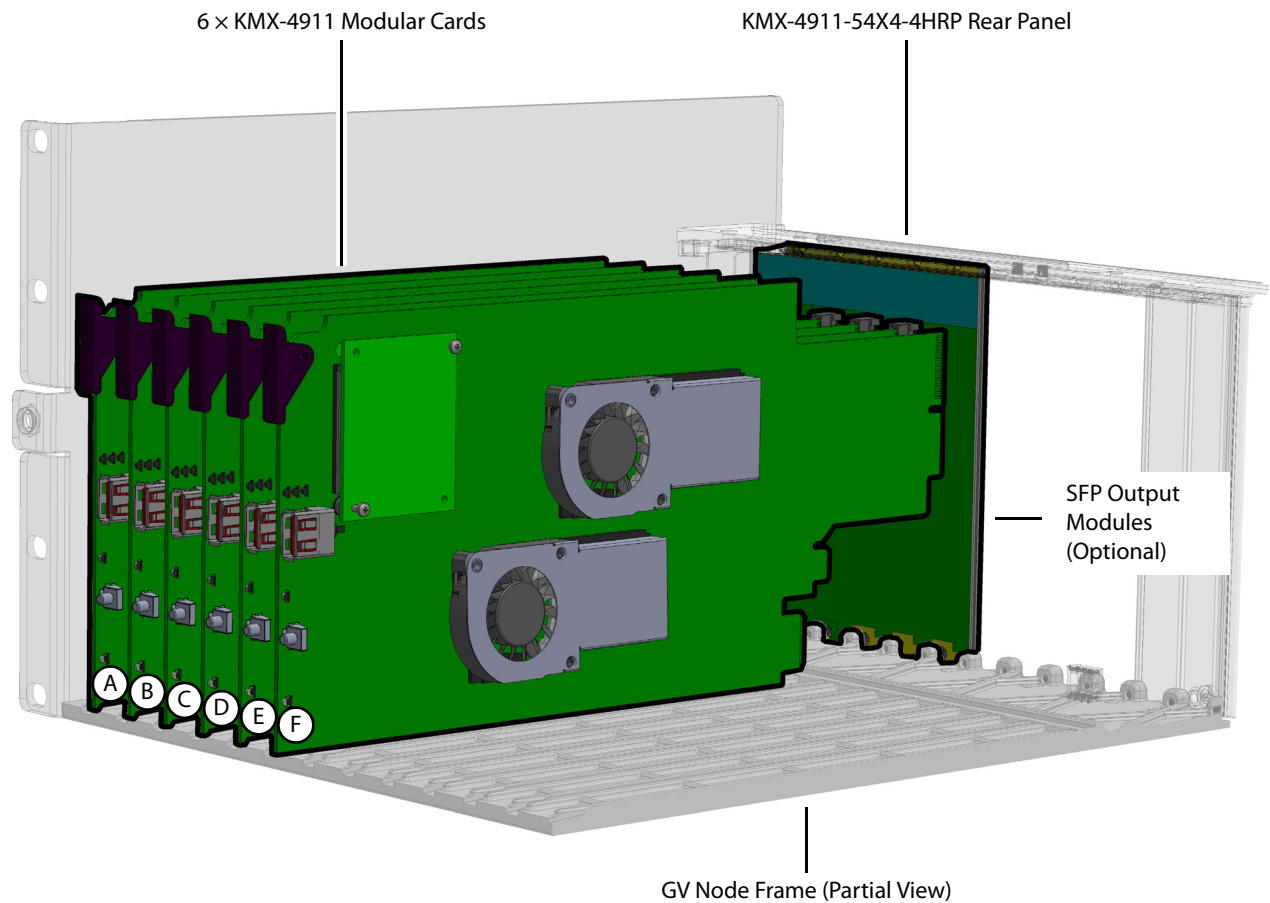

Example of Six KMX-4911 Cards shown Assembled with a KMX-4911-54X4-4HRP Rear Panel located in slots 2, 3, 4, 5, 6, and 7 of a GV Node Frame

For this example, in the above diagram, the cards are identified with letters A, B, C, D, E, and F where A = slot 2, B = slot 3, C = slot 4, D = slot 5, E = slot 6, F = slot 7. Note that:

- Cards C, D, E, and F do not provide mosaic returns to the GV Node fabric.

- Cards E and F do not get discrete audio from GV Node's fabric.

Example Video Matrix Input from Fabric Number / Mosaic Return to Fabric Number for Six KMX-4911 Cards located in slots 2, 3, 4, and 5 of a GV Node Frame with a KMX-4911-54X4-4HRP Rear Panel

Card's Input from GV Node Fabric / Mosaic Return	GV Node Frame Slot Number															
	1	2 Card 'A'	3 Card 'B'	4 Card 'C'	5 Card 'D'	6 ² Card 'E'	7 ² Card 'F'	8	9	10	11	12	13	14	15	16
First Input / Mosaic Return 1	-	10	19	2 ¹	37 ¹	46 ¹	55 ¹	-	-	-	-	-	-	-	-	-
Second Input / Mosaic Return 2	-	11	20	29 ¹	38 ¹	47 ¹	56 ¹	-	-	-	-	-	-	-	-	-
Third Input	-	12	21	30	39	48	57	-	-	-	-	-	-	-	-	-
Fourth Input	-	13	22	31	40	49	58	-	-	-	-	-	-	-	-	-
Fifth Input	-	14	23	32	41	50	59	-	-	-	-	-	-	-	-	-
Sixth Input	-	15	24	33	42	51	60	-	-	-	-	-	-	-	-	-
Seventh Input	-	16	25	34	43	52	61	-	-	-	-	-	-	-	-	-
Eighth Input	-	17	26	35	44	53	62	-	-	-	-	-	-	-	-	-
Ninth Input	-	18	27	36	45	54	63	-	-	-	-	-	-	-	-	-

1 KMX-4911 cards C, D, E, and F do not provide any mosaic return to the GV Node fabric. These cards only receive inputs from GV Node's fabric.

2 KMX-4911 cards E and F do not accept discrete audio from the GV Node fabric.

- The value is not relevant as these card slots are not used by the multiviewer in this example.

As some discrete audio sources need to be monitored, the first four cards have been set to non-MDX mode. Consequently, these two cards will monitor the audio program embedded within the video signals when present. The audio sources coming from the audio matrix will be separately monitored.

Example Non-MDX Mode: KMX-4911 Card Audio Matrix (discrete audio) Input from Fabric Number for each GV Node Frame Slot

Card's Input from GV Node Fabric	GV Node Frame Slot Number															
	1	2 Card 'A'	3 Card 'B'	4 Card 'C'	5 Card 'D'	6 ¹ Card 'E'	7 ¹ Card 'F'	8	9	10	11	12	13	14	15	16
Audio index number range	-	145 to 208	289 to 352	433 to 496	577 to 640	N/A	N/A	-	-	-	-	-	-	-	-	-

1 Not applicable; these KMX-4911 cards do not receive discrete audio inputs from the GV Node fabric.


- The value is not relevant as these card slots are not used by the multiviewer in this example.

3 Multiviewer Cabling

This chapter shows how to interconnect the multiviewer with its associated equipment.

Cabling Diagrams






The following diagram shows a typical cable connections to the GV Node frame and to the multiviewer. To avoid any network IP address conflict, see [Avoiding Networked Equipment IP Address Conflicts](#), on page 43.


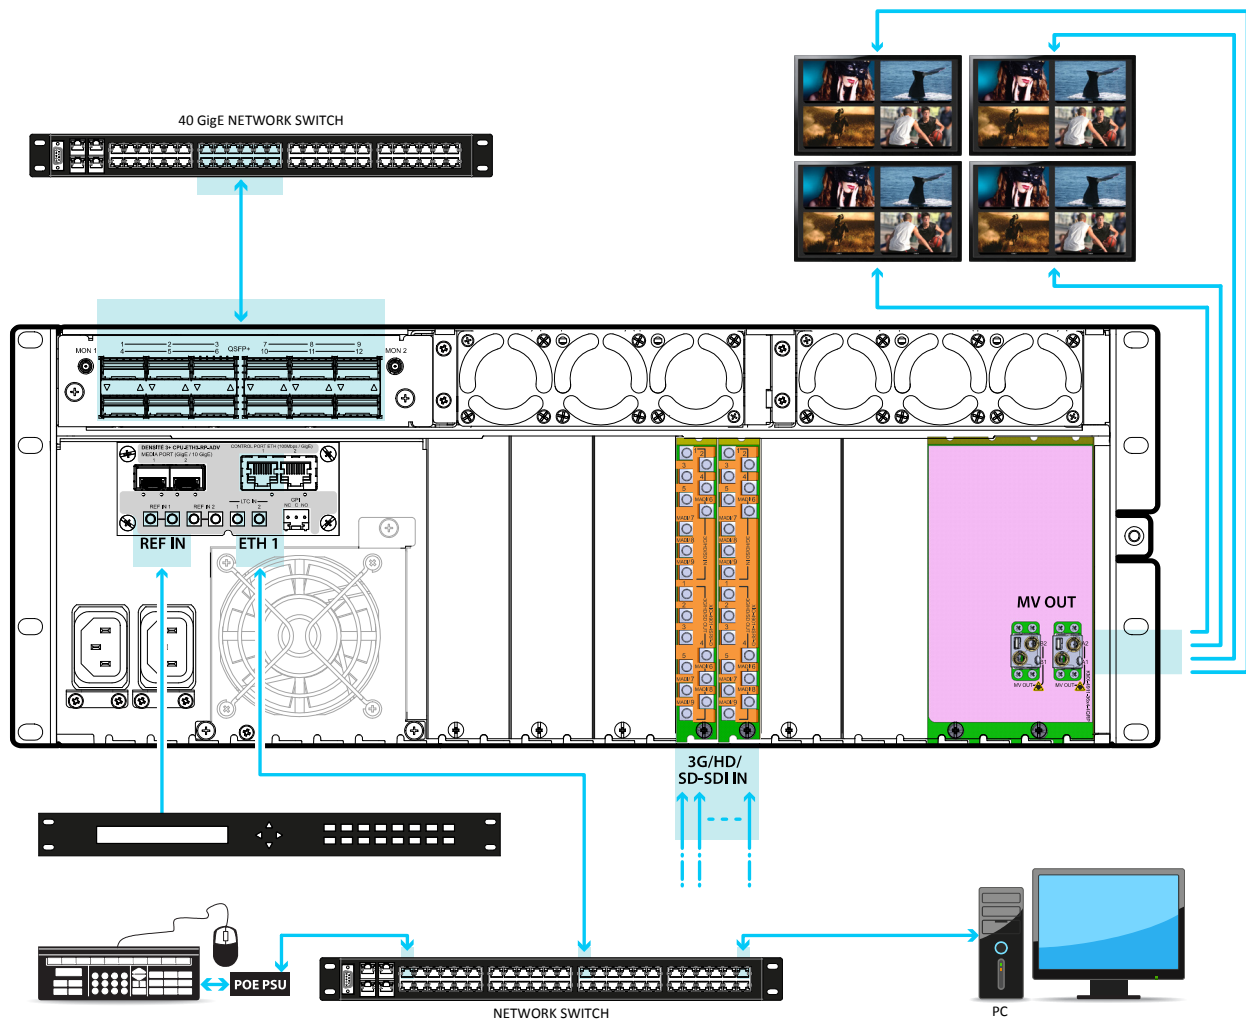


Cabling diagram for a KMX-4911 (typical setup)

Multiviewer SFP Module Mosaic Output to Display Input Cable Connections





Connect displays to the SFP modules according to the following guidelines. Some SFP modules have two outputs and in rare cases, the output allocation for these modules may be reversed from what is shown. Configure the room layout in XEdit. The table below shows the nomenclature used in XEdit and the physical SFP output on the multiviewer's rear panel. Connections crossed-out with a red 'X' are not connected.

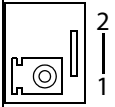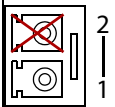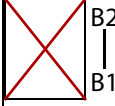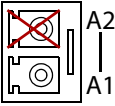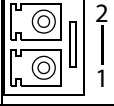Multiviewer Capacity	Rear Panel Connections	KMX-4911 Room Configuration Nomenclature in XEdit
9 × 1	<p>Fiber Connection for a single Tx SFP module.</p>  <p>Fiber Connection for a double SFP output module.</p> 	<p><i>Card - IN/OUT Head 1 (...)</i> = SFP output 1 <i>Card - IN/OUT Head 2 (...)</i> = No Connection</p>
18 × 1 27 × 1 36 × 1 54 × 1	<p>Fiber Connection for a single Tx SFP module.</p>  <p>Fiber Connection for a double SFP output module.</p> 	<p><i>Card A - IN/OUT Head 1 (...)</i> = SFP output A1 <i>Card A - IN/OUT Head 2 (...)</i> = No Connection <i>Card B - IN/OUT Head 1 (...)</i> = No Connection <i>Card B - IN/OUT Head 2 (...)</i> = No Connection</p>
9 × 2	<p>Fiber Connection for a double SFP output module.</p> 	<p><i>Card - IN/OUT Head 1 (...)</i> = SFP output 1 <i>Card - IN/OUT Head 2 (...)</i> = SFP output 2</p>

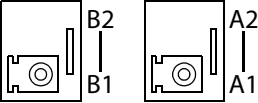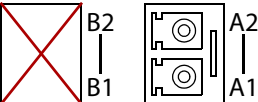
Multiviewer Capacity	Rear Panel Connections	KMX-4911 Room Configuration Nomenclature in XEdit
<p>18 × 2 27 × 2 36 × 2 54 × 2</p>	<p>Fiber Connection for two single Tx SFP modules.</p> 	<p><i>Card A - IN/OUT Head 1 (...)</i> = SFP output A1 <i>Card A - IN/OUT Head 2 (...)</i> = No Connection <i>Card B - IN/OUT Head 1 (...)</i> = SFP output B1 <i>Card B - IN/OUT Head 2 (...)</i> = No Connection</p>
	<p>Fiber Connection for a double SFP output module.</p> 	<p><i>Card A - IN/OUT Head 1 (...)</i> = SFP output A1 <i>Card A - IN/OUT Head 2 (...)</i> = SFP output A2 <i>Card B - IN/OUT Head 1 (...)</i> = No Connection <i>Card B - IN/OUT Head 2 (...)</i> = No Connection</p>

Multiviewer Cabling

Multiviewer SFP Module Mosaic Output to Display Input Cable Connections

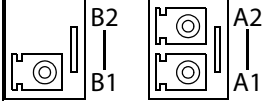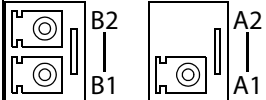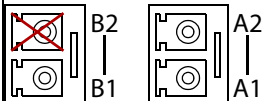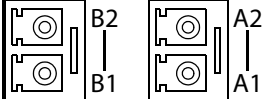
Multiviewer Capacity	Rear Panel Connections	KMX-4911 Room Configuration Nomenclature in XEdit
18 × 3 27 × 3 36 × 3 54 × 3	<p>Fiber Connection for a single Tx SFP module with a double SFP output module.</p> 	<p><i>Card A - IN/OUT Head 1 (...)</i> = SFP output A1</p> <p><i>Card A - IN/OUT Head 2 (...)</i> = SFP output A2</p> <p><i>Card B - IN/OUT Head 1 (...)</i> = SFP output B1</p> <p><i>Card B - IN/OUT Head 2 (...)</i> = No Connection</p>
	<p>Fiber Connection for a single Tx SFP module with a double SFP output module.</p> 	<p><i>Card A - IN/OUT Head 1 (...)</i> = SFP output A1</p> <p><i>Card A - IN/OUT Head 2 (...)</i> = No Connection</p> <p><i>Card B - IN/OUT Head 1 (...)</i> = SFP output B1</p> <p><i>Card B - IN/OUT Head 2 (...)</i> = SFP output B2</p>
	<p>Fiber Connection for two double SFP output modules.</p> 	<p><i>Card A - IN/OUT Head 1 (...)</i> = SFP output A1</p> <p><i>Card A - IN/OUT Head 2 (...)</i> = SFP output A2</p> <p><i>Card B - IN/OUT Head 1 (...)</i> = SFP output B1</p> <p><i>Card B - IN/OUT Head 2 (...)</i> = No Connection</p>
18 × 4 27 × 4 36 × 4 54 × 4	<p>Fiber Connection for two double SFP output modules.</p> 	<p><i>Card A - IN/OUT Head 1 (...)</i> = SFP output A1</p> <p><i>Card A - IN/OUT Head 2 (...)</i> = SFP output A2</p> <p><i>Card B - IN/OUT Head 1 (...)</i> = SFP output B1</p> <p><i>Card B - IN/OUT Head 2 (...)</i> = SFP output B2</p>

Assign a multiviewer display to an SFP output as follows: in the **Rooms** tab of XEdit, drag the multiviewer's card output onto a display. See [XEdit Installation](#), on page 60 and the *Kaleido Software User's Manual* for more information.

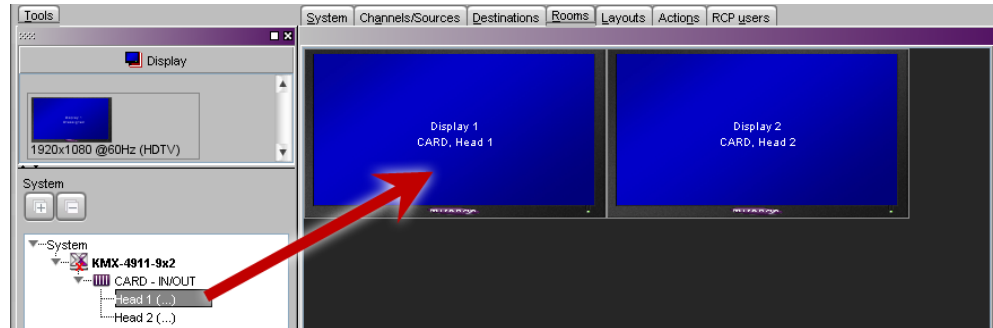


Multiviewer SFP Module Mosaic Output to a 4K Display Input Cable Connections

 
The multiviewer's display can be rotated. The following display orientations are supported.



 Portrait: Display Rotated
90° Counter-Clockwise



Landscape:
Not Rotated

 


Portrait: Display Rotated
90° Clockwise

To support a 4K UHD display, connect the four multiviewer mosaic outputs to an SDI to HDMI 2.0 Converter. The way the SDI to HDMI 2.0 Converter connections are made to the multiviewer will change according to the display's mounting orientation.

Landscape Multiviewer Display Orientation

When the display's orientation is landscape, connect the SDI to HDMI 2.0 Converter as shown below.

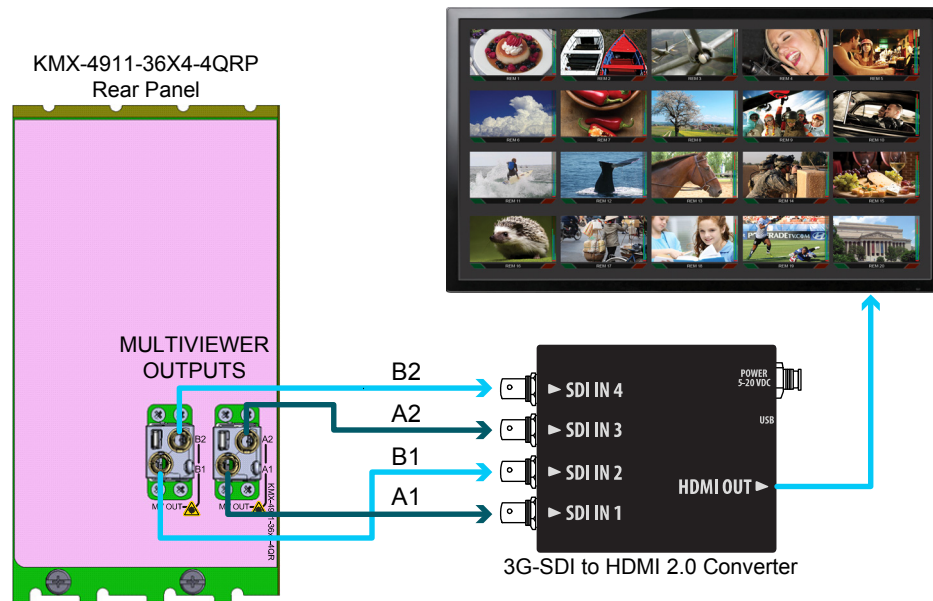

Cabling diagram for a KMX-4911 setup for a mosaic output with a quad-link 3G to HDMI 2.0 converter (partial view)

Portrait Multiviewer Display Orientation

When the display's orientation is portrait, connect the SDI to HDMI 2.0 Converter as above, however the connections between the multiviewer and the SDI to HDMI 2.0 Converter are to be made according to the table below.

Multiviewer Output	Connects to the SDI to HDMI 2.0 Converter Input	
	Display is Mounted 90° Counter-Clockwise	Display is Mounted 90° Clockwise
A1	SDI IN 2	SDI IN 3
A2	SDI IN 1	SDI IN 4
B1	SDI IN 4	SDI IN 1
B2	SDI IN 3	SDI IN 2



Furthermore, the display rotation must be set in the Kaleido Software for this configuration to work. In the **Kaleido Software User's Manual**, see *Creating a 4K UHD Room* and *Changing a Display's Rotation*.

About HDMI-Type Signal Connections

HDMI-type multiviewer outputs are compatible with HDMI cables and display devices with HDMI-compliant inputs. The performance of HDMI cables has been standardized for each generation of supported technology by using a version number. The multiviewer requires the minimum cable version as shown below.

HDMI Video Cable Application	Requires an HDMI Cable Rated as Version
1K HD	1.4 or higher
4K UHD	2.0 or higher

HDMI cable connectors for use with the multiviewer are available in the following formats.

HDMI Connector Designation	Visual Representation
Full size A	
Micro D	

Commissioning the Multiviewer

The multiviewer installation presumes that the GV Node frame is installed, networked, and powered according to the GV Node documentation: *GV Node IP Aggregation, Processing and Edge Routing Platform User Manual*. See [Related Documentation](#), on page 11.

Avoiding Networked Equipment IP Address Conflicts

Networked equipment that use the same IP address (have a network IP address conflict) will not be able to communicate on the network. When the multiviewer and its networked ancillary equipment (for example, a RCP-200) are powered up for the first time, the equipment uses factory default IP addresses to communicate on the network (see [Factory-Default IP Addresses](#), on page 44). This could knock-out other equipment on the network should that equipment currently use the same IP address.

To avoid this situation, proceed as follows.

- 1 Before installing any KMX-4911 cards into the GV Node frame, or power up any ancillary equipment, you will need to first temporarily disconnect this equipment from the network switch:
 - disconnect the *Control Port ETH 1/2* Ethernet cables from the GV node frame.
 - disconnect the Ethernet cables from the Kaleido-RCP2 PoE adapter or RCP-200, when equipped.
- 2 Insert the KMX-4911 cards into the GV Node frame (see [Installation of the KMX-4911 in the GV Node Frame](#), on page 23) and verify that each card is securely seated in its slot. The multiviewer starts up. The startup sequence takes approximately four minutes, during which time every card's status LED is blinking orange.

Multiviewer Cabling

To make the multiviewer operational

Once the startup has completed, the status LEDs on the *output cards* should be green (steady).

Note: For more information on the card's LEDs, see [Card Interface and Troubleshooting](#), on page 46.

- 3 Set a unique IP address for each piece of networked equipment according to [Assigning an IP Address to Each Device in your System](#), on page 51.

To make the multiviewer operational

- 1 Connect the GV Node frame to the network switch. See [Cabling Diagrams](#), on page 37.
- 2 Connect the Kaleido-RCP2 or RCP-200 (if available) to a 100Base-T Ethernet switch (see [Cabling Diagrams](#), on page 37). You can also connect a mouse and a keyboard to your Kaleido-RCP2.

Notes

- You may need to upgrade your Kaleido-RCP2 devices (if available) to the latest firmware. See [Software and Firmware Updates](#), on page 12. Refer to the *Kaleido-RCP2 Guide to Installation and Operation* for instructions on how to determine the firmware level, and how to perform the upgrade for these devices. See [Related Documentation](#), on page 11.
-

- 3 Connect the multiviewer's outputs to your displays. See [Cabling Diagrams](#), on page 37. To change the display resolution, see [Changing the Mosaic Output Resolution](#), on page 49.
You can now proceed with the networking setup (see [Networking Essentials](#), on page 51).

Factory-Default IP Addresses

The KMX-4911 and its networked ancillary equipment is shipped with the following default network settings:

Equipment	System IP address	Network mask	Gateway
KMX-4911 Multiviewer	192.168.3.30	255.255.255.0	0.0.0.0
RCP-200	10.0.3.200	255.255.255.0	0.0.0.0
Kaleido-RCP2 ^a	10.0.3.191	255.255.255.0	0.0.0.0
CPU-ETH3 controller	192.168.3.3	255.255.0.0	0.0.0.0

a. When no network DHCP server is available.

4 Frame Operation and IP Network Setup


This chapter shows the multiviewer interfaces, explains the local operations that can be performed, and it explains how to implement IP network connectivity with the multiviewer.

A KMX-4911 multiviewer system can be controlled in the following ways:

- In the housing frame, the card-edge LEDs can be enabled to allow you to monitor the KMX-4911 card input's operating status (see [Card Interface and Troubleshooting](#), on page 46), or use the CPU-ETH3 local control panel and its buttons to navigate menus and adjust parameter values (see [Using the GV Node Frame Control Panel](#), on page 47).
- The loading and management of layouts is handled through XEdit, accessed through the GV Node's ETH port.
- Grass Valley's iControl system can be used to access the card's operating parameters from a remote computer, using a convenient graphical user interface (see [Remote Control Using iControl](#), on page 90).
- A GPI interface can be used to remotely control layout selection. See *GPI-1501 General Purpose Interface I/O Module* in the Kaleido Software User's Guide. See [Related Documentation](#), on page 11.
- The mosaic output resolution of the card can be controlled automatically through the EDID interface with the display.
- The RCP-200 advanced remote control panel, and the Kaleido-RCP2 control panel allow you to perform operations on the monitor wall, either by themselves or in association with an external keyboard and a mouse. Refer to the RCP-200, Kaleido-RCP2, and Kaleido Software documentation. See [Related Documentation](#), on page 11.
- The KMX-4911 multiviewer can be controlled as a router by router control systems which can trigger actions on this multiviewer. See the *Routers & Kaleido Multiviewer* chapter in the Kaleido Software User's Guide. See [Related Documentation](#), on page 11.

Card Interface and Troubleshooting

The front card edges of the KMX-4911 incorporate several operational elements shown below.

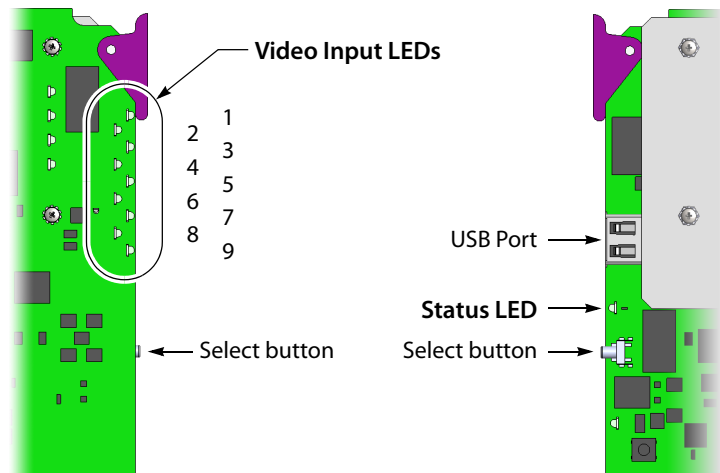

Summary view of the interface of a KMX-4911 card

The status LED shows the card's current operating status. During operation, the cards' Status LED should be green.

Status LED Color	Description
Extinguished	<ul style="list-style-type: none"> No power. Card not fully inserted.
Green	<ul style="list-style-type: none"> Normal operation.
Yellow	<ul style="list-style-type: none"> The meaning of this status is defined through the <i>Alarm config</i> panel. See Alarm Configuration Panel, on page 97.
Orange	<ul style="list-style-type: none"> The meaning of this status is defined through the <i>Alarm config</i> panel. See Alarm Configuration Panel, on page 97.
Flashing orange	<ul style="list-style-type: none"> The card is selected for local control.
Red	<ul style="list-style-type: none"> The meaning of this status is defined through the <i>Alarm config</i> panel. See Alarm Configuration Panel, on page 97.
Flashing red	<ul style="list-style-type: none"> No rear panel. Fan failure. High temperature.

Under normal operation, the Video Input LEDs are silenced. To make the Video Input LEDs operational, press the Select button on the front edge of a KMX-4911 card. Video Input LEDs for the corresponding video inputs that have been assigned a valid video signal should be green.

Video Input LED	Description
Green	<ul style="list-style-type: none"> Normal operation.
Red	<ul style="list-style-type: none"> Input is unconfigured No signal

The select button allows you to access and set basic configuration parameters. The use of the select button is described in [Changing the Mosaic Output Resolution](#), on page 31 and [Networking Setup](#), on page 33.


For more information about the USB port, see [Troubleshooting with the card's front edge USB connector](#), on page 129.

Using the GV Node Frame Control Panel

All of the cards installed in a GV Node frame are connected to the frame's controller card, which handles all interaction between the cards and the outside world. There are no operating controls located on the cards themselves. The controller supports remote operation via its Ethernet ports, and local operation using its integrated control panel.

CPU-ETH3 Local Control Panel

The CPU-ETH3 local control panel is located in the top right side of the GV Node frame. The control interface is a touch screen that allows you to view the status of GV Node frame components including that of each card currently installed in the 16 slots. A number of buttons (PS1, PS2, FANs, CTRL, and REF) allow you to access the menus for the GV Node frame components including its reference module. The outline color of the buttons behave like status indicators. For example, in the image below, the card in slot 13 is in alarm.

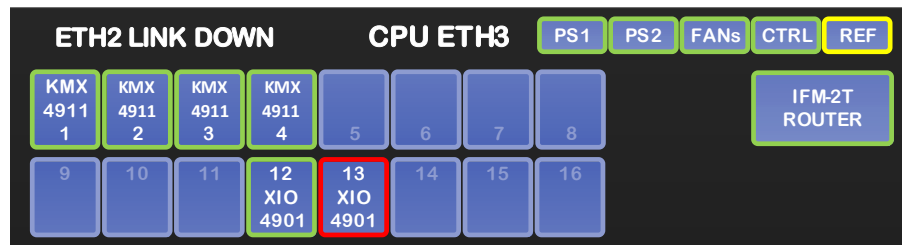

CPU-ETH3 local control panel - Top Menu

Once a card has been selected, four virtual navigation buttons (SEL, ESC, [+], and [-]) allow you to navigate through menus to view and configure the card's parameters.



CPU-ETH3 local control panel

The panel is assigned to operate any card in the frame by pressing the icon representing the appropriate card on the GV Node frame's local control panel touch display. Alternatively, pressing the status button on the front edge of a card will also bring up the menu. The Status LED on the selected card becomes flashing orange.

Touch the CTRL button on the control panel to select the GV Node frame's controller card itself.

Navigating the Local Control Panel Menu

The KMX-4911 has operating parameters which may be adjusted locally at the controller card interface. Press the Select button on the front edge of a KMX-4911 card to assign the local control panel to operate the card.

The local control panel displays a menu that can be navigated using the four buttons located next to the display. The functionality of the buttons is as follows:

[+] and [-] Used for menu navigation and value modification.

SEL Gives access to the next menu level. When a parameter value is shown, touching this button once enables modification of the value using the [+] and [-] buttons; pressing a second time confirms the new value.

ESC Cancels the effect of parameter value changes that have not been confirmed; touching ESC causes the parameter to revert to its former value. Touching ESC moves the user back up to the previous menu level. At the main menu, ESC does not exit the menu system. To exit, press the Select button on the front edge of the card being controlled.

If no controls are operated for 30 seconds, the controller reverts to its normal standby status, and the selected card's Status LED reverts to its normal operating mode. If a parameter was changed on the card but not submitted (SEL was not pressed or touched) and the 30 second timeout occurs, the parameters will be confirmed as if the SEL button had been touched.

Local Control Panel Menu Structure

Where applicable, default values are underlined.

KMX-4911 local menu

STATUS	CARD STATUS	{CARD STATUS}**	OFF
RESOLUTION	HEAD 1	{FORMAT}**	
	HEAD 2	{FORMAT}**	
NETWORK SETTINGS	SYSTEM IP EDIT	{IP ADDRESS}	
	NETMASK EDIT	{mask}	
	DEFAULT GW EDIT	{IP ADDRESS}	
	MAC ADDRESS		
CONFIG	SFP CONFIG***	SFP OUT 1	<u>ON</u> (ABSENT)
			OFF (ABSENT)
		SFP OUT 2	<u>ON</u> (ABSENT)
			OFF (ABSENT)
		SFP OUT 3	<u>ON</u> (ABSENT)
			OFF (ABSENT)

- 10 When you are satisfied with the selected output resolution settings, press the **Select** button *on the front edge of the KMX-4911 card* to exit the control menu.

Notes

- If you do not touch any button on the GV Node frame local control panel, the CPU-ETH3 controller will revert to its normal standby mode, and the selected card's Status LED will revert to its normal operating mode, after 30 seconds.
 - If you changed a parameter from the card's control menu, but have not applied your change (you did not touch the SEL button on the local control panel), once the 30-second timeout has occurred, the parameters will be confirmed as if you had touched the SEL button.
-


Enabling EDID Auto-Detection from the Monitor Wall

Notes


- The monitor EDID auto-detection feature is enabled by default in order to facilitate the initial setup of a Kaleido Software system. Setting an output head to a specific resolution, from a multiviewer service panel in iControl (if available), or from a Densité controller's local control panel disables the EDID auto-detection for this head.
-

To enable EDID auto-detect for a display

- 1 Right-click the monitor wall background, and then click **Display Resolution** on the menu.

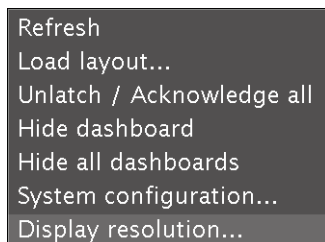

- 2 Select the **Use detected monitor resolution** check box.

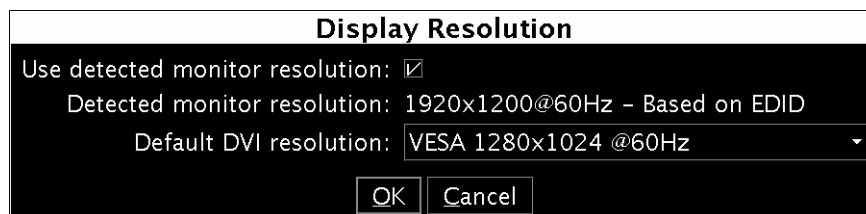

- 3 Click **OK**.

Networking Essentials

The following network prerequisites must be met:

- Any multiviewer you wish to configure or access by using XEdit or XAdmin must be connected to an Ethernet switch.
- A client workstation must be connected to the LAN or Ethernet switch to access the multiviewer by using XAdmin or XEdit.
- The Ethernet switch must support 100 Mbps full-duplex connections.
- The port on the Ethernet switch to which the multiviewer is connected should be configured to auto-negotiate. By default, multiviewers have their Ethernet ports set to auto-negotiate. If a switch does not support auto-negotiation, the recommended settings are 100 Mbps, full-duplex.

Assigning an IP Address to Each Device in your System

Multiviewers and most peripheral devices that are part of a KMX-4911 system communicate through a TCP/IP network. Configuring your system's network parameters includes the following:

- Assigning an IP address, and specifying the appropriate network mask, gateway address, and a system name for each multiviewer. Refer to [Setting the Multiviewer's IP addresses](#), on page 51.
- Configuring the RCP-200, if available. Refer to [Configuring the RCP-200](#), on page 103.
- Configuring the Kaleido-RCP2, if available. Refer to [Configuring the Kaleido-RCP2](#), on page 106.

Setting the Multiviewer's IP addresses

For the KMX-4911 multiviewer to join a TCP/IP network, it must be configured with a system IP address, a network mask, a gateway, and a system name. You may also need to configure networking parameters for the CPU-ETH3 frame controllers (if your housing frames were not already in operation), any new Kaleido-RCP2 unit you ordered, and a client PC to communicate with the multiviewer and its peripheral devices (see [XEdit Installation](#), on page 60).

Note: If the system IP address of the multiviewer has been changed (i.e. it no longer corresponds to the as-shipped configuration), it is still possible to determine the current setting; see [Finding the Multiviewer's IP Address and Application Version](#), on page 116.

Network Switch Considerations

The GV Node's **Control Port** Ethernet connection can present to the connected network switch more than one MAC address as GV Node has an internal switch that aggregates multiple network interfaces for the frame itself and that of certain cards or systems installed in the frame such as any KMX-4911 multiviewer system. Each KMX-4911 multiviewer system (as defined by each installed KMX-4911 rear panel) has its own MAC address.

By default, many network switches support only one MAC address to be connected to an individual switch's network port. This is done for security reasons to prevent people from extending the reach of the network by connecting unauthorized equipment to the network.

In cases where a GV Node frame is connected to a network switch with such security enabled, network connectivity to all GV Node frame components will be impossible. With administrative access to the switch, the solution is to increase the switch's setting for the number of MAC addresses it will support on the port used for the GV Node frame to a number that reflects the current number of network interfaces used within GV Node. If the required number of network interfaces is undetermined, set the switch to allow 17 network interfaces for the GV Node as this is the maximum number of network interfaces a GV Node frame can support. Refer to the switch's administrator's guide for the appropriate configuration instructions.

For example, for a Cisco brand switch, use the following administrative command to increase the number of supported IP interfaces on a port to 17.

```
Switch(config-if)# switchport port-security maximum 17
```

Changing the Multiviewer's IP Address

Note: The multiviewer's IP address can also be remotely set through a the KMX-4911's iControl service panel. See [Network Settings Panel](#), on page 94.

To change the IP address of a KMX-4911 multiviewer using the local control panel

- 1 Press the icon representing the appropriate card on the GV Node frame's local control panel touch display.

Note: You can configure a KMX-4911 system's network settings from card A or B in a multi-card system. These settings are automatically replicated to all other cards.

The Status LED on the selected card flashes orange, and the associated control menu appears on the display of the GV Node frame's local control panel.

Note: You can navigate the menu by using the four virtual buttons on the touch display:

- Touch the [+] and [-] buttons, to navigate between menu options or between parameter values.
 - Touch SEL to access the next menu level. When a parameter value is shown on the display, modify the value by using the [+] and [-] buttons, and then touch SEL to apply the new value.
 - Touch ESC to go back to the previous menu level.
 - Once you have completed your changes, press the Select button *on the front edge of the KMX-4911 card* to exit the control menu.
-

- 2 On the local control panel, touch the [-] button repeatedly until NETWORK SETTINGS appears on the display, and then touch the SEL button.

SYSTEM IP EDIT appears on the control panel's display.

- 3 Touch the SEL button again.

The current IP address appears on the display.

- Touch the [+] and [-] buttons, to change the current value at the current input position.
- Touch SEL to move one position to the right.
- Touch ESC to move one position to the left.

Note: Touching ESC when the input focus is in the first position returns to the previous menu level.

- 4 When the display shows the correct IP address, touch SEL to apply your change.
- 5 Touch ESC to return to the previous menu level.
SYSTEM IP EDIT appears on the control panel's display.
- 6 Touch the [-] button.
NETMASK EDIT appears on the control panel's display.
- 7 Repeat [step 3](#) to [step 5](#) to configure the netmask.
- 8 Once you have set the network mask and navigated back to the previous menu level, touch the [-] button again.
DEFAULT GW EDIT appears on the control panel's display.
- 9 Repeat [step 3](#) to [step 5](#) to configure the gateway.
- 10 Once you have set the gateway, press the Select button on the front edge of the KMX-4911 card to exit the control menu.

Notes

- If you do not touch any button on the GV Node frame local control panel, the CPU-ETH3 controller will revert to its normal standby mode, and the selected card's Status LED will revert to its normal operating mode, after 30 seconds.

Notes (continued)

- If you changed a parameter from the card's control menu, but have not applied your change (you did not touch the SEL button on the local control panel), once the 30-second timeout has occurred, the parameters will be confirmed as if you had touched the SEL button.
-

The card restarts. The startup sequence takes approximately two minutes, during which time the Status LED is flashing orange. Once the startup has completed, the Status LED should be green.

- 11 Check the card's Status LED, and make sure that it does not indicate an error condition. See [Card Interface and Troubleshooting](#), on page 46.
- 12 Verify that the new IP address is effective, by referring to [Finding the Multiviewer's IP Address and Application Version](#), on page 116. Perform this verification for all the cards that are connected to your system's rear module.

Network Considerations

TCP/UDP Port Usage

The various KMX-4911 communication protocols require access to specific ports. In networks where a firewall is present between device A and device B, the ports used to communicate **from** device A **to** device B must be open on the incoming (external) side of the firewall.

Note: All necessary ports are open by default on the multiviewer. There is no mechanism provided for changing the default settings.

From client to multiviewer

The following ports must be open on the Client (i.e., the workstation running XEdit):

Port	Used for	Transport	Notes
443	HTTPS	TCP	Used by XAdmin for secure access
7	HTTP	TCP	Used by XEdit for ping probing
80		TCP	Used by XEdit and XAdmin
5122		TCP	Used by XEdit for <i>keepalive</i> (heartbeat)
5432		TCP	Used by XEdit for export operations
7600		TCP	Used for troubleshooting the REST API (remote control)
13000		TCP	Online connection
13100		TCP	Used for calibration data from XEdit
5120		RCP2	TCP
10000	TCP		For Kaleido-RCP2 protocol
10001	TCP		For Kaleido-RCP2 protocol

Port	Used for	Transport	Notes
5120		UDP	On multicast 230.8.8.9 for Kaleido-RCP2 protocol
5121		UDP	For Kaleido-RCP2 protocol

From multiviewer to client

Port	User for	Transport	Notes
1024–5000 ^a 49152-65535 ^b	Java RMI	TCP	Remote Method Invocation (client/server communication). Dynamic Allocation of ports. Required for communication between client and Application Server.

a. For Windows XP and earlier

b. For Windows 7 and later

From multiviewer to multiviewer

The following ports, used for inter-frame communications, are open by default on all Kaleido Software systems:

Port	Used for	Transport	Notes
22	SSH	TCP	Secure Shell Login is required to login to a multiviewer for maintenance.
4160	Java Jini	TCP	Responsible for discovery and communications between devices/services on a network.
8080	HTTP	TCP	
8082		TCP	Internal communication
8083		TCP	Internal communication
8084		TCP	Internal communication
8085		TCP	Internal communication
8086		TCP	Internal communication
8087		TCP	Used for debugging purposes
8090		TCP	Web service
32769		TCP	filenet-rpc
5120		UDP	On multicast 230.8.8.9 for Kaleido-RCP2
7572		UDP	On multicast 230.8.8.8 for "keep-alive" (heartbeat)
7571	UDP	For "keep-alive" (heartbeat)	

From iControl to multiviewer

Port	Used for	Transport	Notes
4160	Java Jini	TCP	Responsible for discovery and communications between devices/services on a network.
32768–65535	Java RMI	TCP	Remote Method Invocation (client/server communication). Dynamic Allocation of ports. Required for communication between client and Application Server. This range can be restricted to match specific security requirements. A minimum of 4000 ports should be allocated.

Between multiviewer and remote control panel

The following ports, used for communications to/from RCP-200 and Kaleido-RCP2 control panels, are open by default on all Kaleido Software systems:

Port	Used for	Transport	Notes
5120	RCP2	TCP	Used to listen for Kaleido Multiviewer discovery packets
10000		TCP	For Kaleido-RCP2 protocol
10001		TCP	For Kaleido-RCP2 protocol
5120		UDP	On multicast 230.8.8.9 for Kaleido-RCP2 protocol
5121		UDP	For Kaleido-RCP2 protocol
80	HTTP	TCP	Used by the RCP-200 to obtain information from the multiviewer's system database
13000		TCP	Used by the RCP-200 to control the multiviewer via the gateway

From multiviewer to peripheral devices

Port	Used for	Transport	Notes
25	SMTP	TCP	Simple Mail Transfer Protocol, for e-mail alerts.
8851	Alpermann+Velte	TCP	Used to obtain information from Plura (Alpermann+Velte) Studio Production Timer (SPT) systems.
5100	GPI-1501	TCP	Used to obtain information from GPI-1501 General Purpose Interface I/O modules. ^a
8910 ^b	TSL (network)	TCP	Used to obtain information from TSL devices that use the TSL UMD version 5.0 protocol.

a. See also: [From multiviewer to multiviewer](#), on page 55.

b. Configurable.

From peripheral devices to multiviewer

The following ports must be open on peripheral devices (e.g., router controllers):

Port	Transport	Notes
2000	TCP	Used to control the multiviewer's internal router via the SAM (Snell/Pro-Bel) SW-P-02 protocol
4381	TCP	Used to control the multiviewer's internal router via the Nevion (Network) protocol
5194	TCP	Used to control the multiviewer's internal router via the NVEP Router (NP0016) protocol.
14000	TCP	Used to control the multiviewer's internal router via the SAM (Snell/Pro-Bel) SW-P-08 protocol

Router drivers also use default ports:

Port	Driver	Transport	Notes
4000	ETL	TCP	
12345	GVG 7000 Native	TCP	
9193	NVEP NV9000 (NP0017)	TCP	
4381	VikinX Modular	TCP	
9100	Quintech	TCP	
12345	Sony HKSPC	TCP	GVGNP Emulator
5001	Utah RCP-3	TCP	SC-4 Ethernet
2000	SAM (Snell/Pro-Bel) SW-P-02	TCP	
14000	SAM (Snell/Pro-Bel) SW-P-08	TCP	

Note: This is configurable in XEdit—you can choose any UDP or TCP/IP port to use for communications between the multiviewer and an external router.

Between multiviewer and SNMP managers

Port	Used for	Transport	Notes
161	SNMP	UDP	Used for SNMP (Simple Network Management Protocol) communications between external SNMP managers and a multiviewer (e.g., sending get, get-next, and set messages to a multiviewer's SNMP agent, and receiving the response).
1161		UDP	Used for SNMP (Simple Network Management Protocol) communications between external SNMP managers and a <i>Kaleido-IP</i> multiviewer (e.g., sending get, get-next, and set messages to a multiviewer's SNMP agent, and receiving the response).

Between multiviewer and NTP server

The following ports, used for communications to/from Network Time Protocol servers, are open by default on all Kaleido Multiviewer systems:

Port	Used for	Transport	Notes
123	NTP	TCP	Used for Network Time Protocol synchronization. Port needs to be open in both directions.

Network Considerations for a Multiviewer Cluster

IMPORTANT

Before changing the system name or IP address of a multiviewer associated with a cluster, review the following.

- If you change the system name or IP address of a cluster member while another cluster member is offline or otherwise unavailable, the cluster's integrity will be broken. If you attempt to make such a change, XEdit will alert you of the situation, prompting you to cancel the operation and try again later, when all cluster members are available. However, in the advent that such a change was made by mistake, or that it as been forced for some reason, you will have to repair the broken cluster (see "Repairing a Cluster System" in the Kaleido Software User's Manual).
- To maintain the integrity of a cluster configuration, such changes must be made by using the system configuration features available in XAdmin.

5 System Configuration

This chapter shows how to configure the multiviewer.

System Requirements for a Client PC

A client PC or laptop meeting the following requirements is required to access the XAdmin Web client, and the other Kaleido Software client applications.

Operating system	Microsoft Windows 10, Windows 8.1, Windows 8, or Windows 7.
Processor	The minimum required by the operating system or better.
Memory	The minimum required by the operating system plus 2 GB or more.
Disk space	The minimum required by the operating system plus 2 GB or more.

Multiviewer Model Representation in XEdit and XAdmin

The name used to represent a multiviewer model is shown in the table below.

In XEdit or XAdmin Select	To represent
KMX-4911-9x2	A KMX-4911 9 × 2 or 9 × 1 system
KMX-4911-18x4	A KMX-4911 18 × 4, 18 × 3, 18 × 2, or 18 × 1 system
KMX-4911-27x4	A KMX-4911 27 × 4, 27 × 3, 27 × 2, or 27 × 1 system
KMX-4911-36x4	A KMX-4911 36 × 4, 36 × 3, 36 × 2, or 36 × 1 system
KMX-4911-54x4	A KMX-4911 54 × 4, 54 × 3, 54 × 2, or 54 × 1 system

XEdit Installation

Installing the Kaleido Software Client Applications

In addition to the XAdmin Web client, which does not require installation, the Kaleido Software includes the following client applications:


- XEdit is a client application used to create layouts for the monitor wall, and to configure your multiviewer system, from your PC. When this PC has network connectivity to the multiviewer, you can use XEdit to modify layouts and settings directly on the multiviewer, or you can work locally on the computer and then export your changes to the multiviewer.
- If you have only one multiviewer (or if you have more than one but you intend to always have the same Kaleido Software version on all of them), download the XEdit installer file from the multiviewer's home page. Whenever you install a new version of the Kaleido Software on the multiviewer, the next time you open XEdit, your copy of the application will be automatically updated from the multiviewer. See [Installing XEdit from your Multiviewer's Home Page](#) on page 60.
- The Router Control Software Single Bus and Matrix View applications (also part of the iRouter Router Control Software packaged with iControl Application Servers) can be used to control your multiviewer's logical sources and monitor wall destinations, via the *KX Router* logical router, or to control other logical routers configured within your multiviewer system. See [Installing Router Control](#) on page 65.
- Signal Path Viewer opens as a standalone panel, updated in real time, showing assignment information between router sources and multiviewer inputs. Signal Path Viewer is not used with Kaleido-IP. See [Installing Signal Path Viewer](#) on page 68.

Installing XEdit from your Multiviewer's Home Page

To install XEdit from your multiviewer's home page

- 1 With your PC, open a Web browser window and type the multiviewer's IP address in the address bar.

The multiviewer's home page appears.

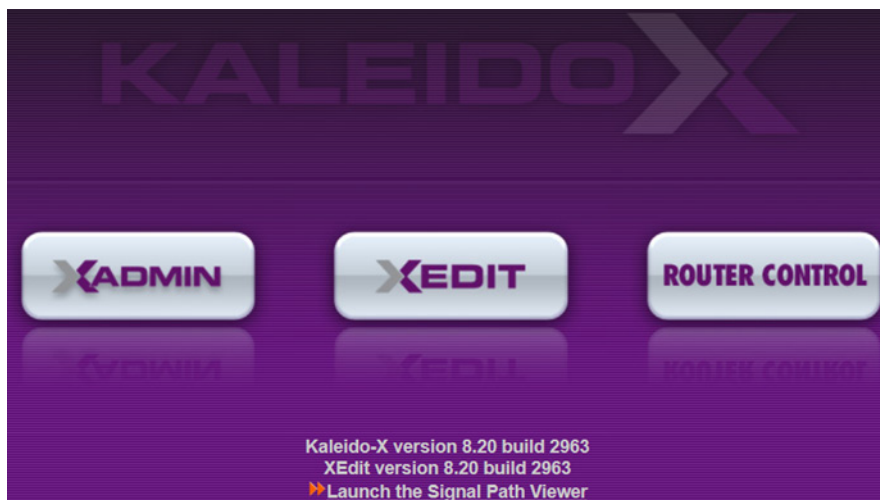

2 Click the **XEdit** button.

The browser prompts you to save an executable file to your hard drive (Kaleido-windows32-online.exe¹). This file is an online installer, which will download XEdit and other companion elements from your multiviewer, and install them. Some browsers may allow you to run the file directly. Depending on your browser's security features, warnings may appear, which you may safely dismiss.

3 Unless your browser let you run the file (and you chose to do so), navigate to the location were you saved the installer file and open it.


More security warnings or prompts may appear, which you may safely dismiss or accept.

A window appears, showing the download and installation progress.




At the end of the installation process:

- If you have Windows 7, or Windows 10, shortcuts (XEDIT) are added to your desktop and to the Start menu (under **All Programs**).

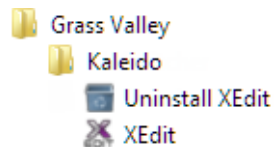

- If you have Windows 8.1, or Windows 8, XEdit will appear on your desktop, in the Apps view with all the other applications on your PC (Windows 8.1), or in your Start screen (Windows 8).

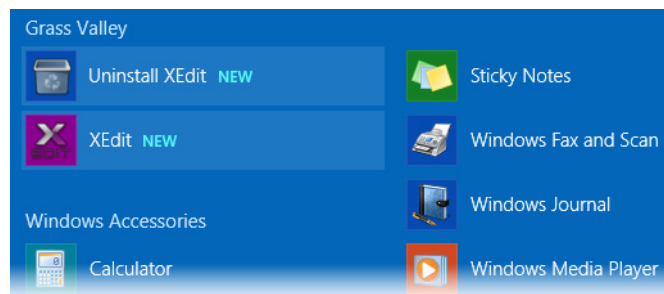

1. Installers for Linux or Mac OS X are not yet available.


Once the installation has completed, the XEdit startup screen appears.



Depending on your Windows Firewall settings, a security alert may appear.


- Click **Allow access** to unblock the application.

If XEdit cannot find all of the fonts it needs already on your PC or laptop, it downloads them from the multiviewer automatically, in which case a message will appear to confirm the font update, and instruct you to restart the application.

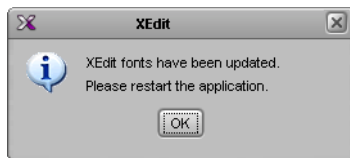



- Click **OK** to continue, and then open XEdit again, by using the shortcut on your desktop, in your Apps view (Windows 8.1) or Start screen (Windows 8), or from the Start menu (Windows 7, Windows 10).

- 4 When prompted to specify a database, choose one from the **Path** list, or click **Browse** to navigate to the database you wish to use as your local workspace, and then click **OK**.

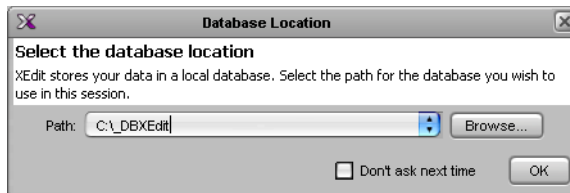

Once the database has completed loading, XEdit's main application window appears.

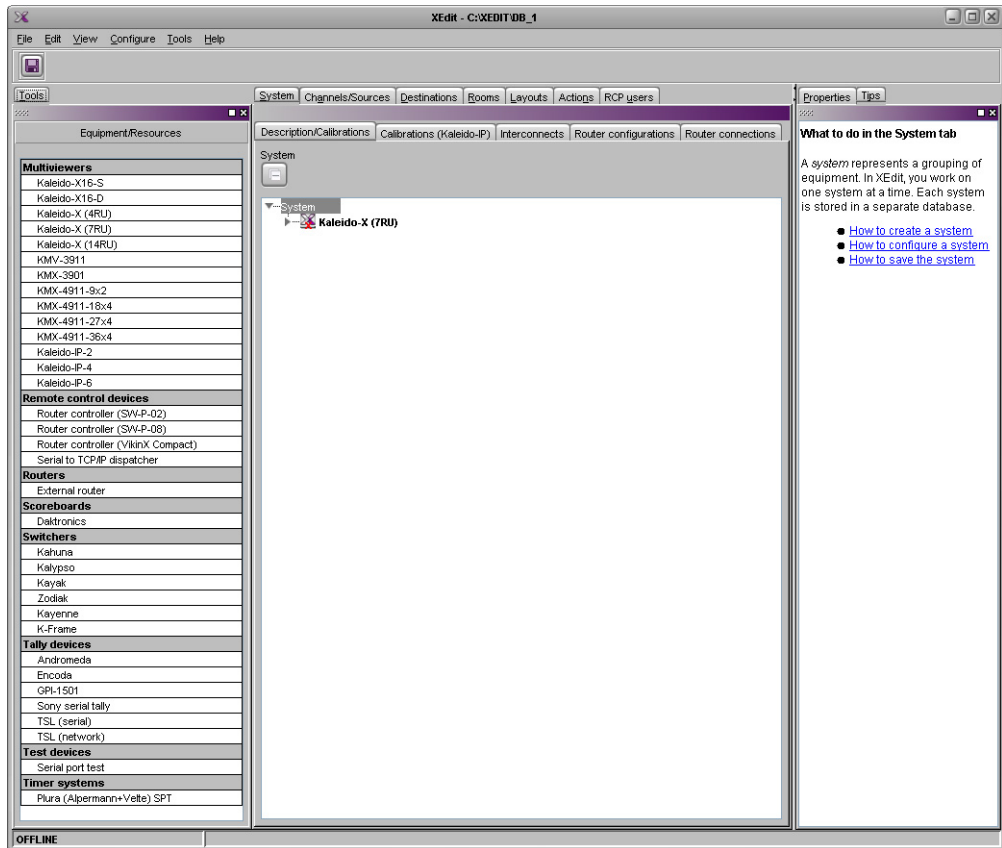

Note: Once it has been installed from the multiviewer, XEdit remains on your PC or laptop, and can be launched from the  shortcut that was added to your desktop, Apps view, or Start screen (see [page 61](#)), or from the Start menu. Whenever you install a new version of the Kaleido Software on the multiviewer, the next time you open XEdit, your installed copy of the application will be automatically updated from the multiviewer.

For more information about calibrating your system, configuring rooms, creating layouts, and operating the monitor wall, refer to the *Kaleido Software User's Manual*. See [Related Documentation](#), on page 11.

Uninstalling XEdit


With recent versions of XEdit, an uninstall program is available from the Windows Start menu. If you installed XEdit from your multiviewer's home page, see [Uninstalling XEdit \(Dynamic Version 7.20 or Later\)](#), on page 64.

If you have been using XEdit versions *earlier* than 7.20 you may want to uninstall them, by clearing the Java cache, on your PC or laptop. See [Uninstalling XEdit \(Version 7.11 or Earlier\)](#) on page 65.

Uninstalling XEdit (Dynamic Version 7.20 or Later)

To uninstall XEdit (dynamic version 7.20 or later)

- 1 Close all XEdit windows you may have open.
- 2 Locate the **Uninstall XEdit** shortcut.
 - If you have Windows 7, or Windows 10: Open the Start menu, click **All Programs**, scroll to the **Grass Valley** (or **Miranda Technologies²**) folder, and then expand the **Kaleido** folder.

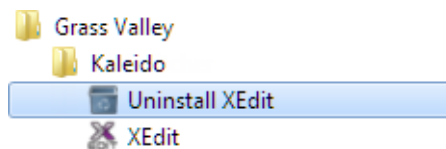

- If you have Windows 8.1, or Windows 8: Switch to the App view or your Start screen.
- 3 Click **Uninstall XEdit**.

An uninstall screen appears.



- 4 Click **Uninstall**.

This removes XEdit, including all shortcuts, launchers, and other elements that were installed with it, from your system.

2.Launcher icons for versions 7.20–7.52 would have been installed in the Miranda Technologies folder.

Uninstalling XEdit (Version 7.11 or Earlier)

To uninstall XEdit (version 7.11 or earlier)

- 1 Close all Java applications you may have open.
- 2 On the Start menu, click **Control Panels**, and then click **Java (32-bit)**.
Java Control Panel opens.
- 3 In the **General** tab, click **Settings**.
- 4 In **Temporary Files Settings**, click **Delete Files**.
- 5 In **Delete Files and Applications** select all the check boxes, and then click **OK**.
- 6 Close **Temporary Files Settings**, and then **Java Control Panel**, by clicking their **OK** button.

Installing Router Control


To install Router Control from your multiviewer's home page


- 1 From a workstation on the same subnet as the multiviewer, open a Web browser window and type the multiviewer's IP address in the address bar.
The multiviewer's home page appears.
- 2 Click the **Router Control** button.
The browser prompts you to save an executable file to your hard drive (Kaleido__RouterControl-windows32-online.exe³). This file is an online installer, which will download Router Control and other companion elements from your multiviewer, and install them. Some browsers may allow you to run the file directly. Depending on your browser's security features, warnings may appear, which you may safely dismiss.
- 3 Unless your browser let you run the file (and you chose to do so), navigate to the location were you saved the installer file and open it.
More security warnings or prompts may appear, which you may safely dismiss or accept.
A window appears, showing the download and installation progress.



At the end of the installation process:


3. Installers for Linux or Mac OS X are not available.

- If you have Windows 7, or Windows 10, shortcuts () are added to your desktop and to the Start menu (under **All Programs**).

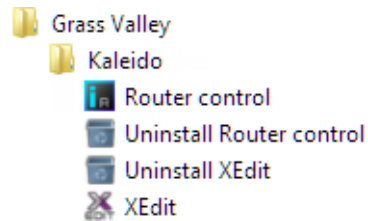


- If you have Windows 8.1, or Windows 8, Router Control will appear on your desktop, in the Apps view with all other installed applications on your PC (Windows 8.1), or in your Start screen (Windows 8).

Once the installation has completed, the Router Control main application window appears. The application automatically connects to your multiviewer. The main window lists all logical routers configured within your multiviewer system, in addition to the *KX Router* logical router.

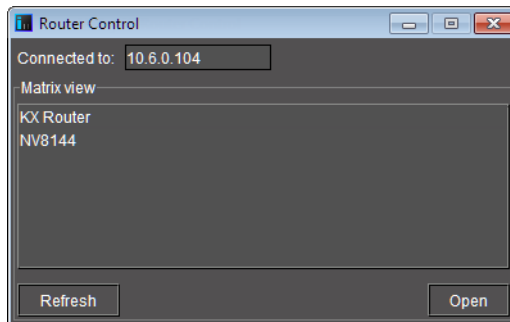


- 4 In **Router Control**, click the router you want to control, and then click **Open**. Depending on your Windows Firewall settings, a security alert may appear.
 - Click **Allow access** to unblock the application.

The Matrix View application window opens.

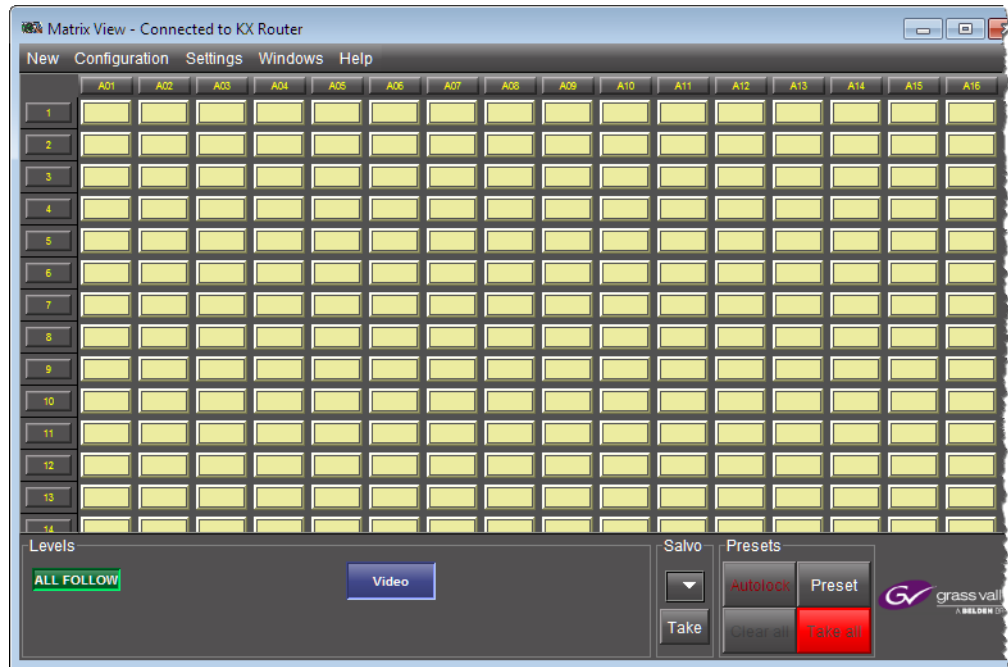

On the **Help** menu, click **Help** to access the online documentation, or refer to the *iControl Router User Guide*. See [Related Documentation](#), on page 11.


Notes

- Once it has been installed from the multiviewer, Router Control remains on your PC or laptop, and can be launched from the  shortcut that was added to your desktop, Apps view, Start screen (see [page 65](#)), or from the Start menu. Whenever you install a new version of the Kaleido Software on the multiviewer, the next time you open Router Control, your installed copy of the application will be automatically updated from the multiviewer.
- Router Control can also connect to other Kaleido multiviewers or iControl Application Servers, and control their routers.
- Routers configured within a Kaleido multiviewer system are compatible with the Router Control modules packaged with iControl Application Servers version 6.10 and later.
- When Router Control is connected to an Application Server, a router manager configuration application is available from the main application window. When Router Control is connected to a Kaleido multiviewer, this router manager configuration application is not available (router configuration is performed with XEdit, in this case).


Uninstalling Router Control

To uninstall Router Control

- 1 Close all Router Control windows you may have open.
- 2 Locate the **Uninstall Router Control** shortcut.
 - If you have Windows 7, or Windows 10: Open the Start menu, click All Programs, scroll to the Grass Valley folder, and then expand the Kaleido folder.

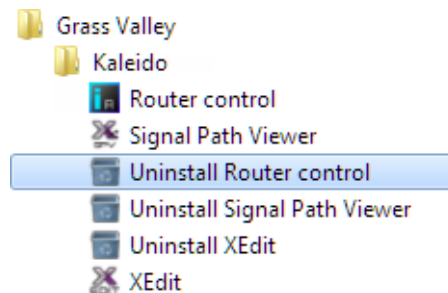

- If you have Windows 8.1, or Windows 8: Switch to the App view or your Start screen.
- 3 Click **Uninstall Router Control**.
An uninstall screen appears.

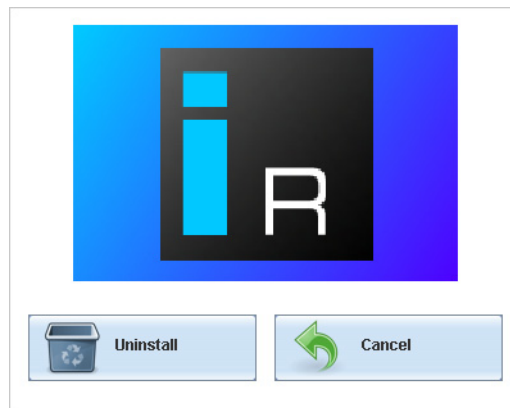

- 4 Click **Uninstall**.
This removes Router Control, including all shortcuts, and other elements that were installed with it, from your system.

Installing Signal Path Viewer

To install Signal Path Viewer from your multiviewer's home page

- 1 From a workstation on the same subnet as the multiviewer, open a Web browser window and type the multiviewer's IP address in the address bar.
The multiviewer's home page appears.
- 2 Click **Launch the Signal Path Viewer**.
The browser prompts you to save an executable file to your hard drive (Kaleido__SignalPathViewer-windows32-online.exe⁴). This file is an online installer, which will download Signal Path Viewer from your multiviewer, and install it.

Some browsers may allow you to run the file directly. Depending on your browser's security features, warnings may appear, which you may safely dismiss.


- 3 Unless your browser let you run the file (and you chose to do so), navigate to the location were you saved the installer file and open it.


More security warnings or prompts may appear, which you may safely dismiss or accept.

A window appears, showing the download and installation progress.



At the end of the installation process:

- If you have Windows 7, or Windows 10, shortcuts () are added to your desktop and to the Start menu (under **All Programs**).

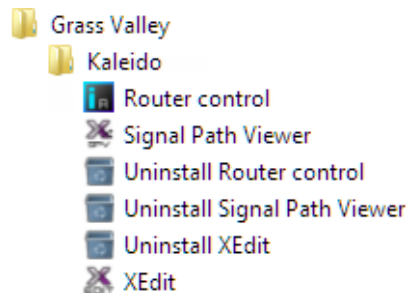

- If you have Windows 8.1, or Windows 8, Signal Path Viewer will appear on your desktop, in the Apps view with all the other installed applications on your PC (Windows 8.1), or in your Start screen (Windows 8).

Once the installation has completed, the Signal Path Viewer panel appears. Depending on your Windows Firewall settings, a security alert may also appear.

- Click **Allow access** to unblock the application.

4. Installers for Linux or Mac OS X are not available.

The application automatically connects to your multiviewer.

KX Input	RT Name	RT Level	RT Dest	RT Src	Tie Line Status	CP Confirmed	RT Ready	KXI Card Prese
Frame A / INPUT A / Video 01	NV8144	0	[1] MGFA01	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 02	NV8144	0	[2] MGFA02	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 03	NV8144	0	[3] MGFA03	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 04	NV8144	0	[4] MGFA04	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 05	NV8144	0	[5] MGFA05	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 06	NV8144	0	[6] MGFA06	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 07	NV8144	0	[7] MGFA07	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 08	NV8144	0	[8] MGFA08	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 09	NV8144	0	[9] MGFA09	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 10	NV8144	0	[10] MGFA10	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 11	NV8144	0	[11] MGFA11	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 12	NV8144	0	[12] MGFA12	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 13	NV8144	0	[13] MGFA13	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 14	NV8144	0	[14] MGFA14	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 15	NV8144	0	[15] MGFA15	[14] BAR525	Free	false	true	true
Frame A / INPUT A / Video 16	NV8144	0	[16] MGFA16	[14] BAR525	Free	false	true	true

System address: 10.5.5.200 | Connection status: **Connected** | Last update: Nov 28, 2014 4:54:53 PM


Notes

- Once it has been installed from the multiviewer, Signal Path Viewer remains on your PC or laptop, and can be launched from the shortcut that was added to your desktop, Apps view, Start screen (see [page 69](#)), or from the Start menu. Whenever you install a new version of the Kaleido Software on the multiviewer, the next time you open Signal Path Viewer, your installed copy of the application will be automatically updated from the multiviewer.
- Should you need Signal Path Viewer to connect to a different multiviewer, then you must install it again, from the other multiviewer's home page.
- If you remove or re-install input/output card A, or input/output card B, Signal Path Viewer may stop displaying real-time updates, in which case close the application and then open it again.

Uninstalling Signal Path Viewer

To uninstall Signal Path Viewer


- 1 Close all Signal Path Viewer windows you may have open.
- 2 Locate the **Uninstall Signal Path Viewer** shortcut.
 - If you have Windows 7, or Windows 10: Open the Start menu, click All Programs, scroll to the Grass Valley folder, and then expand the Kaleido folder.

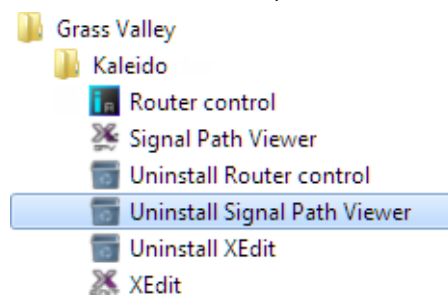

- If you have Windows 8.1, or Windows 8: Switch to the App view or your Start screen.

3 Click **Uninstall Signal Path Viewer**.

An uninstall screen appears.

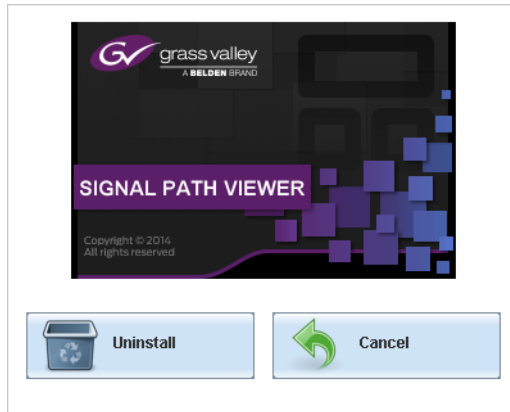

4 Click **Uninstall**.

This removes Signal Path Viewer, including all shortcuts, and other elements that were installed with it, from your system.

Opening XAdmin


Connecting to a Multiviewer with a Different XEdit Version from your PC's Version

When connecting to a multiviewer with your PC and your PC already has XEdit installed, the XEdit version installed on your PC and the Kaleido Software version on the multiviewer must be same as explained below.

The composition of a Kaleido Software / XEdit version numbering is explained in the following table.

Kaleido Software / XEdit Version Reference	Description
Version <i>M.mp</i>	M is the major revision number m is the minor revision number p is the patch revision number

When you connect to a multiviewer, the multiviewer's Kaleido Software major and minor version must match the XEdit major and minor version installed on your PC. When there is a version number mismatch between the multiviewer's Kaleido Software version and your PC's XEdit version, you will receive the following error when you try to connect to the multiviewer with your PC.

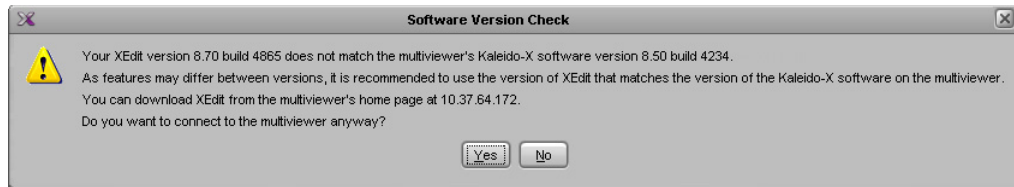

Under this circumstance, proceed as follows.

- There is no compatibility problem if only the patch revision number is different between the Kaleido Software version on the multiviewer and the XEdit version on your PC. Click **Yes** to the Software Version Check screen.
- There is a compatibility problem if the major version, minor version, or both are different between the Kaleido Software version on the multiviewer and the XEdit version on your PC. The solution is to downgrade / upgrade the XEdit version used on your PC to the Kaleido Software version used by the multiviewer. Proceed as follows:
 - Click **No** to the Software Version Check screen.
 - Uninstall XEdit from your PC (see [Uninstalling XEdit](#), on page 64).
 - Install XEdit from the multiviewer (see [Installing XEdit from your Multiviewer's Home Page](#), on page 60).

If you regularly connect to different multiviewer systems that use different Kaleido Software versions, and as a result you receive the Software Version Check error message, the best solution to avoid this is to upgrade all of your multiviewer systems to the same Kaleido Software version.

Ways to Access XAdmin

Access the XAdmin Web client as follows:

- from a **Web browser** (see [Opening XAdmin from a Browser](#) on page 72),
- from **XEdit** (see [Opening XAdmin from XEdit](#) on page 73),
- from the multiviewer's control panel in **iControl** or **iControl Solo** (see [Opening XAdmin from iControl or iControl Solo](#) on page 75).


The first time you access XAdmin for a multiviewer (and every time the multiviewer's IP address has changed), you may see a security warning or a certificate error message. The procedures below include instructions on how to address these messages (see [Registering your Multiviewer's Security Credentials with your Browser](#) on page 76). Internet Explorer users may also need to enable compatibility view (see [Enabling the Compatibility View in Internet Explorer](#) on page 84).

Opening XAdmin from a Browser


To open XAdmin from a browser

- 1 Open a Web browser window and enter the multiviewer's IP address in the address bar.

The Kaleido Multiviewer's home page appears.

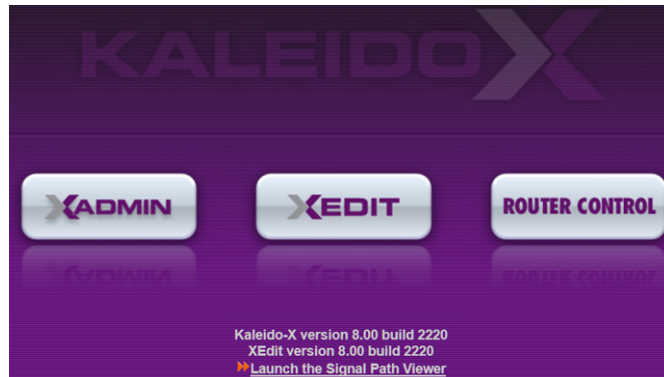

- 2 Click the XAdmin button.
- 3 If you see a security warning, or a certificate error message, then refer to [Registering your Multiviewer's Security Credentials with your Browser](#), on page 76.
- 4 If the "Log in to XAdmin" page appears, type the password, and then click **Log in**.

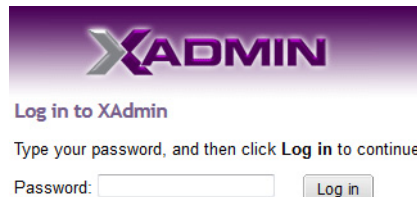

- 5 **Internet Explorer users:** If a blank page appears, then refer to [Enabling the Compatibility View in Internet Explorer](#), on page 84.


The XAdmin Status and Options page appears. You can access all XAdmin features, by clicking the links, in the navigation area on the left of the page.

Opening XAdmin from XEdit

To open XAdmin from XEdit


- 1 On the **Configure** menu, click **Use XAdmin**.

XEdit prompts you for the IP address of the multiviewer you want to access.

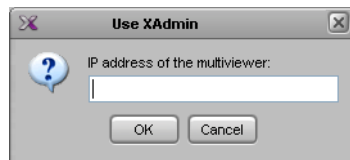

- 2 Type the IP address, and then click **OK**.
Your default Web browser opens.
- 3 If you see a security warning, or a certificate error message, then refer to [Registering your Multiviewer's Security Credentials with your Browser](#), on page 76.

- 4 If the “Log in to XAdmin” page appears, type the password, and then click **Log in**.

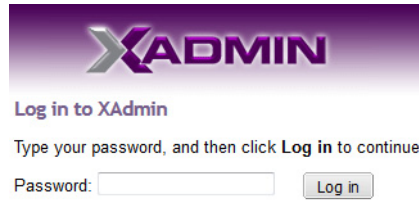


- 5 **Internet Explorer users:** If a blank page appears, then refer to [Enabling the Compatibility View in Internet Explorer](#), on page 84.
The XAdmin Status and Options page appears. You can access all XAdmin features, by clicking the links, in the navigation area on the left side of the page.

Opening XAdmin from iControl or iControl Solo

Note: This section applies to the KMX-4911 multiviewer models only.


To open XAdmin from iControl or iControl Solo

- 1 Open iControl Solo (or iControl Navigator, if you have an iControl application server), and locate the control panel for the multiviewer you want to monitor, based on the slot number, and the GV Node frame's name (refer to the iControl Solo User Guide, or to the iControl User Guide, for more information).
- 2 Open the KMX-4911 control panel.
- 3 Click the **Input Status** button, in the control panel's navigation area.

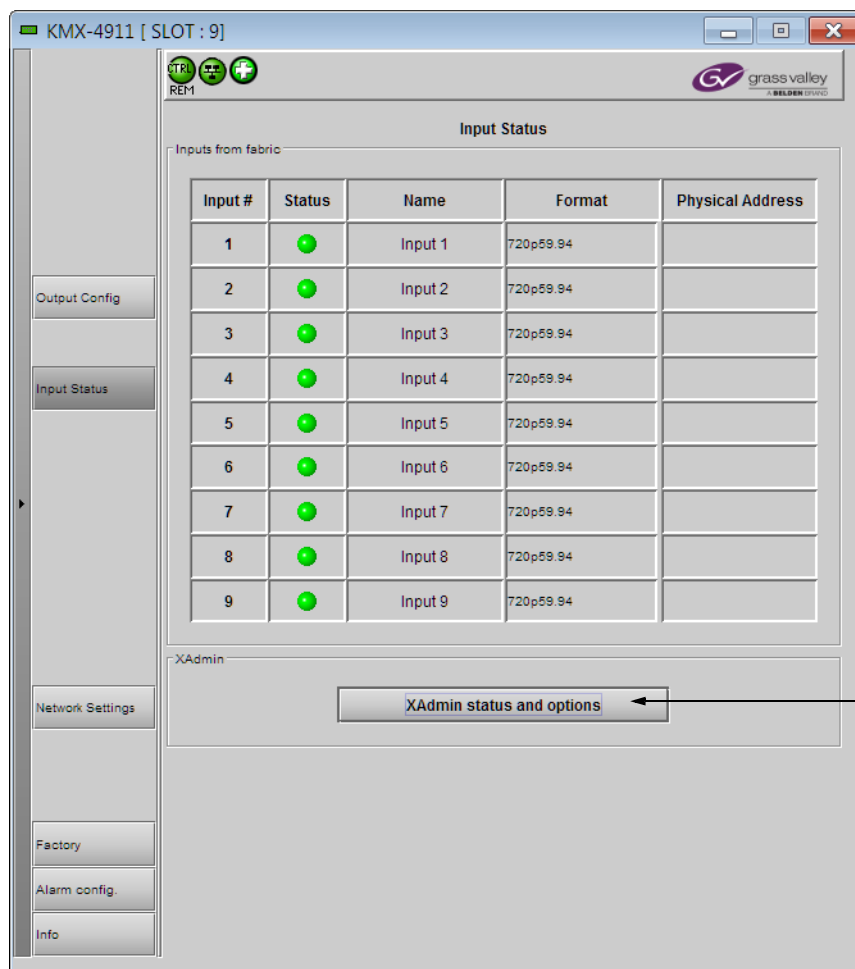

- 4 In the **Input Status** tab, click **XAdmin status and options**.
Your default Web browser opens.
- 5 If you see a security warning, or a certificate error message, then refer to [Registering your Multiviewer's Security Credentials with your Browser](#), on page 76.

- 6 If the "Log in to XAdmin" page appears, type the password, and then click **Log in**.

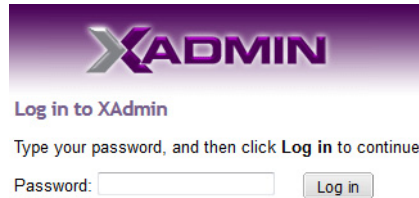

- 7 **Internet Explorer users:** If a blank page appears, then refer to [Enabling the Compatibility View in Internet Explorer](#), on page 84.

The XAdmin Status and Options page appears. You can access all XAdmin features, by clicking the links, in the navigation area on the left side of the page.

Registering your Multiviewer's Security Credentials with your Browser


When you open your multiviewer's home page, or try to access XAdmin, your browser may report a certificate error (Internet Explorer), warn you about the site's security certificate (Chrome), or report an untrusted connection (Firefox). Follow the appropriate procedure below to register your multiviewer's security credentials with your browser:

- [Suppressing untrusted connection warning in Firefox](#), on page 76
- [Suppressing certificate error in Internet Explorer or Chrome](#), on page 78

You will be then able to access your multiviewer's client applications without seeing the error message again, as long as the multiviewer's IP address does not change.

Suppressing untrusted connection warning in Firefox


The first time you try to access XAdmin in Firefox, the browser may display the following page instead, prompting you to confirm the multiviewer's security credentials.

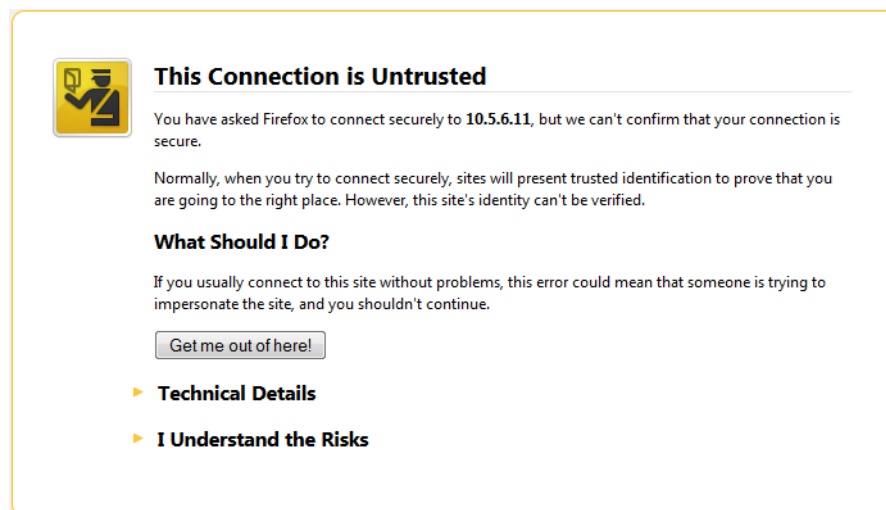

To register your multiviewer's security credentials with Firefox


- 1 Click **I understand the Risks**, at the bottom of the page.

The message expands.

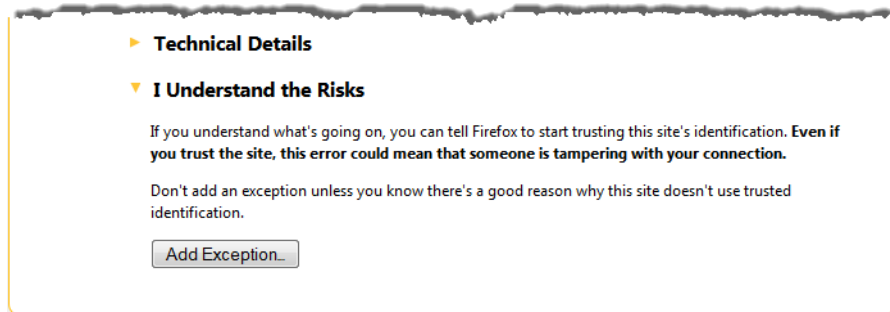

2 Click **Add Exception**.


3 In **Add Security Exception**, click **Confirm Security Exception**.

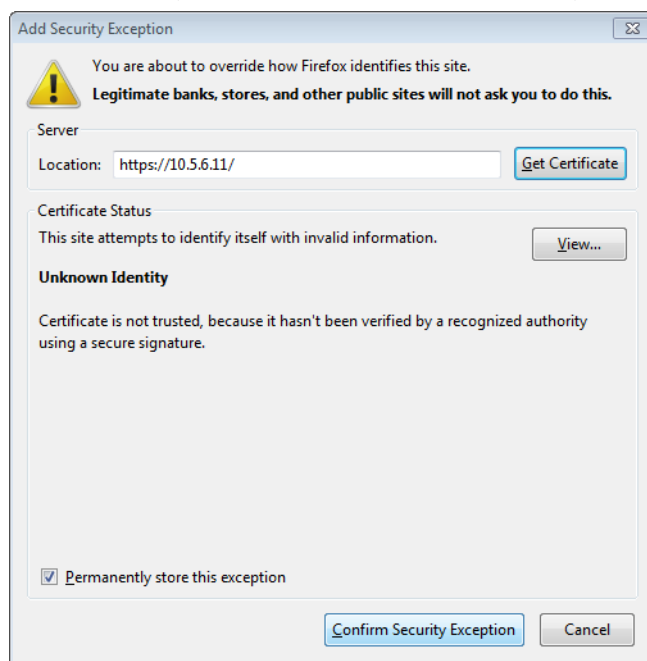


Your multiviewer's home page appears. You will now be able to access your multiviewer's client applications without seeing the warning. This will remain effective until the multiviewer's IP address is changed, in which case you will need follow the procedure again.

Suppressing certificate error in Internet Explorer or Chrome

The first time you try to access XAdmin in Internet Explorer or Chrome, the browser may prompt you to confirm the multiviewer's security credentials.

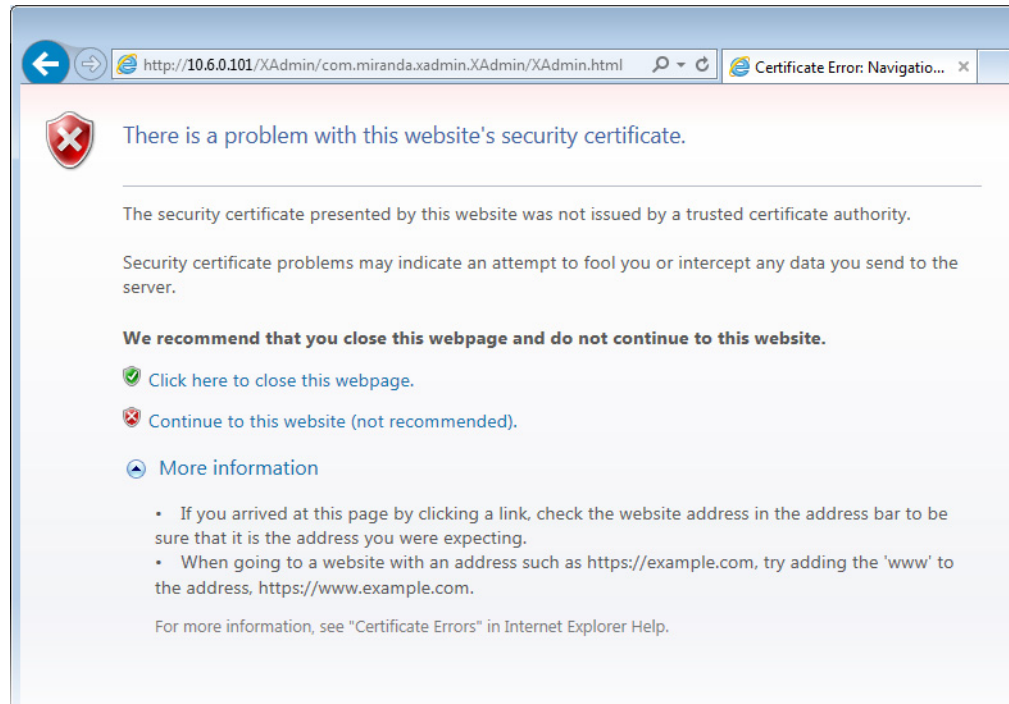

Internet Explorer's security warning

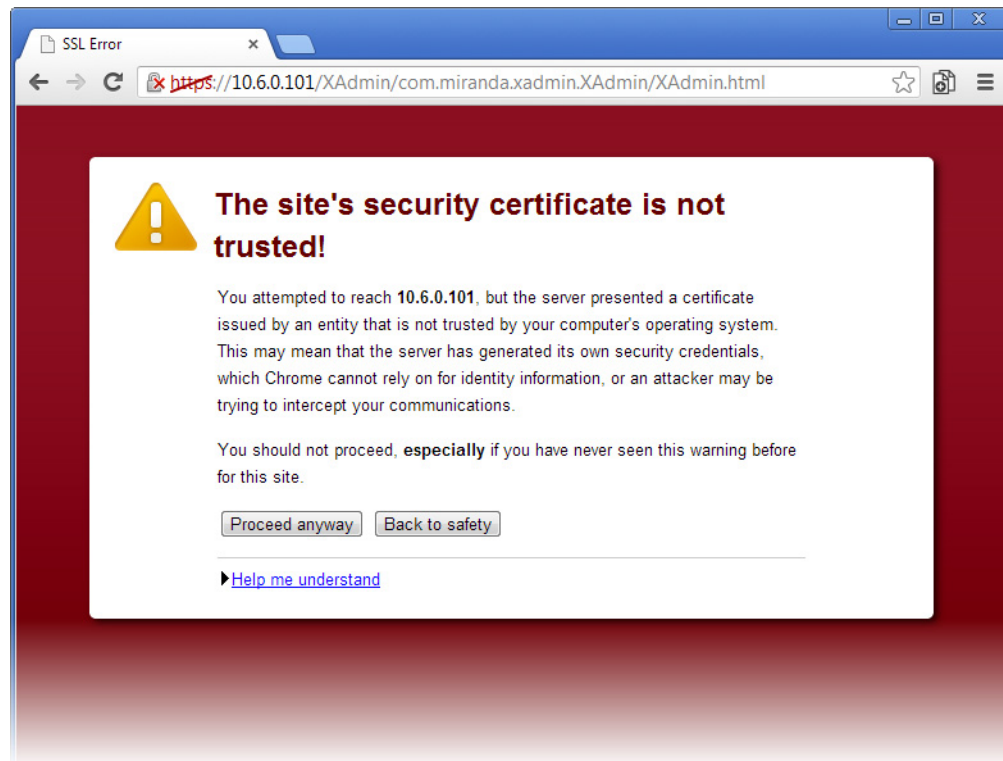

Chrome's security warning

Clicking **Continue to this website (not recommended)** (Internet Explorer), or **Proceed anyway** (Chrome) will let you access XAdmin but the browser's address bar will keep indicating that the multiviewer's identity is not verified. To suppress this warning, you need to perform the following, in Internet Explorer, *even if your preferred browser is Chrome*.

To register your multiviewer's security credentials with Internet Explorer

- 1 Click **Continue to this website (not recommended)**.

The address bar now indicates the certificate error.




Special notes for Internet Explorer users

- If you see a blank page instead of XAdmin's Status and Options page, then see [Enabling the Compatibility View in Internet Explorer](#), on page 84.


Special notes for Internet Explorer users (continued)

- You must have administrator status to accept the certificate error. If your user account does not have administrator status, then close your browser and, before you open it again, right-click the Internet Explorer icon, and then click **Run as administrator**:

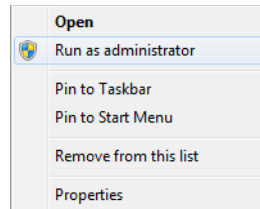


2 Click **Certificate error**.


3 In **Untrusted Certificate**, click **View certificates**.

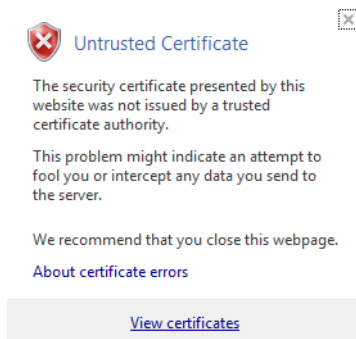


4 In **Certificate**, click **Install Certificate**.

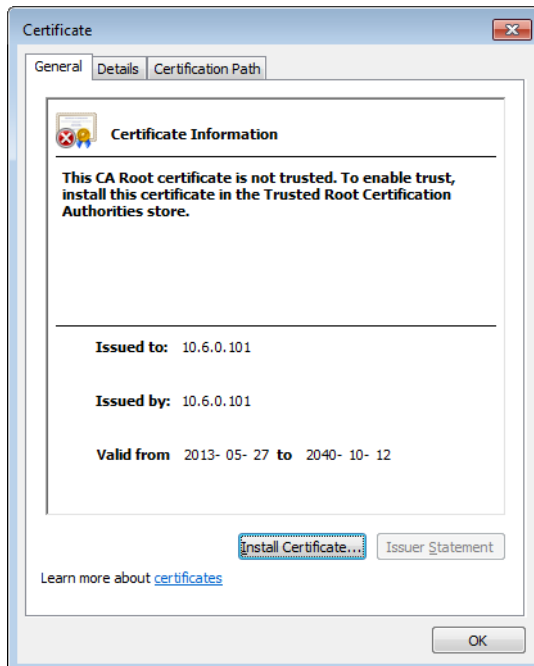


5 In **Certificate Import Wizard**, click **Next**.

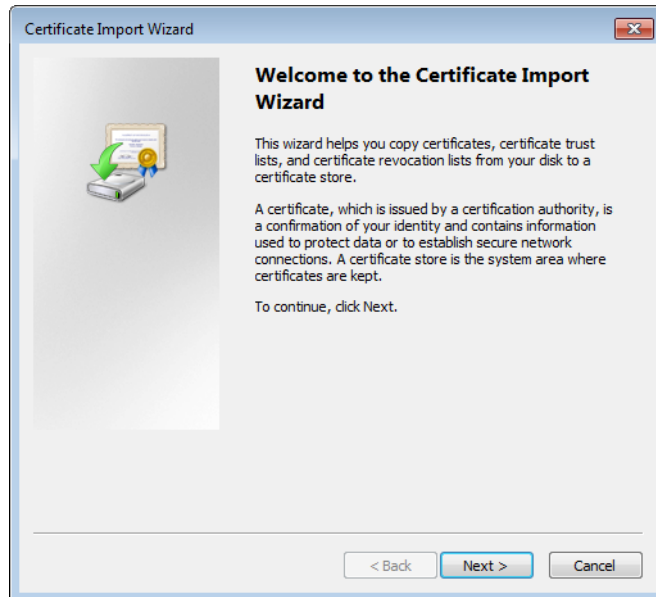


6 In **Certificate Import Wizard**, click **Place all certificates in the following store**, and then click **Browse**.

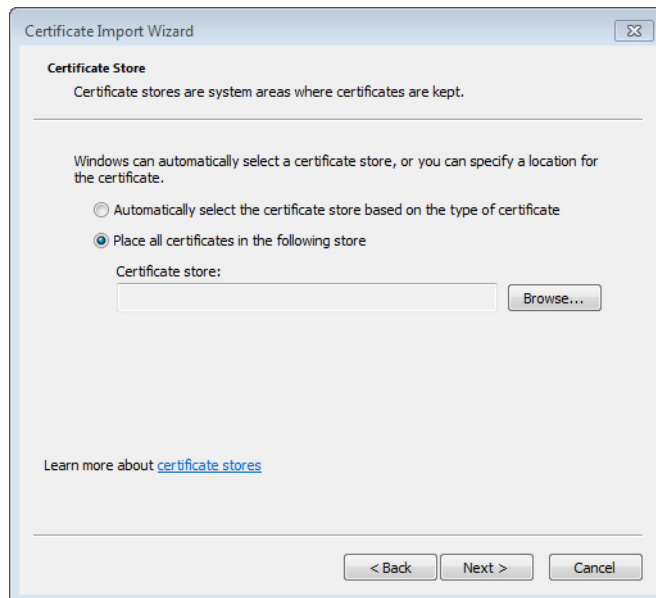


- 7 In **Select Certificate Store**, select **Trusted Root Certification Authorities**, and then click **OK**.

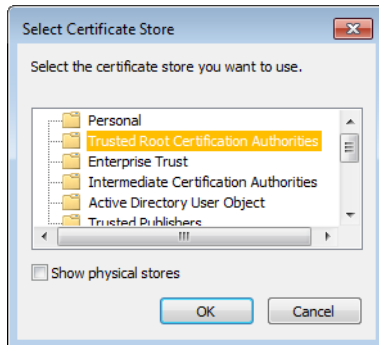


- 8 Back in **Certificate Import Wizard**, click **Next**.

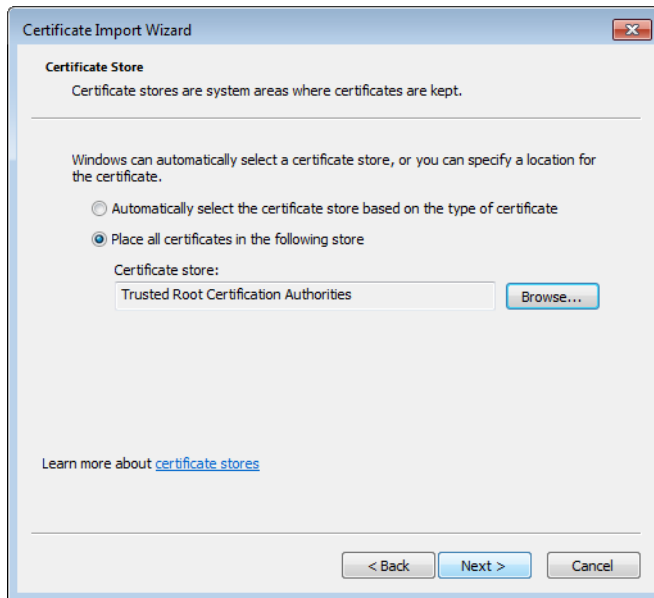

9 Click **Finish**.

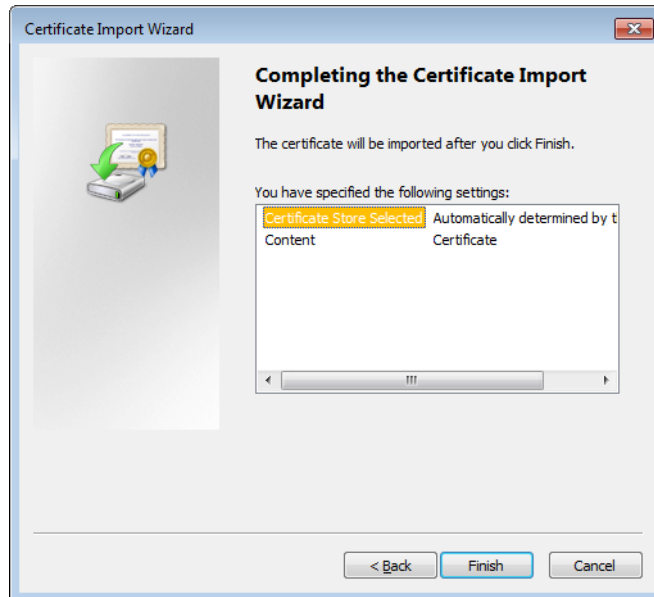


A security warning appears.

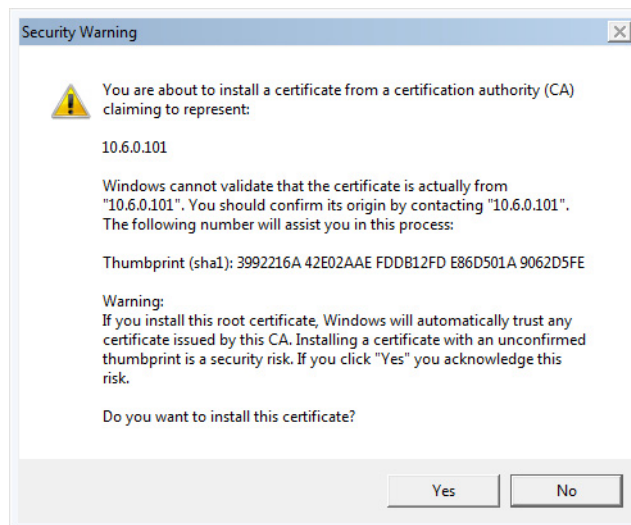

10 Click **Yes**.

11 **Certificate Import Wizard** reports that the import was successful.

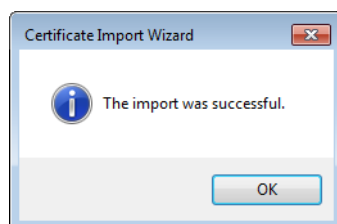

12 Click **OK** to continue, and then click **OK** to close the **Certificate** window.


13 Close all Internet Explorer (and Chrome, if any) windows, and then open your browser again.


You should now be able to access XAdmin, from your multiviewer home page without ever seeing the security warning again, unless the multiviewer's IP address is changed, in which case you will want to repeat this procedure.

Enabling the Compatibility View in Internet Explorer

When you try to access XAdmin, from your multiviewer's home page, in *Internet Explorer 8, 9, or 10*, you may see a blank page instead of XAdmin's Status and Options page.⁵

To enable the compatibility view for your multiviewer's XAdmin Web client

- Click the Compatibility View  button at the end of your browser's address bar.

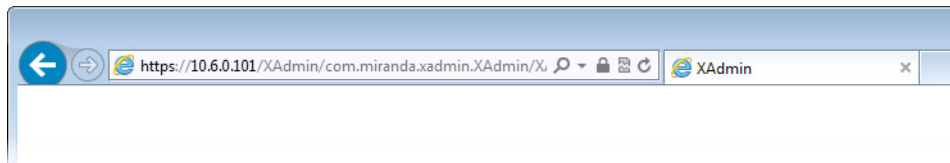

XAdmin's Status and Options page appears



The Compatibility View mode will remain enabled for this multiviewer as long as its IP address does not change.

XAdmin Access Control

XAdmin supports a simple authentication mechanism to prevent unauthorized users from modifying a multiviewer's system configuration.

Enabling XAdmin Access Control

To enable access control in XAdmin

- 1 Open XAdmin. See [Opening XAdmin](#) on page 71.
- 2 Click **Access control**, in the navigation area on the left side of the page.

⁵Should this happen with Internet Explorer 11, refer to *Fix site display problems with Compatibility View*, at <http://windows.microsoft.com/en-us/internet-explorer/use-compatibility-view#ie=ie-11>


The Access Control page appears.

- 3 Type the password you want to enforce in both the **New password** and the **Confirm** boxes.

The password must contain between 6 and 20 alphanumeric characters or symbols.

- 4 Click **Save**.

A confirmation message appears.

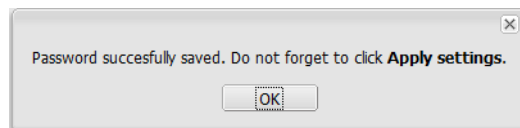


- 5 Click **OK** to close the message window.

The **Apply settings** button becomes available.


- 6 Click **Apply settings**.

XAdmin must upload the password to the multiviewer, for password enforcement to take effect. A progress indicator appears momentarily, followed by a confirmation message.

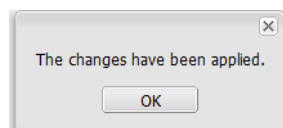


- 7 Click **OK**.


The Log in to XAdmin page appears. Other XAdmin sessions open against the same multiviewer are also redirected to the login page.

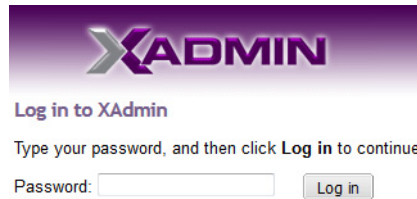

- 8 Type the password, and then click **Log in**.
The XAdmin Status and Options page appears.
- 9 Click **Log out**, when you are ready to close you session.

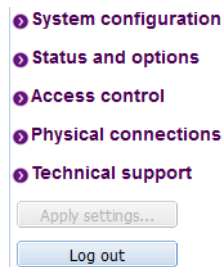

A confirmation message appears.

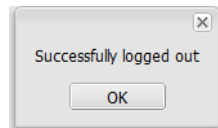


- 10 Click **OK**.
The login page appears. Only authorized users have access to XAdmin.

Changing the XAdmin Password

To change the password used to prevent access to your multiviewer from XAdmin

- 1 Open XAdmin. See [Opening XAdmin](#) on page 71.
- 2 Click **Access control**, in the navigation area on the left side of the page.
The Access Control page appears.

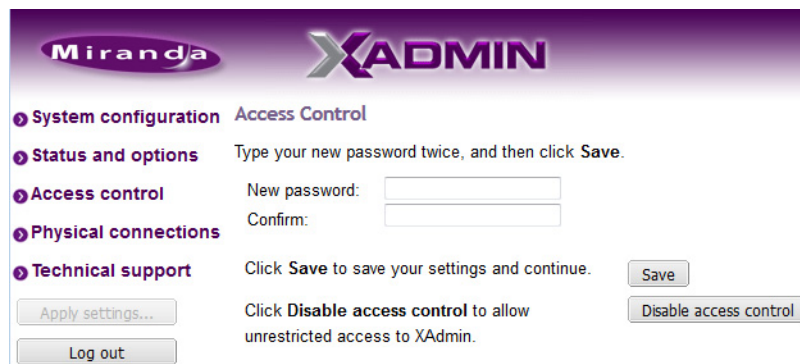


- 3 Type the new password you want to enforce in both the **New password** and the **Confirm** boxes.

The password must contain between 6 and 20 alphanumeric characters or symbols.

4 Click **Save**.

A confirmation message appears.

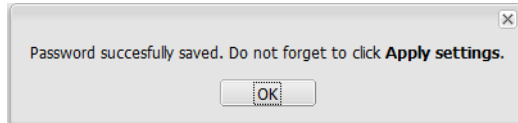

5 Click **OK** to close the message window.

The **Apply settings** button becomes available.


- ④ System configuration
- ④ Status and options
- ④ Access control
- ④ Physical connections
- ④ Technical support

Apply settings...

Log out


6 Click **Apply settings**.

XAdmin must upload the password to the multiviewer, for the password change to take effect. A progress indicator appears momentarily, followed by a confirmation message.

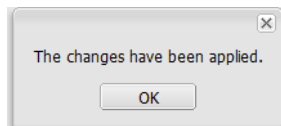

7 Click **OK**.

The Log in to XAdmin page appears. Other XAdmin sessions open against the same multiviewer are also redirected to the login page.

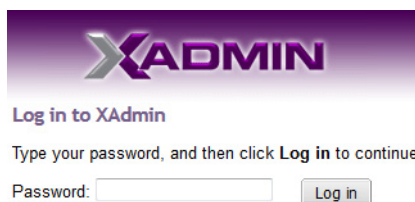

Disabling XAdmin Access Control


To disable access control in XAdmin

- 1 Open XAdmin. See [Opening XAdmin](#) on page 71.
- 2 Click **Access control**, in the navigation area on the left side of the page.

The Access Control page appears.


- 3 Click **Disable access control**.

A confirmation message appears.

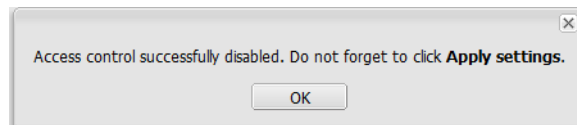

- 4 Click **OK** to close the message window, and then click **Apply settings**.

A progress indicator appears momentarily, followed by a confirmation message.

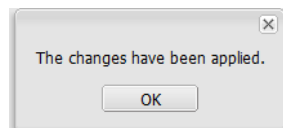


- 5 Click **OK**.
Unrestricted access to XAdmin is restored, for this multiviewer.


Closing a Password-Protected XAdmin Session

To close your XAdmin session

- 1 Click **Log out**, in the navigation area on the left side of the current page, when you are ready to close you session.

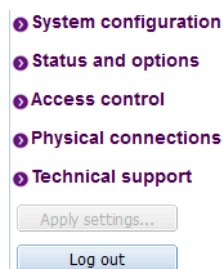

A confirmation message appears.

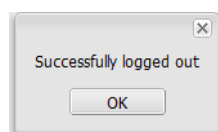

- 2 Click **OK**.

The login page appears. Only authorized users have access to XAdmin for this multiviewer.

Opening Signal Path Viewer

To open Signal Path Viewer

- Double-click the Signal Path Viewer shortcut  on your desktop.

The application automatically connects to your multiviewer, and the Signal Path Viewer panel appears.


Note: Should you need Signal Path Viewer to connect to a different multiviewer, then you must install it again, from the other multiviewer's home page. See [Installing Signal Path Viewer](#) on page 68.

Configuring a Multiviewer's IP Settings with XAdmin

To change your system's IP address and other parameters

- 1 Open XAdmin. See [Opening XAdmin](#) on page 71.
- 2 Click **System configuration**, in the navigation area on the left side of the page.

The System Configuration page appears, showing the current system name, IP settings, as well as the date and time settings.

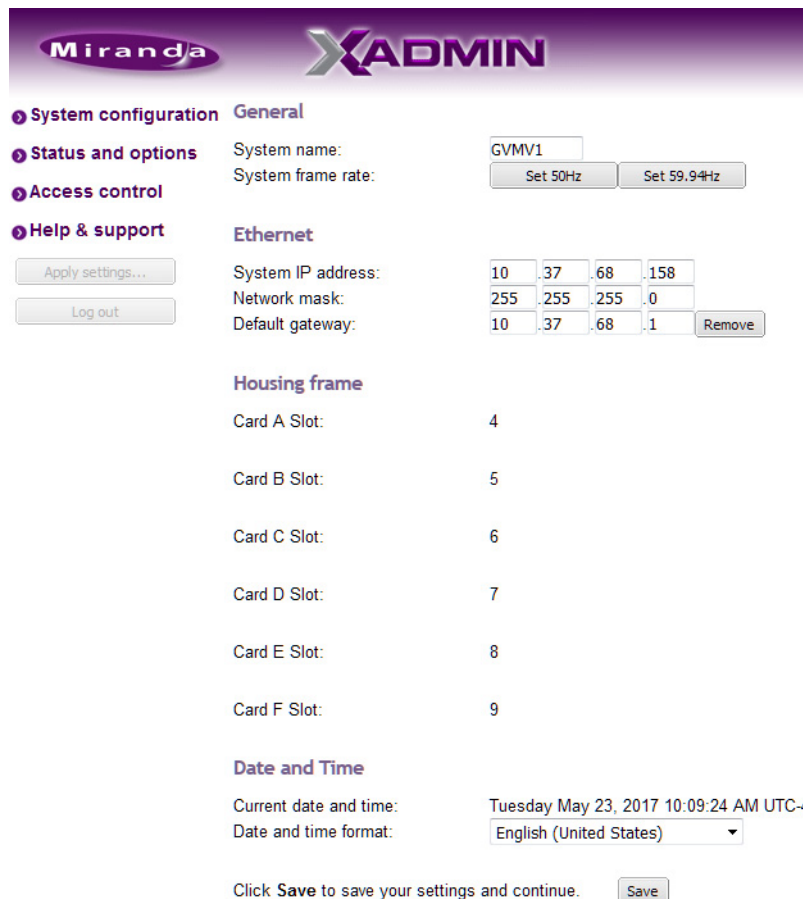

Miranda XADMIN

System configuration General

Status and options System name: GVMV1
System frame rate: Set 50Hz Set 59.94Hz

Access control

Help & support Ethernet

System IP address: 10 .37 .68 .158
Network mask: 255 .255 .255 .0
Default gateway: 10 .37 .68 .1 Remove

Housing frame

Card A Slot: 4
Card B Slot: 5
Card C Slot: 6
Card D Slot: 7
Card E Slot: 8
Card F Slot: 9

Date and Time

Current date and time: Tuesday May 23, 2017 10:09:24 AM UTC-4
Date and time format: English (United States)

Click **Save** to save your settings and continue. **Save**


- 3 Optionally, type a descriptive name for your system to make it readily identifiable. If there are more than one multiviewer in the same network environment, it is important to assign each a unique system name, so that you can tell them apart (for example, when using a remote control panel such as the Kaleido-RCP2 or RCP-200).

Notes

- Only lower-ASCII characters are allowed in the system name. Braces and tilde are not allowed.
-

- 4 Enter the appropriate IP information: frame or card IP addresses, network mask, and default gateway.
- 5 Click **Save**.

The new settings are saved locally.

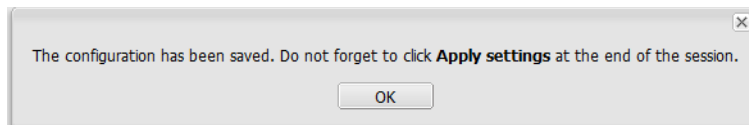

- 6 Click **OK**.

The **Apply settings** button becomes available.

- ① System configuration
- ② Status and options
- ③ Access control
- ④ Upgrade
- ⑤ Restart / Shut down
- ⑥ Head streaming
- ⑦ Technical support

- 7 Click **Apply settings**.

The Kaleido Multiviewer system must be restarted for changes to the network configuration to take effect. A message appears prompting you to reboot the system immediately.

- 8 Click **OK**.

Note: Settings cannot be applied to a multiviewer system while an upgrade is in progress. If the multiviewer does not reboot after 10 seconds or so, try clicking **Apply settings** again after a minute or two, until the multiviewer reboots.

You will need to edit the XAdmin URL in your Web browser's address bar, in order to log on to the multiviewer again.


Remote Control Using iControl

The KMX-4911 cards may be controlled by using Grass Valley's iControl version 7.20 or later. This section describes the control panels associated with the KMX-4911 cards and their use. Refer to the iControl User's Guide for information about setting up and operating iControl.

In iControl Navigator, iControl Web, or iControl Solo, double-click the icon for a KMX-4911 card to open the associated control panel.



KMX-4911 Service Control Panels in iControl

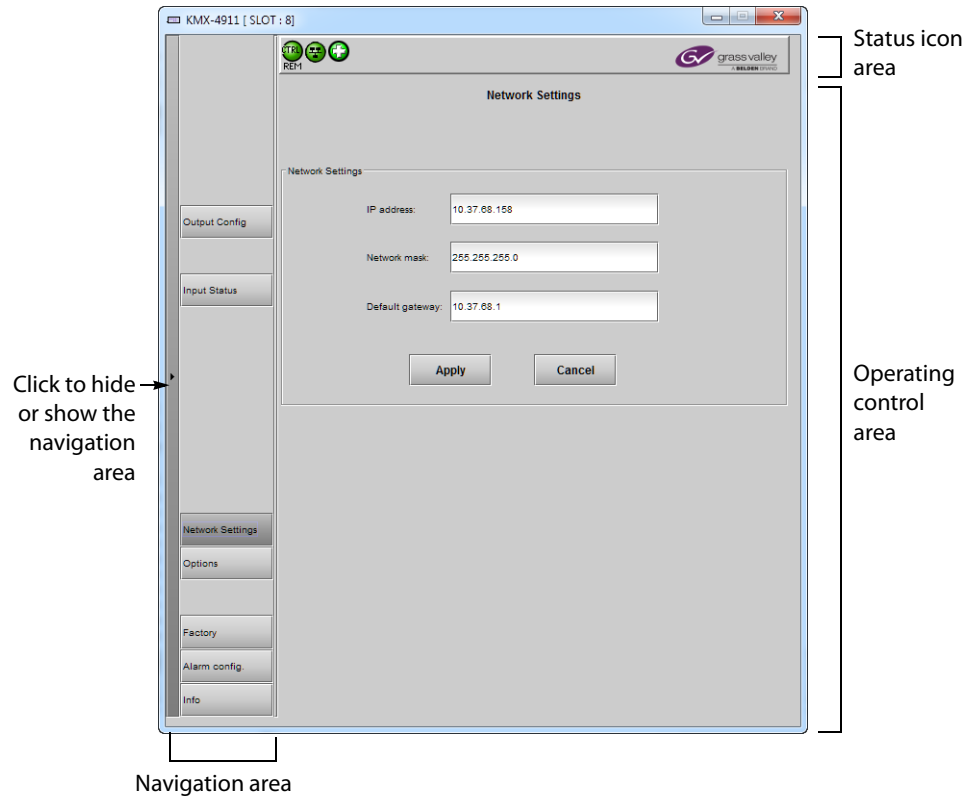




The card label and the modular card slot number where the card is installed in the GV Node frame are indicated in the window's title bar. In the control panel window, there are three main areas: the status icon area, the navigation area, and the operating control area.



Service control panel for a KMX-4911 card

The KMX-4911 panel's status icon has the following icons.

Status	Icon	Description
Manual Card Configuration	Green 	Remote card control activated. The iControl interface can be used to operate the card.
	Yellow 	Local card control active, The card is being controlled through the GV Node frame control panel, as described in Using the GV Node Frame Control Panel , on page 47. Any changes made using the iControl interface will have no effect on the card.

Status	Icon	Description
Ethernet Port Status	Green 	The card's IP link up and active.
	Red 	The card has no IP link (port down).
	Gray 	The card's Ethernet port not used.
Card Health Status	Green 	Hardware OK.
	Yellow 	Hardware Health Monitoring (Hardware fault detected). If this icon appears flashing red, you need to call Technical Support.

The navigation area contains buttons that control the contents of the operating control area.


- Click a button to access the associated features.
- Click the left side border (identified by a small arrow icon) to show or hide this area.

The operating control area contains the main operating controls for managing the KMX-4911 multiviewer's feature set. The contents change depending on the button you clicked in the navigation area. The relevant panels are described individually in the following sections:

- [Output Configuration Settings Panel](#), on page 92
- [Input Status Panel](#), on page 93
- [Network Settings Panel](#), on page 94
- [Options Panel](#), on page 94
- [Factory Panel](#), on page 95
- [Alarm Configuration Panel](#), on page 97
- [Information Panel](#), on page 101

Output Configuration Settings Panel

Set the resolution of the multiviewer mosaic output heads to an appropriate value according to the displays being used. For a multiviewer system that has three, four, or six KMX-4911 cards, this panel is not available for the third, fourth, and sixth cards.

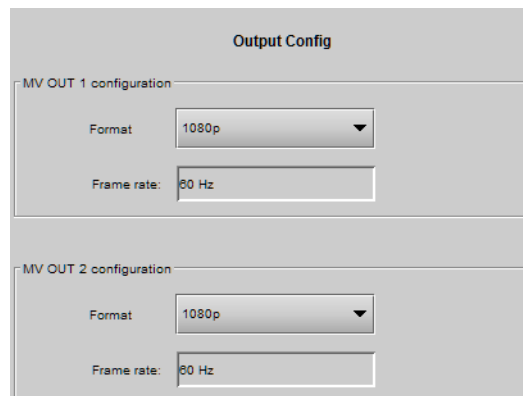

The screenshot shows a web-based configuration interface for the Output Configuration Settings Panel. The title is "Output Config". There are two main sections, "MV OUT 1 configuration" and "MV OUT 2 configuration". Each section contains a "Format" dropdown menu currently set to "1080p" and a "Frame rate" input field currently set to "60 Hz".

The following table lists the mosaic output formats supported at the SFP outputs.


KMX-4911 mosaic output resolutions

Resolution	Refresh rates (Hz)
<ul style="list-style-type: none"> • 1920 × 1080i • 1920 × 1080p 	50.00, 59.94
<ul style="list-style-type: none"> • 2160p Square Division Quad Split (SDQS) over quad-link 3G • 2160p Square Division Quad Split (SDQS) over quad-link 3G • HDMI 2.0 2160p through an external quad-link 3G to HDMI 2.0 converter • HDMI 2.0 2160p through an external quad-link 3G to HDMI 2.0 converter 	50.00, 59.94

Note: The refresh rate is always determined by the reference signal connected to the GV Node frame.


Input Status Panel

This screen shows the status of the current inputs assigned to the KMX-4911 card's inputs from the GV Node's fabric. Click *XAdmin status and options* for direct access to the card's web interface that provides more detail about the card's operating status.

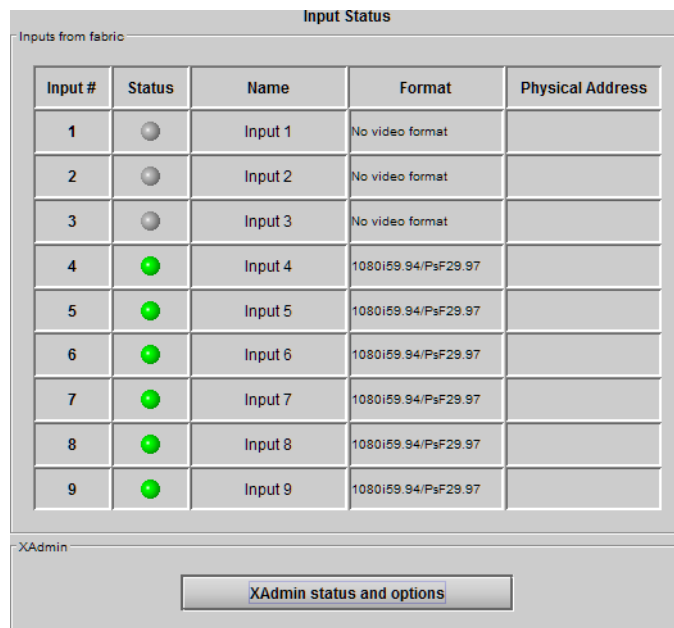

Network Settings Panel

KMX-4911 cards are shipped with default network settings, which you must replace with values suitable for your network environment. You may need to consult your network administrator to get the correct values. Enter the appropriate IP address, mask, and gateway information to configure a KMX-4911 card so that it can work with your Ethernet network. For a multiviewer system that has three, four, or six KMX-4911 cards, this panel is not available for the third, fourth, and sixth cards.

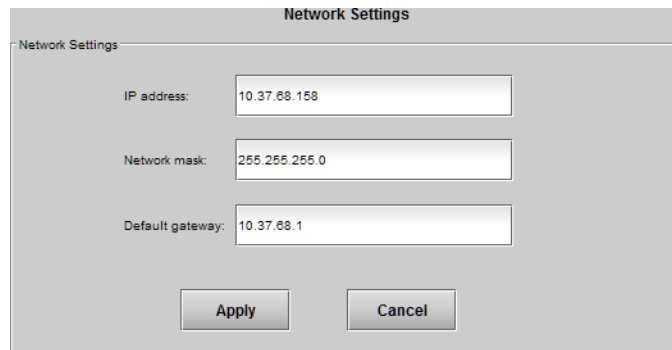

The screenshot shows a dialog box titled "Network Settings". It contains three input fields: "IP address" with the value "10.37.68.158", "Network mask" with the value "255.255.255.0", and "Default gateway" with the value "10.37.68.1". At the bottom of the dialog are two buttons: "Apply" and "Cancel".

Click **Apply** to set these values into the card, or **Cancel** to leave the original values unchanged.

Notes

- These settings apply to the *CONTROL PORT ETHERNET* ports at the back of the GV Node frame.
 - Network adapters are set to auto-negotiate. By default, the connection speed and duplex mode will be set automatically based on the corresponding port settings on the switch.
 - A GV Node frame can require more than one MAC address which could cause connectivity problems with certain network switch configurations. See [Network Switch Considerations](#), on page 33 for more information.
-

Options Panel

The Options panel is used to enable software options that are not part of the basic offer. Software options are enabled by entering a software key that has been sent to you once you have purchased the option. See the [Available Hardware and Software Options](#), on page 108 for a list of available options and their corresponding part numbers.

To activate an option, see [Enabling Options](#), on page 110.

Factory Panel

Use this panel to revert a card's configuration settings back to their factory-default state. Set the checkbox for the configuration types you want to reset to their factory-default state and click *Load Factory*.

Configuration Type Checkbox	Description
Card Parameters	Resets the card's configuration parameters to their factory-default values, except for alarm and network configuration parameters.
Card Alarms	Resets the card's alarm configuration parameters to their factory-default values. See below.
Network Settings	Resets the card's network configuration parameters to their factory-default values.

Card Alarms only are reset to factory values; iControl Alarms and GSM alarms are not reset. With reference to the Alarm Configuration panel, this is shown below.

Alarms reset to factory-default by clicking *Load Factory*? Yes No No


Status / Name	Card LED	Overall alarm	GSM contribution	Log eve...
KMX-4911	Set all	Set all	Set all	<input checked="" type="checkbox"/>
SYSTEM	Set all	Set all	Set all	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Critical temperature	<input checked="" type="radio"/> Critical	<input checked="" type="radio"/> Disabled	<input checked="" type="radio"/> Disabled	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Duplicate IP	<input checked="" type="radio"/> Critical	<input checked="" type="radio"/> Disabled	<input checked="" type="radio"/> Disabled	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Network link down	<input checked="" type="radio"/> Critical	<input checked="" type="radio"/> Disabled	<input checked="" type="radio"/> Disabled	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Fan error	<input checked="" type="radio"/> Critical	<input checked="" type="radio"/> Disabled	<input checked="" type="radio"/> Disabled	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Hardware failure	<input checked="" type="radio"/> Critical	<input checked="" type="radio"/> Disabled	<input checked="" type="radio"/> Disabled	<input checked="" type="checkbox"/>

Resetting a KMx-4911 Card to its Factory-Default Settings

To reset a KMx-4911 card's settings to their factory-default values


- 1 Open iControl Solo (or iControl Navigator, if you have an iControl application server), and locate the control panel for the KMx-4911 card whose settings you want to reset, based on the slot number, and the GV Node frame's name (refer to the iControl Solo User Guide, or to the iControl User Guide, for more information).
- 2 Open the KMx-4911 control panel.

- 3 Click the **Factory** button, in the control panel's navigation area.

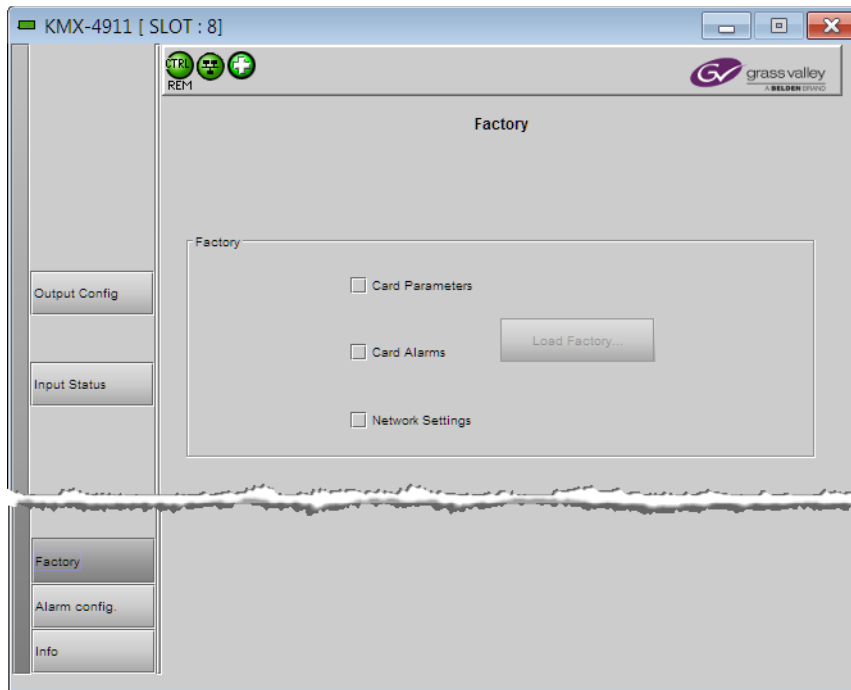

Note: The **Factory** tab is currently available for a KMX-4911 multiviewer's *card A*, and *card B* only.

- 4 In the **Factory** tab, select the appropriate check boxes.

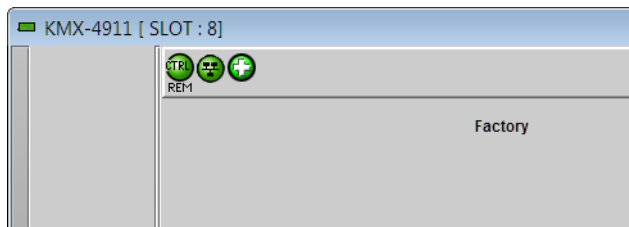

Select...	To...
Card Parameters	Reset the system name, system frame rate, date and time format, enable all SFP transmitter modules, and clear all log files.
Card Alarms	Reset all status LED alarm contributions from this card, to their default configuration.
Network Settings	Revert the KMX-4911 system IP address, network mask, and gateway settings to their default values. Use this for <i>card A only</i> . After you reset the network settings for card A, card B will automatically detect the changes, and reboot to match the new settings. (Attempting to revert the network settings from the service panel for card B would result in card A immediately restoring them.)

- 5 Click **Load Factory**.


A message appears prompting you to confirm your choice.

6 Click **Yes**.


The selected parameters revert to their factory-default configuration.

Alarm Configuration Panel

This panel allows alarm reporting to be configured. The panel opens in a new window when the button is clicked, and can be resized if needed.

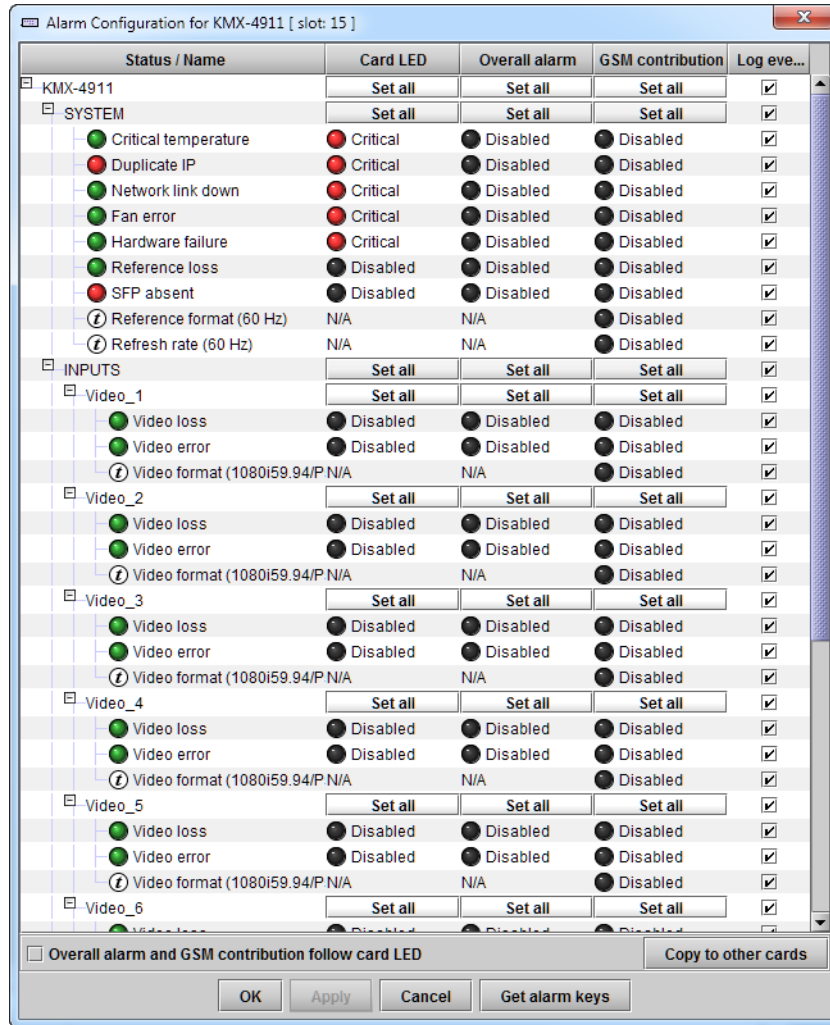

The panel is organized into the following columns.

Alarm Column	Description
Status/Name	<p>This contains an expandable tree listing all the alarms reported by this card.</p> <ul style="list-style-type: none"> • Each alarm name includes an icon that shows its current status. • Some alarms may be text-only and the alarm status is shown in the name and not by a status icon. <p>The Card LED, Overall Alarm and GSM Contribution columns contain pulldown lists that allow the level of contribution of each individual alarm to the alarm named in the column heading to be set.</p>  <p>Click on the alarm icon to see the available levels; then click on one to select it.</p>
Card LED	This column allows configuration of the contribution of selected individual alarms to the status LED located on the front card edge. The Card LED status is shown at the bottom of the alarm tree in the Status/Name column.
Overall Alarm	This column allows configuration of the contribution of each individual alarm to the Overall Alarm associated with this card. The Overall Alarm is shown in the upper left corner of the iControl panel, and also appears at the bottom of the Status/Name column.
GSM Contribution	<p>This column allows configuration of the contribution of each individual alarm to the GSM Alarm Status associated with this card. GSM is a dynamic register of all iControl system alarms, and is also an alarm provider for external applications. The possible values for this contribution are related to the Overall alarm contribution:</p> <ul style="list-style-type: none"> • If the Overall alarm contribution is selected as Disabled, the GSM alarm contribution can be set to any available value • If the Overall alarm contribution is selected as any level other than disabled, the GSM contribution is forced to follow the Overall Alarm.
Log Events	iControl maintains a log of alarm events associated with the card. The log is useful for troubleshooting and identifying event sequences. Click in the checkbox to enable logging of alarm events for each individual alarm.

Levels associated with these alarms:


The pulldown lists may contain some or all of the following options:

Icon Label / Color	Description
Disabled (black icon)	The alarm makes no contribution
Minor (yellow icon)	The alarm is of minor importance

Icon Label / Color	Description
Major (orange icon)	The alarm is of major importance
Critical (red icon)	The alarm is of critical importance
Passthrough (light orange icon)	The alarm exists but has no effect (used for text and composite alarms)

Shortcut: If you click in one of the *Set All boxes* beside a section heading, you will open a pulldown that lets you assign a level to all alarms in that section of the column simultaneously.

Once alarms are configured, you may accept the changes or discard them:

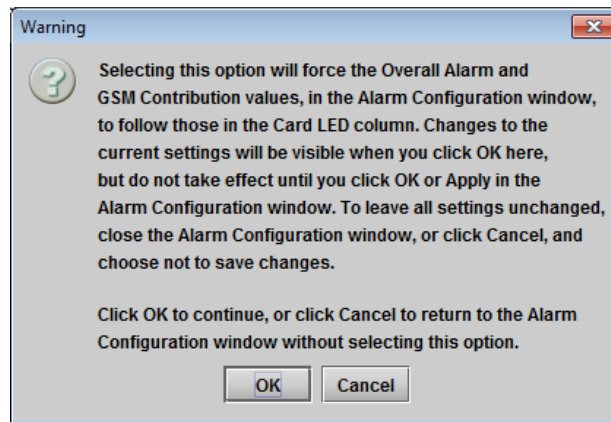

Warning for Follow LED change

Overall alarm and GSM contribution follow card LED Checkbox


Click in this checkbox to force the Overall alarm and GSM contribution to be identical to the Card LED status

- All Overall alarms and GSM contributions for which there is a Card LED alarm will be forced to match the Card LED alarm
- All Overall Alarms and GSM contributions for which there is no Card LED alarm will be forced to Disabled

A warning box will open allowing you to confirm the action, since it will result in changes to the configuration and there is no *undo* function.


Copy to other cards

Click this button to open a panel that allows the alarm configuration set for this card to be copied into another KMX-4911 card.

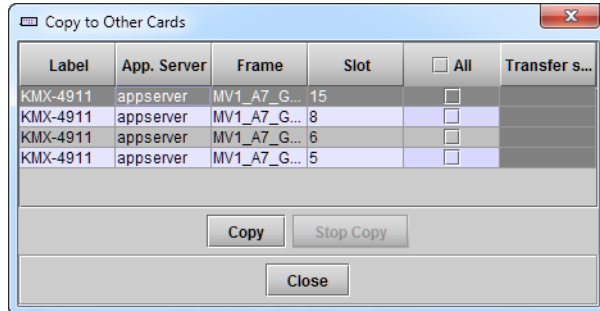

Select one or more destination cards from the list in the window by clicking in the checkboxes, or all of them by clicking in the *All* checkbox

Get alarm keys

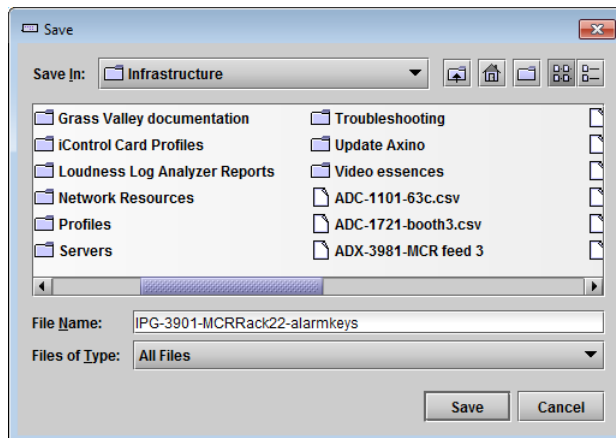

Click this button to open a save dialog where you can save a file containing a list of all alarms on this card and their current values, along with an Alarm Key for each. The alarm keys are useful for system integration and troubleshooting.

- The file is saved in .csv format

OK, Apply, Cancel

- **OK** accepts the settings and closes the window once the card confirms that there are no errors.
- **Apply** accepts the settings, but leaves the window open
- **Cancel** closes the window without applying any changes, and leaves the previous settings intact.

Information Panel




When a KMX-4911 card is included in an iControl environment, certain information about the card may be made available to the iControl system. In the boxes with a white background, you can type labels and comments that will make this card easier to identify in a complex setup.

Info	
Rear type:	KMX-4911-36x4-4QRP
KXS version:	master build 4181
SFP vendor:	
System name:	GVMV1
Position:	Card A
Label:	KMX-4911
Short label:	GVMV1-A
Source ID:	
Device type:	KMX-4911
Comments:	KMX-4911
Manufacturer:	Grass Valley
Vendor:	Grass Valley
Service version:	8.3.0.RC-4
Details...	
Advanced... Remote system administration...	

Parameter	Description
Label	Type a label to identify this KMX-4911 card when it appears in iControl applications. This label appears in the service panel's title bar, in iControl Solo, and in the iControl Navigator views
Short label	Type the shorter label that iControl uses in some cases (8 characters).
Source ID	Type a descriptive name for this KMX-4911 card.
Comments	Type descriptive text.

The remaining boxes show manufacturing information about this card, including the card type, and the rear panel type.

Three buttons give access to additional information and controls:

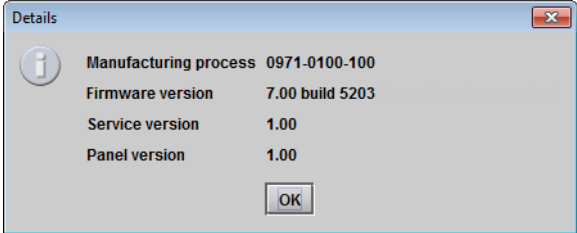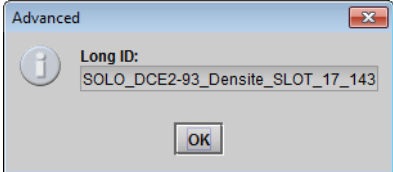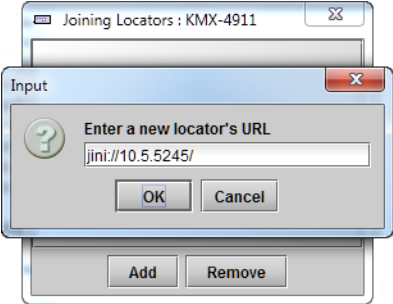Button	Description
Details	<p>Reports the firmware version, service version, and panel version for this card.</p>  <p><i>Output card Details window</i></p>
Advanced	<p>Shows the Long ID for this KMX-4911 card. The Long ID is the address of this card in the iControl network.</p> 
Remote system administration	<p>Opens the Joining Locators window, which lists remote lookup services to which this KMX-4911 card is registered.</p>  <ul style="list-style-type: none"> • Click Add to force the iControl service for this KMX-4911 card to register itself on a lookup service, by using the following syntax in the Input window: <pre>jini://<ip_address></pre> <p>where <i><ip_address></i> is the IP address of the server running the lookup service.</p> • Select one of the services listed in the window by clicking on it, and then click Remove to remove it from the list.

Configuring the RCP-200

The RCP-200 is shipped with an IP address of 10.0.3.200. On installation, you should consult your system administrator and replace this address with an appropriate address for your local network configuration (see [Configuring the RCP-200's IP settings](#) on page 103). Once your RCP-200 has an active connection to the network, you must then register the multiviewers you want to operate from the RCP-200 (see [Specifying multiviewers for the RCP-200](#) on page 103), and their respective *KX Router* logical routers (see [Specifying lookup servers for the RCP-200](#) on page 103). Once this is completed, you will be able to control the monitor wall from the RCP-200 (see [Logging on to the RCP-200](#) on page 104).

Configuring the RCP-200's IP settings

To assign an IP address to the RCP-200

- 1 Press the CONFIG button, located between the two screens on the front of the RCP-200.
- 2 Touch the COMM category at the top of the right-hand screen.
- 3 Touch the ETHERNET tab on the right-hand screen.
- 4 In the SELECT area, rotate the left most control knob to select IP ADDRESS.
- 5 Use the four control knobs in the CHANGE area to set the new address.
The current address is displayed in the CURRENT box for reference, and the new address you are setting appears in the MODIFIED box, as well as at the controls.
- 6 Press the SAVE control knob to store the new address.
- 7 Repeat from [step 4](#) to configure the NETWORK MASK and GATEWAY settings.
- 8 Press the RESTART control knob to apply the changes.
The panel will go dark for about 15 seconds before the startup screens appear.

Specifying multiviewers for the RCP-200

To specify a multiviewer for the RCP-200

- 1 Press the CONFIG button, located between the two screens on the front of the RCP-200.
- 2 Touch the COMM category on the right-hand screen.
- 3 Touch the KALEIDO DISCOVERY tab on the right-hand screen.
- 4 Use the four control knobs in the ADD TO LIST area to dial in the IP address of the multiviewer you want to operate.
The address appears in the TO ADD box.
- 5 Press the ADD control knob.
The multiviewer's IP address appears in the LOOKUP LIST area.
- 6 Press the CONFIG button, located between the two screens on the front of the RCP-200 to end the configuration process and return to normal operation.

Specifying lookup servers for the RCP-200

The RCP-200 needs to connect to a lookup server in order to control devices, including a multiviewer's *KX router* logical router.

To specify a lookup server for the RCP-200

- 1 Press the CONFIG button, located between the two screens on the front of the RCP-200.
- 2 Touch the COMM category on the right-hand screen.
- 3 Touch the DISCOVERY tab on the right-hand screen.
- 4 Use the four control knobs in the ADD TO LIST area to dial in the IP address of the multiviewer you want to operate.
The address appears in the TO ADD box.
- 5 Press the ADD control knob.
The multiviewer's IP address appears in the LOOKUP LIST area.
- 6 Press the CONFIG button, located between the two screens on the front of the RCP-200 to end the configuration process and return to normal operation.

Logging on to the RCP-200

To log on to a Multiviewer's room from the RCP-200

- 1 On an RCP-200 with an active connection to the network, press the LIST button.
All devices, and multiviewer's rooms, detected by the RCP-200 appear on the left screen. Multiviewer rooms are listed in the form [multiviewer name]\[room name].
If a room belongs to a cluster system, its name appears once for each of the member multiviewers (e.g., if two multiviewers, KX1 and KX2, are configured as a cluster, and ROOM1 includes displays fed by both multiviewers, then both KX1\ROOM1 and KX2\ROOM1 will be listed. To determine the one you should select, review the following:
 - Has the RCP user configuration you want to use been replicated on every member of the cluster? RCP Users are not automatically propagated to all multiviewers. Before a user can log on to a room associated with a cluster system, the corresponding RCP user configuration must be manually replicated on all member multiviewers across the cluster. See *Managing RCP Users* in the Kaleido Software User Guide.
 - Do you need to control an external router whose configuration is available only from one or some specific members of the cluster?
 - Does your system configuration include actions that were configured only on one or some specific members of the cluster?If any of the above elements is available only from one or some specific members, then make sure you select the room name prefixed with the appropriate multiviewer name.
- 2 Touch the room you want to access (press the DOWN or UP soft keys to scroll the list as needed).
The list of users assigned to this room appears on the right-hand screen.
- 3 Touch the user name under which you want to log on, enter your password, and then touch LOG IN.

Note: By default, the user "Admin" has no password.

The following message appears on the right-hand screen: PLEASE SELECT A ROUTER FROM THE LEFT-HAND SCREEN, prefixed with the name of the multiviewer that

appeared before the room name you selected in [step 2](#).

- 4 In the list on the left-hand screen, touch the *KX Router* logical router associated with the same multiviewer (you can see the multiviewer name, its IP address, and the size of that particular KX Router).
- 5 Touch the Video level, in the area to the right of the router list, if it is not selected already, and then push SELECT.

The room's monitor wall control panel appears on the right-hand screen, with the ASSIGN CHANNEL category selected. If a mouse is connected to the RCP-200, then after touching WALL MOUSE you should be able to see and move the mouse pointer on the monitor wall.

- If the room you selected belongs to a *cluster* system, rotate the HEAD knob (or touch the DISPLAY SELECT category) to display a head view from a different member of the cluster, and then touch a monitor.

The ROUTER SELECT category becomes selected instead of ASSIGN CHANNEL, and the right-hand screen shows the message prompting you to select a router from the left-hand screen, prefixed with the name of the multiviewer, which means that you still need to complete the correlation between some monitor wall destinations and the representation of the KX Router logical router for this multiviewer. See [Correlating Monitor Wall Destinations and KX Router Logical Routers for the RCP-200](#) on page 105. If you need to connect to a different instance of the same room then you will have to establish the correlation again, to be able to operate the monitor wall from the different context.

Notes

- The RCP-200 will remember your user credentials until you log out explicitly (by touching LOG OUT at the upper-right corner of the control panel).
 - The pointer may flicker when two RCP users access displays fed by the same multiviewer output.
 - Two users accessing the same display will be limited to sharing a single pointer.
-

For more information on the RCP-200, refer to the *RCP-200 Guide to Installation and Operation*. See [Related Documentation](#), on page 11.

Correlating Monitor Wall Destinations and KX Router Logical Routers for the RCP-200

To operate the monitor wall from the RCP-200's category/index router view, your system must have been configured to be controlled as a router. In a layout, the RCP-200 can only control monitors that have been assigned a monitor wall destination. The first time you log on to a room from the RCP-200, you will be prompted to select a router from the left-hand screen. By selecting the appropriate KX Router logical router, you will establish the correlation between your multiviewer's monitor wall destinations and the RCP-200's representation of the multiviewer's *KX Router* logical router. In the case of a cluster system, you will also be prompted to select a router, the first time to try to assign a source to a monitor located in a part of the layout that belongs to a different member of the cluster. You only need to do this once, for every multiviewer that is part of a cluster.


To correlate a monitor wall destination in a layout and the corresponding KX Router logical router

- 1 In the list on the left-hand screen, touch the *KX Router* logical router associated with the multiviewer whose name was indicated in the message prompting to select a router (you can see the multiviewer name, its IP address, and the size of that particular KX Router).
- 2 Touch the Video level, in the area to the right of the router list, if it is not selected already, and then push SELECT.

The RCP-200 will remember the association with the KX Router logical router's destinations for the current multiviewer's monitor wall destinations.

Configuring the Kaleido-RCP2

The Kaleido-RCP2 is a multi-function remote control panel designed for use with Kaleido multiviewers. Ethernet connectivity allows multiple RCP users to access multiple Kaleido Multiviewer systems, allowing convenient access to the real-time operating features. When logged on to a Kaleido multiviewer via its Ethernet connection, the RCP user can control various operating features.

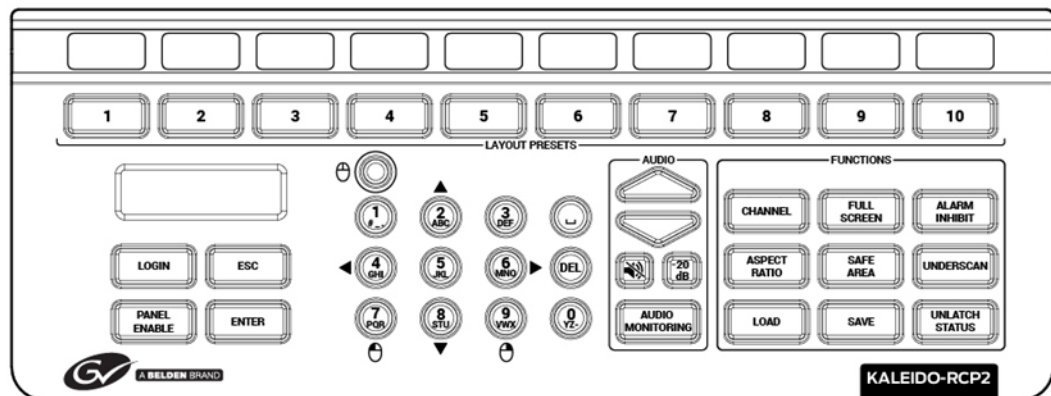

Before you can use the Kaleido-RCP2 to operate your Kaleido Multiviewer, you must set up the Ethernet connection between the two devices. By default, the Kaleido-RCP2 is shipped with DHCP enabled, so it will automatically be assigned an IP address by a DHCP server. If no DHCP server is present on the network, the Kaleido-RCP2 will default to the static IP address 10.0.3.191.

Notes

- The Kaleido-RCP2 is powered through the RJ45 Ethernet connector. There is no power ON/OFF button, so the device is ON whenever a powered Ethernet cable is connected.
- If you purchased more than one Kaleido-RCP2 units, keep in mind that they all ship with the same default static IP address. Make sure to assign them different static IP addresses before connecting them to the network if DHCP is not used. See the Kaleido-RCP2 User Guide for more information.
- The time-out period before the Kaleido-RCP2 defaults to its static address is 1 minute. To speed up the initialization, disable the DHCP option.

Assigning a static IP address to the Kaleido-RCP2

To assign a static IP address to the Kaleido-RCP2

- 1 Press and hold the ENTER button until the ESC button lights up, to display the configuration menu.
- 2 Press the **8** key (to move down the list) until ETHERNET OPTIONS appears on the LCD display.
- 3 Press the ENTER key to display the ETHERNET OPTIONS menu.
- 4 Select the IP ADDRESS menu using the **2** key (to move up in the list) or the **8** key (to move down the list), and then press ENTER.
- 5 Using the numeric keypad, type the chosen IP address, and then press ENTER.
- 6 Select the NETWORK MASK menu using the **2** key (to move up in the list) or the **8** key (to move down the list), and then press ENTER.
- 7 Using the numeric keypad, type the chosen network mask, and then press ENTER.

You have assigned a static IP address to the Kaleido-RCP2.

Selecting a room for the Kaleido-RCP2

To select a room for the Kaleido-RCP2

- 1 Press and hold the ENTER button until the ESC button lights up, to display the configuration menu.
- 2 In the ROOM SELECTION display, press ENTER again to get the room list from the Kaleido Multiviewer systems that are currently available on the network.
- 3 In the room list, select the room you want to access by pressing the **2** key (to move up in the list) or the **8** key (to move down the list).

Note: By default, a multiviewer's video outputs are assigned to specific rooms: the outputs are assigned to ROOM1.

- 4 When the appropriate room name is highlighted, press ENTER to accept the new selection.
- 5 When prompted, log on to the selected room. See [Logging on to the Kaleido-RCP2](#) on page 108.

Connecting the Kaleido-RCP2 to Other Kaleido Multiviewer Systems

The unicast IP feature enables a Kaleido-RCP2 to find up to three Kaleido Multiviewer systems on different subnets and connect to them (via network gateways), while maintaining connections to Kaleido Multiviewer systems in its own subnet.

Notes

- To navigate the Kaleido-RCP2 menu, press the **2** key to move up, or the **8** key to move down.
 - There is no need to configure unicast IP addresses for Kaleido Multiviewer systems on the same subnet as the Kaleido-RCP2.
-

To configure a unicast IP address on the Kaleido-RCP2

- 1 Press and hold the ENTER button until the ESC button lights up, to display the configuration menu.
- 2 Select ETHERNET OPTIONS on the LCD display, and then press ENTER.
- 3 Select **Unicast host IP**, and then press ENTER.
- 4 Select **Enable IP 1**, and then press ENTER.
The Enable IP x parameter instructs the Kaleido-RCP2 to query the selected IP address for a list of rooms.
- 5 Select **Host IP ADDR**, and then press ENTER.
- 6 Using the numeric keypad, type the IP address of a Kaleido Multiviewer on a remote subnet, and then press ENTER.
- 7 Repeat [step 4](#) to [step 6](#) to add unicast IP addresses for up to three remote Kaleido Multiviewer systems.

Logging on to the Kaleido-RCP2

As a network device, the Kaleido-RCP2 provides access to any room configuration on any Kaleido Multiviewer system on the network. As a security measure, access is controlled by a login procedure.

To log on to a Kaleido Multiviewer system from the Kaleido-RCP2

- 1 Press the LOGIN key.
The following message will appear on the LCD display:
LOGIN Position
Admin
- 2 Press ENTER to select "Admin".
A message prompting you to enter a password will appear on the LCD display.
- 3 Press ENTER again (by default, there is no password).
The message "Access granted" will appear on the LCD display if the login is successful. If a mouse is connected to the Kaleido-RCP2, then you should be able to see and move the mouse pointer on the monitor wall.

Note: If at any time the message "Target system is offline" or "No login list available" appears on the LCD display, press the ESC, ENTER and DEL keys simultaneously and go back to [step 1](#).

For more information, refer to the *Kaleido-RCP2 Guide to Installation and Operation*. See [Related Documentation](#), on page 11.

Available Hardware and Software Options

You can purchase various software and hardware options to expand your multiviewer's capabilities that are not part of the basic offer. Software options are enabled by entering a software key that has been sent to you once you have purchased the option. The following tables list options that can be enabled and disabled via the XAdmin Status and Options page (see [Enabling Options](#) on page 110).

KMX-4911 input option

Option	Part No.	Feature	Notes
CC/XDS	KMX-4911-OPT-CSX	CC/subtitling and XDS data license	One CC/XDS option key is needed per card. Extraction of CC 608, CC 708, XDS and Subtitling WST metadata is activated as a single option.
Dolby E	KMX-4911-OPT-DOLBY	Dolby-E metadata extraction license	One Dolby-E option key is needed per card.
SCTE	KMX-4911-OPT-SCTE	License for extraction of SCTE 104 metadata	One SCTE option key is needed per card.
Loudness	KMX-4911-OPT-LOUD	Loudness level measurement license	One Loudness option key is needed per card.

KMX-4911 output option


Option	Part No.	Feature	Notes
Additional Head Activation	KMX-4911-OPT-OP2	Additional head output enable license. In a multi-card system, if a card <i>does not</i> have this option enabled, then the only available multiviewer output is MV OUT A1 (MV OUT 1, in the case of a KMX-4911 9×2 system) for that card. There is no video output to the remaining heads. For more information about the rear panel nomenclature, see Multiviewer SFP Module Mosaic Output to Display Input Cable Connections , on page 38.	<p>One additional head output option key is needed per card.</p> <ul style="list-style-type: none"> • If this option is not enabled on all cards, the system supports a single SFP TX module in card A: <ul style="list-style-type: none"> • Single fiber • Single DIN • HDMI • If this option is enabled, the system also supports the following module combinations, in each of card A and card B (if present): <ul style="list-style-type: none"> • Two dual TX modules • Two single TX modules • One single TX, and one dual TX (in any order) <p>For more information about the location of card A and B in the frame, see Installation of the KMX-4911 in the GV Node Frame, on page 23.</p>
Display 90-Degree Rotation	KMX-4911-OPT-ROT	Display rotation license	One Display 90-Degree Rotation option key is needed per card.

Enabling Options


To enable options on a multiviewer

- 1 Obtain a license key from Grass Valley.
- 2 Open XAdmin.

The XAdmin Status and Options page appears.

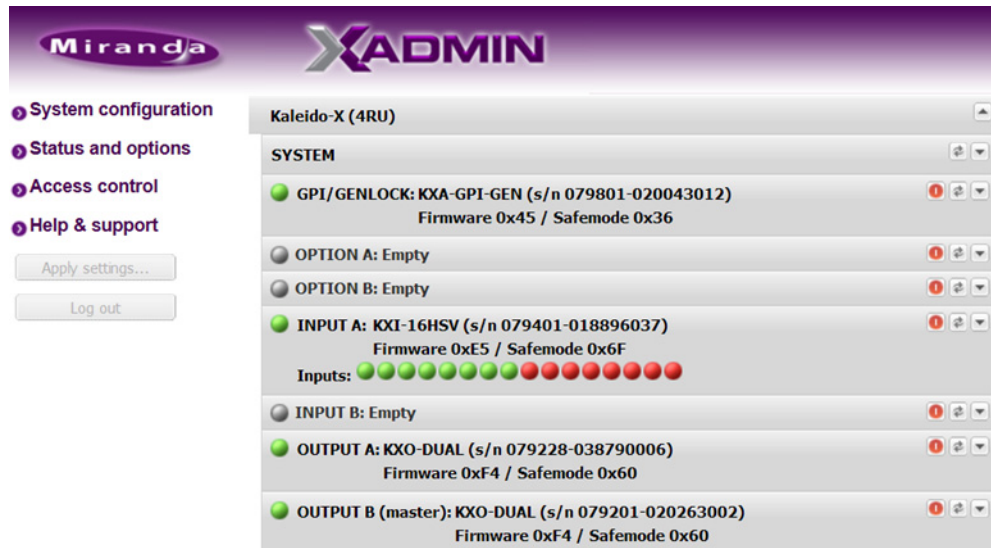

- 3 Click the arrow button at the end of the heading row that corresponds to the module for which you want to enable an option.

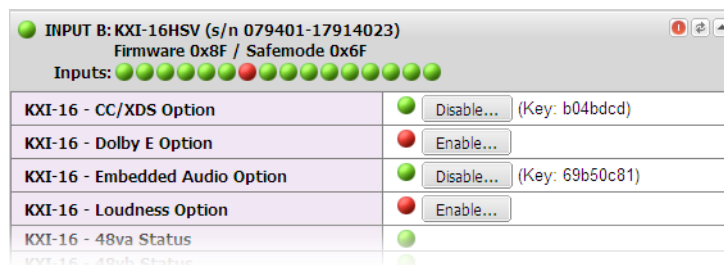


- 4 Locate the entry for the option you want to enable.

For example, to activate the Extraction of CC, Subtitling and XDS metadata option (CC/XDS Option) for an input card, you would need to locate the appropriate card in XAdmin's Status and Options page, expand it, and then locate the **KXI-16-CC/XDS option** line.

- 5 Click the **Enable** button.

A window appears prompting you for the option key.

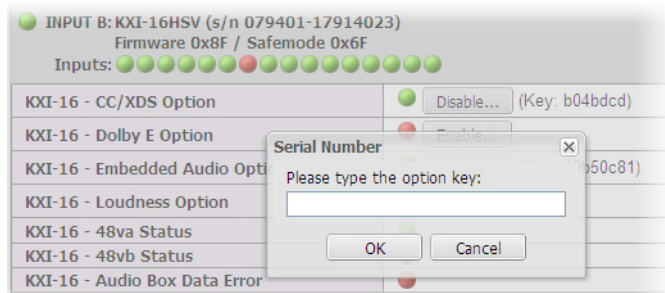

- 6 Enter the key for the specific option in the box, and then click **OK**.
Once the option is enabled, the key is displayed, and a **Disable** button replaces the **Enable** button.

Maintenance & Troubleshooting

6

This chapter shows you the various maintenance operations and corrective actions that maybe required to be performed during system commissioning and over the multiviewer's lifetime.

System Verification

Verifying the KMX-4911 Multiviewer Status

You can check internal system statuses through the Web-based XAdmin application. For more information how the multiviewer model is represented in XAdmin, see [Multiviewer Model Representation in XEdit and XAdmin](#), on page 59.

To view the status information for a multiviewer

- 1 Open XAdmin. See [Opening XAdmin](#) on page 71.

XAdmin's Status and Options page appears, showing the multiviewer model, and a list of all modules and their statuses.




Status and Options page

The module headings show the card type and serial number for the input and output cards, and a summary view of the input signals for each input card.

- In the case of a multiviewer with more than one card, the card in the left-most slot (the slot with the lowest number) is designated as *card A*, and is considered as your system's *master* card. You cannot operate a KMX-4911 system without a master card. For more information about the location of card A in the frame, see [Installation of the KMX-4911 in the GV Node Frame](#), on page 23.
- The module status indicator shows whether the card (or module) is running normally (green) or in safe mode (red).
- The signal status indicators reveals the presence of a valid input signal at the corresponding connector.

- 2 Move the pointer to an input signal status indicator to view the associated signal format.

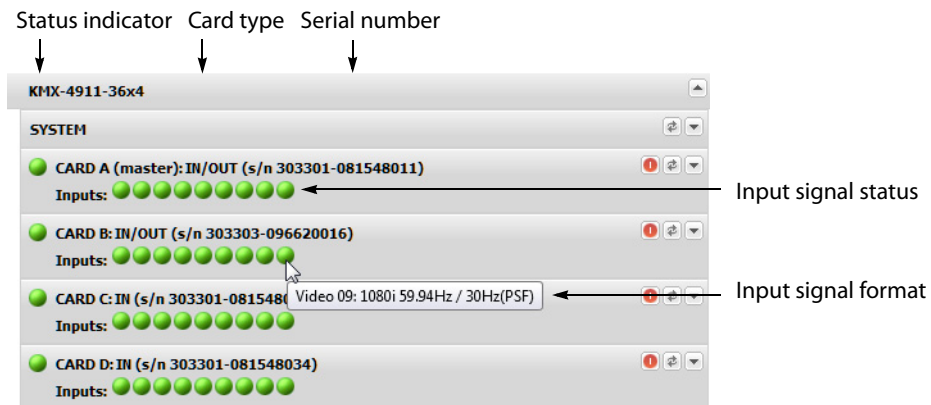


Note: The Kaleido Software does not distinguish neither between 1080PsF25 and 1080i50, nor between 1080PsF29.97 and 1080i59.94. Both 1080PsF25 and 1080i50 are reported as 1080i50, and both 1080PsF29.97 and 1080i59.94 are reported as 1080i59.94, on the monitor wall and in XAdmin's Status and Options page.

- 3 Click the arrow button at the end of a module's heading row to view more detailed information about this card or multiviewer.



- At any time you can click the Refresh button to make sure the data displayed for the selected module is up to date.
- Click the "Reset card" button to reset the card or reset the multiviewer remotely from your Web browser.

- 4 Review the enabled options for each module, and make sure that no error is reported.

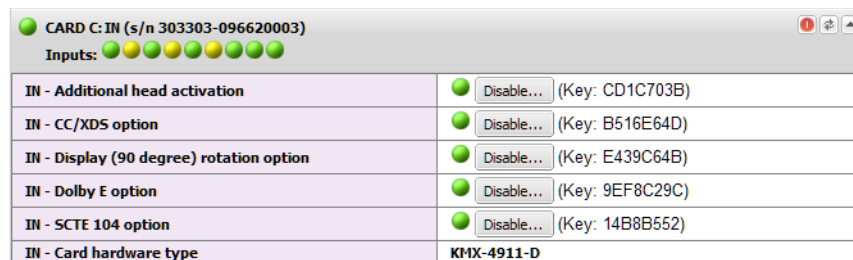

A card's enabled Kaleido Software options

For more information about Kaleido Software options, see [Available Hardware and Software Options](#), on page 108.

- 5 Check the main system statuses of the multiviewer to make sure that there are no errors or alerts related to system temperature, power supply status, fan operation, or other card fault conditions. This information is found under the individual cards.

CARD C: IN (s/n 303303-096620003)	
Inputs: ●●●●●●●●	
IN - Additional head activation	● Disable... (Key: CD1C703B)
IN - CC/XDS option	● Disable... (Key: B516E64D)
IN - Display (90 degree) rotation option	● Disable... (Key: E439C64B)
IN - Dolby E option	● Disable... (Key: 9EF8C29C)
IN - SCTE 104 option	● Disable... (Key: 14B8B552)
IN - Card hardware type	KMX-4911-D
IN - Critical Temperature	● ← Temperature
IN - Ethernet link down	●
IN - Fan Failure	● ← Fan status(s)
IN - Hardware Failure	● ← Hardware Failure
IN - Rear card hardware type	KMX-4911-54x4-4HRP
Video 01	● 1080i 59.94Hz / 30Hz(PSF) (EAV/SAV OK)
Video 02	● (EAV/SAV error)
Video 03	● 1080i 59.94Hz / 30Hz(PSF) (EAV/SAV OK)
Video 04	● (EAV/SAV error)
Video 05	● 1080i 59.94Hz / 30Hz(PSF) (EAV/SAV OK)
Video 06	● (EAV/SAV error)
Video 07	● 1080i 59.94Hz / 30Hz(PSF) (EAV/SAV OK)
Video 08	● 1080i 59.94Hz / 30Hz(PSF) (EAV/SAV OK)
Video 09	● 1080i 59.94Hz / 30Hz(PSF) (EAV/SAV OK)

Multiviewer system status and option information

Notes

- At any time you can click the **Refresh** button to make sure the data displayed for the selected card is up to date. Click the **Reset card** button at the end of a card's heading row to reset the card remotely, directly from your Web browser.

Verifying the Kaleido-RCP2

To verify that the Kaleido-RCP2 is functioning normally


- Log on to the Kaleido-RCP2 (see [Logging on to the Kaleido-RCP2](#), on page 108), and then test various operations using the Kaleido-RCP2 keyboard and the mouse (for example, load a predefined layout).

Loading a Layout

To load a layout on the monitor wall

- 1 Connect a mouse to the Kaleido-RCP2 (if available) and log on to the appropriate room, if you have not already done so (see [Logging on to the Kaleido-RCP2](#), on page 108).
Alternatively, connect the mouse directly to the USB port at the front of one of your system's output card. See [Troubleshooting with the card's front edge USB connector](#), on page 129.

- 2 Right-click anywhere on the monitor wall, point to **Monitor wall** (if you clicked a monitor), and then click **Load layout** on the menu.

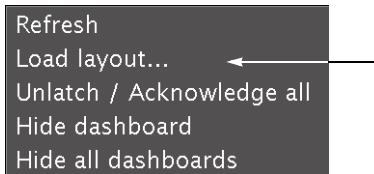

Monitor wall shortcut menu

A layout browser appears on the displays associated with the current room.

- 3 Select the layout you want to load from the list of available layouts for this room, and then click **OK**.

The selected layout appears on the room displays.

Customizing Layouts, Logical Sources, and other Kaleido-IP Elements

Refer to the *Kaleido Software User's Manual* to learn how to customize the Kaleido-IP to suit your specific needs.

Finding the Multiviewer's IP Address and Application Version

Note: The multiviewer's IP address can also be remotely set through a the KMX-4911's iControl service panel. See [Network Settings Panel](#), on page 94.

To find the system IP address and application version

- 1 Press the icon representing the appropriate card on the GV Node frame's local control panel touch display.
The Status LED on the selected card is flashing orange, and the version of the Kaleido Software that is running on the card (e.g. "8.00 build 2220") appears on the display of the GV Node frame's local control panel.
- 2 On the local control panel, touch the [-] button repeatedly until NETWORK SETTINGS appears on the display, and then touch the SEL button.
SYSTEM IP EDIT appears on the control panel's display.
- 3 Touch the SEL button again.
The current IP address appears on the display.
- 4 Press the Select button *on the front edge of the KMX-4911 card* to exit the control menu.

Maintenance

Required Tools

Use a field-supplied Phillips #2 screwdriver to remove and install rear panels.

Field Replaceable Units

The following components are field replaceable units. The repair procedure is to swap in a new (known good) component to restore system operation.

Description	Grass Valley Part Number
KMX-4911 Multiviewer Cards	See KMX-4911 Multiviewer Cards , on page 14
KMX-4911 Rear Panel	See KMX-4911 Rear Panels , on page 14
Optional SFP Module(s)	See Compatible SFP Modules , on page 18

There are no user-serviceable parts within these components except for the KMX-4911 multiviewer card in which the heatsink cooling fans can be replaced. See [Cooling Fan Replacement](#), on page 119.

Contact Customer Support to order an FRU. See [Grass Valley Technical Support](#), on page 138.

Opening and Closing the Front Door

The front door of the GV Node frame is hinged on the right-hand side, and latched by a captive thumbscrew on the left-hand side. There are no electrical connections to the door.

- Turn the thumbscrew counterclockwise until it releases, and pull the door open.

Close the front door as follows:

- Swing the door shut and turn the thumbscrew clockwise until the door is secured shut.

Replacing Cards

All cards and rear panels can be installed with the frame power on.

Each card has connectors which plug into a mid-frame mother board for distribution of power and for connection to the controller card, and a second connector which for certain cards plug directly into the rear panel for mosaic output connections to the display(s).

IMPORTANT


The rear panel must be installed before the KMX-4911 card is inserted into the frame.

The KMX-4911 card must be removed from the frame before the rear panel can be removed.

Replacing a rear panel

To replace a rear panel in a GV Node frame

- 1 If a card is already installed in a modular card slot served by the rear panel you are changing, remove it first (see [Removing a card](#), on page 118).
- 2 Remove the existing rear panel (either blank or belonging to an existing card) by releasing the captive screws at the bottom.
- 3 Position the new panel and secure it in place with the captive screw(s) at the bottom.

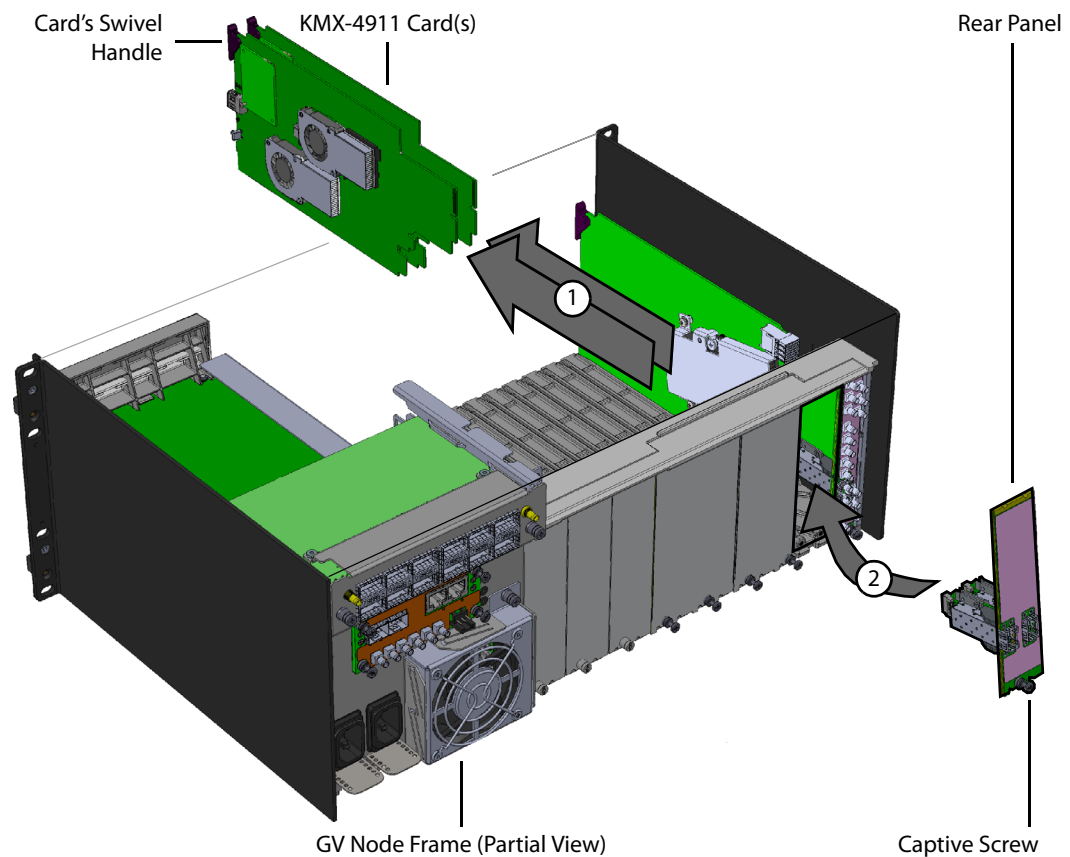

Example installation of a KMX-4911-18X4-4DRP Rear Panel in slots 2 and 3 in a GV Node Frame (partial view)

Removing a card

To remove a card

- 1 Open the front door of the frame (see [How to Open and Close the Front Door](#), on page 19).
- 2 Lift up the swivel handle on the front of the card you want to remove, to lever the connectors apart, and then use the handle to pull the card straight out of the modular card slot.
- 3 Close the front door of the frame (see [How to Open and Close the Front Door](#), on page 19).

Installing a Card

Note: The rear panel must be installed before the card. See [Replacing a rear panel](#) on page 118.

To install a card

The rear panel occupies between 1 and 6 modular card slots in the frame. One KMX-4911 card must be installed in each modular card slot covered by the rear panel.

- 1 Open the frame's front door. See [How to Open and Close the Front Door](#), on page 19.
- 2 Orient the card such that the card is up right with the swivel handle located at the top edge of the card.
- 3 While holding the card by its swivel handle, slide the KMX-4911 card into the slot and gently push on the swivel handle to seat the connectors.
- 4 Insert any remaining cards into the frame in the same manner.
- 5 Close the frame's front door. See [How to Open and Close the Front Door](#), on page 19.

Cooling Fan Replacement

A cooling fan has moving parts that, over time, can wear out. In the final stages of fan wear out, the fan makes a distinctive sound and it rotates at a slower speed, thereby reducing airflow which undermines its ability to remove heat from the card. Under this condition, fan replacement is required.

Also, dust contained in the ambient air can accumulate on the fan and on surfaces around the fan and heatsink, thereby reducing airflow, and preventing air from coming into direct contact with the heatsink surfaces which undermines the ability to remove heat from the card. Under this condition, cleaning is necessary and fan replacement may be required.

Some diagnostic procedures may interrupt normal system operation. Changing a card's cooling fan will interrupt normal system operation. Down time can be minimized by swapping in a new or a known good card to restore system operation quickly. Schedule these maintenance operations during off hours when the system is not in use.

Diagnostics

The KMX-4911 card's electronic circuitry generates heat that must be shed by forcing air to move across heat-generating components. Reduced air flow or high ambient temperature results in heat build-up within temperature-sensitive components on the card. This can cause unexpected behavior such as glitches or even a system freeze or shutdown. The KMX-4911 card self-diagnoses high temperature conditions by raising critical temperature and fan alarms.

Critical temperature and fan alarms are reported through the following mechanisms:

- The alarm status in XAdmin are called *XXXX fan failure* where XXXX identifies the specific fan. For example, *FSM 0 fan failure*.
- The alarm status in the iControl service's GSM is called *Hardware Failure*.
- The fan and critical temperature alarms are reported in iControl in the Alarms Configuration panel. See [Alarm Configuration Panel](#), on page 97 for more information.

- A KMX-4911 card's front Status LED flashes due to this condition (note that the Status LED can also flash due to other conditions). This cannot be stopped by a service panel action.
- A *Fan Failure* message is displayed in the dashboard.

The fan alarm indicates that the fan is not rotating fast enough due to wear and thus it may not provide enough cooling. A fan alarm must be addressed right away. A critical temperature alarm can be ignored if it is accompanied by a fan alarm as the root cause is the fan not rotating fast enough.

Otherwise, if the fan is running properly according to the fan alarm, then the *Critical Temperature Alarm Corrective Actions* steps should be taken.

Critical Temperature Alarm Corrective Actions

If the fan alarm is inactive and the critical temperature alarm is active, then undertake the following diagnostic steps in the following order:

- 1 Confirm that the room temperature is within GV Node's operating temperature range specification. If necessary, take corrective actions by, for example, increasing the amount of air conditioning made available to the GV Node frame.
- 2 Confirm that air flow around the GV Node's frame is not obstructed. If necessary, take corrective actions by, for example, removing obstructions or rerouting cables around and away from the GV Node frame.
- 3 When the previous corrective actions do not eliminate a critical temperature alarm, verify that the KMX-4911's onboard fan is working correctly. See [Fan Noise](#) below.

Fan Noise

Over time, a fan's performance (operating speed) can degrade which may raise critical temperature and fan alarms. Under this circumstance, a fan may emit a rough-sounding lower pitched sound as compared to the sound that other healthier fans emit. To confirm that the card has an abnormally-sounding fan, during off hours when the system is not in use, eject the card from the GV Node frame to verify that the distinctive sound stops and take corrective actions (see below).

Or there may be no sound at all if the fan's rotation is completely blocked. While the card is in the frame, make a visual inspection with a flashlight to confirm fan rotation. If the fan is not rotating, then corrective actions must be taken.

Fan Alarm and Fan Noise Corrective Actions

When a fan alarm is raised, it must be addressed right away. During off hours when the system is not in use, eject the card from the GV Node frame and inspect the card's fan assembly: remove any accumulated dust and dirt from the card with compressed air and remove any obstruction to the fan's ability to freely rotate.


Reinsert the card into the frame and restore system operation to see if the fan alarm becomes inactive.

The card's onboard circuitry monitors the fan motor's rotational speed to detect that the fan is rotating fast enough to provide sufficient cooling; it raises a fan alarm when the fan's rotational speed has gone below a factory-set threshold.

When the card's fan is not rotating fast enough (as detect by a fan alarm), is making abnormal noises, or is not rotating at all, the fan is worn out and it must be replaced with a new one.

Identifying the Fan to Replace for a Fan Fail Alarm

As some cards have more than one fan, identify in XAdmin the specific fan to be changed on the card: check each card individually for a fan fail alarm.

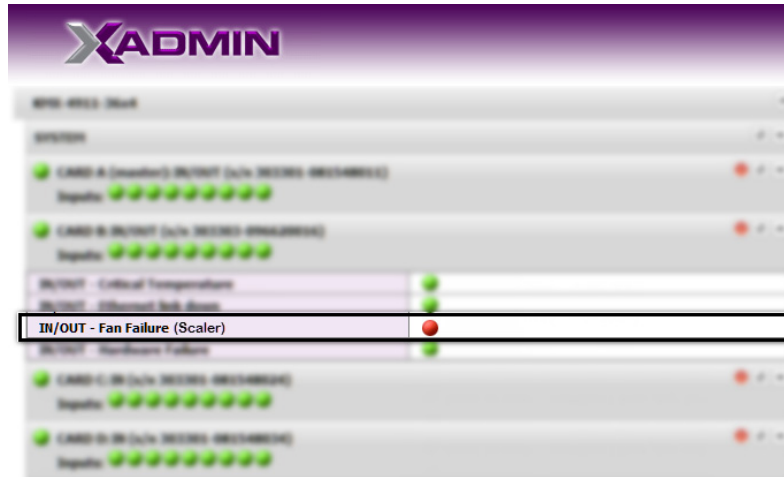


Fans are located on certain cards and within the multiviewer's frame. To replace a fan:

- on a card, see [Replacing KMX-4911 Card Fans](#), on page 122.
- within the multiviewer's frame, see the *GV Node IP Aggregation, Processing and Edge Routing Platform User Manual*.

Replacing KMX-4911 Card Fans

The location of the fans on the card are shown below. The location of the card's part number and serial number is also shown.

Note: Some cards may be equipped with only one fan.

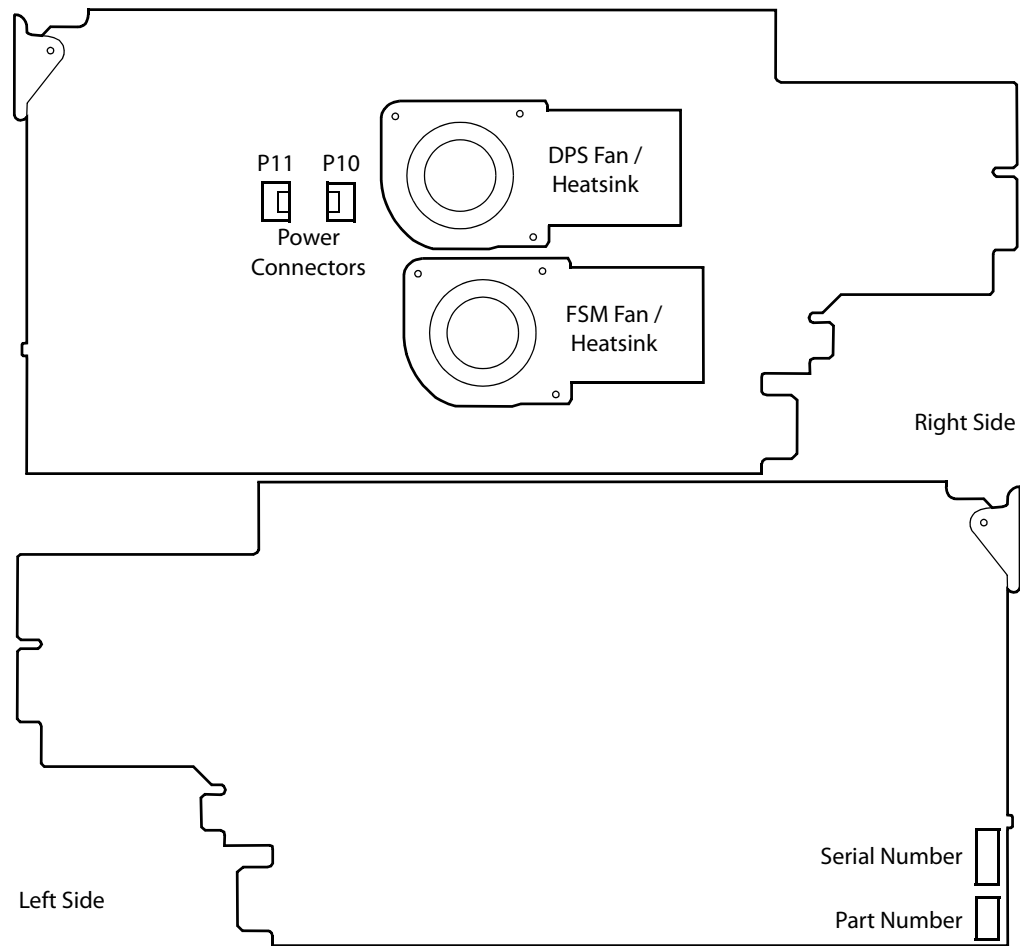

XEdit Fan Fail Alarm	Fan to change	Uses Power Connector
Fan Failure (DPS)	DPS Fan / Heatsink	P10
Fan Failure (FSM)	FSM Fan / Heatsink	P11


Fan Replacement Kit

The replacement fan kit is available by contacting Customer Support. See [Grass Valley Technical Support](#), on page 138. The location of the card's part number and serial number is shown above.

Required Tools

The following field-supplied material is required:

- Compressed air to remove dust from the card.
- Flashlight to perform a visual inspection to confirm fan rotation.
- Phillips screwdrivers:
 - #1 jeweler's screwdriver with a miniature shaft to remove the fan from the fan cover assembly and install the replacement fan back onto the fan cover assembly.
 - #2 screwdriver to remove and install the fan cover assembly.
- Curved tweezers to disconnect the fan's power connector from the KMX-4911 card.
- Anti-static bag or anti-static work surface to reduce the possibility of electrostatic discharge damage to the card.

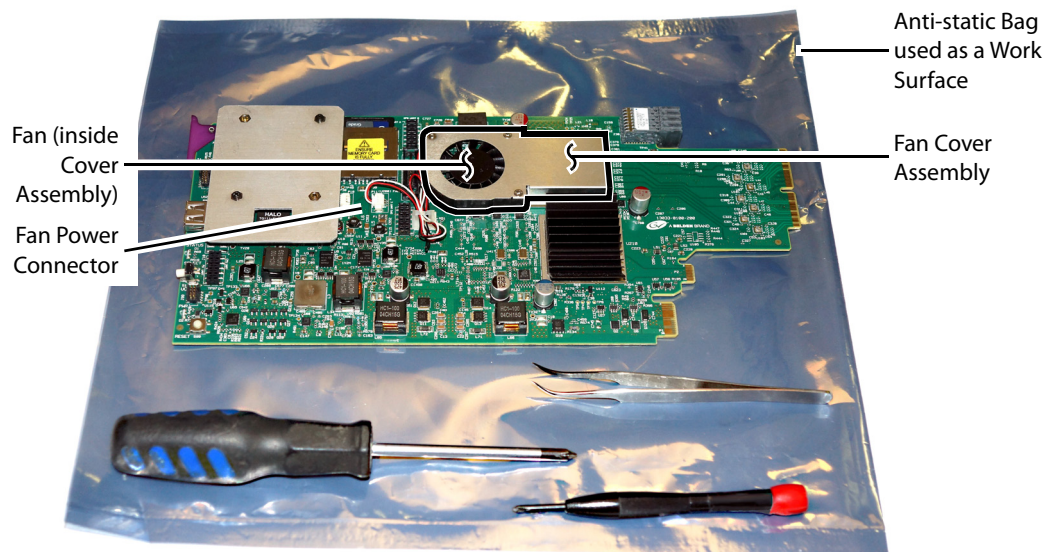


Typical card with onboard fan, screwdrivers, tweezers, and anti-static bag


To replace a fan

- 1 During off hours when the system is not in use, eject the card from the GV Node frame. See [Removing a card](#), on page 118.
- 2 Place the card on an anti-static bag or anti-static work surface.
- 3 Using curved tweezers, disconnect the fan power connector plug, very carefully; gently wiggle the connector plug from the socket (jack). Do not pull on the wires. If the wires


are routed through wire holders, remove the wires from the holders first, before disconnecting.

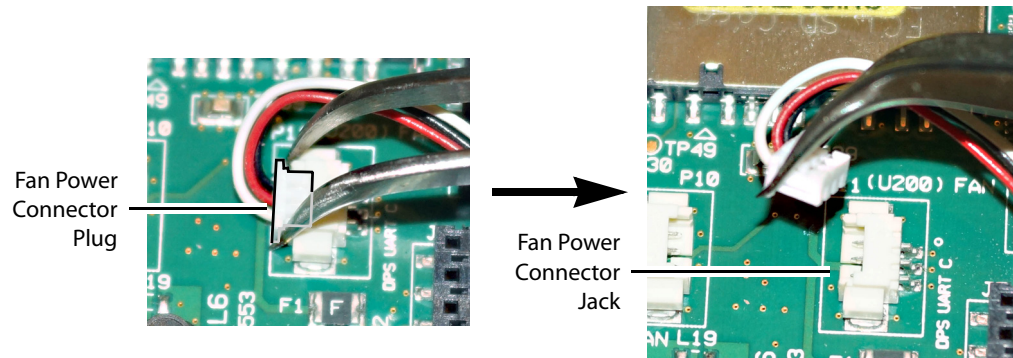

- 4 Free up the fan cover assembly by removing the 2 screws in the middle. Once the 2 screws are removed, remove the fan cover assembly.

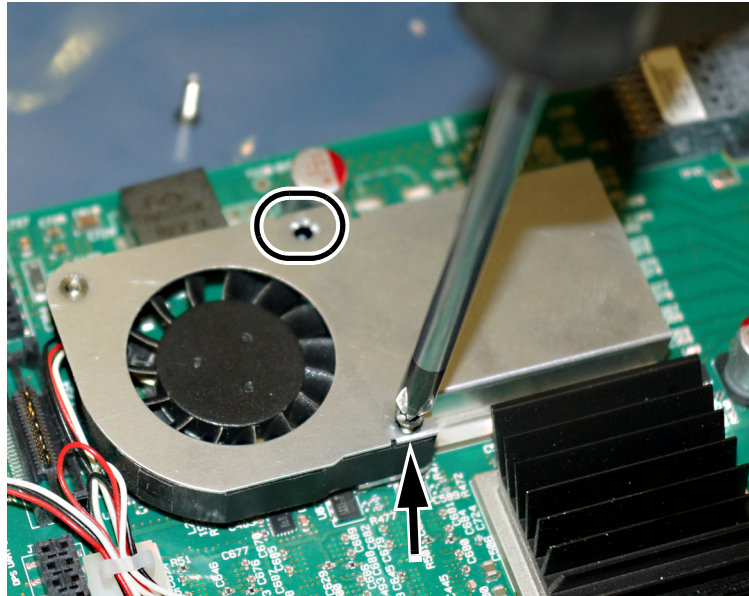

- 5 Flip the fan cover over, and remove the last screw holding the fan with the #1 Phillips screwdriver.

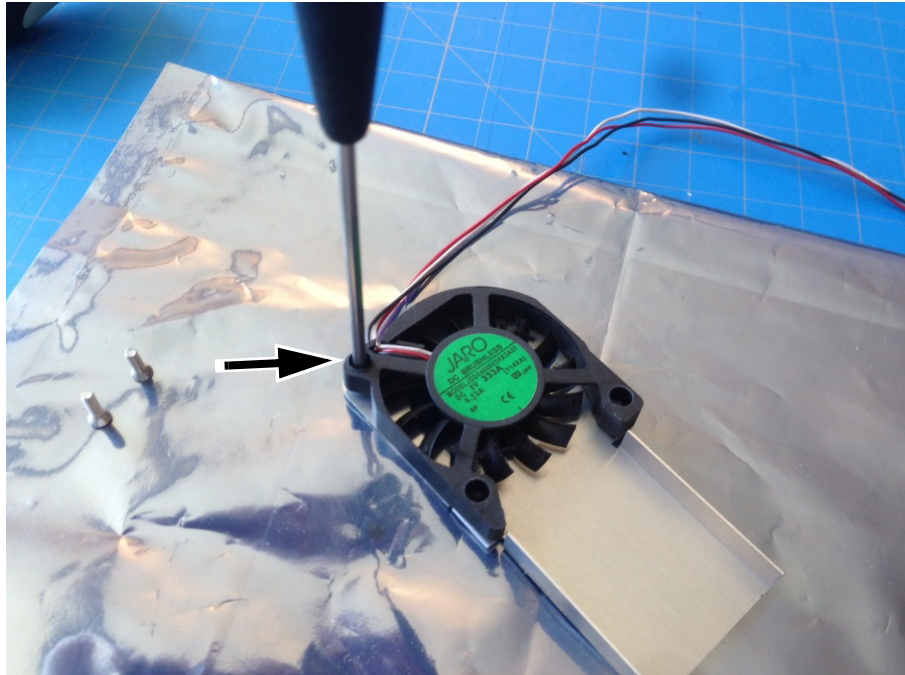

- 6 Remove any accumulated dust from the card with compressed air.
- 7 Replace the fan with the new one, and replace all screws, in the reverse order.
- 8 Route the fan's power wires through the wire holders, and make the connection to the card's fan power connector.
- 9 Restore system operation by inserting the card back into the GV Node frame. See [Installing a Card](#), on page 119.

Put the multiviewer into operation and confirm that the critical temperature and fan alarms remain inactive.


Generating a System Snapshot

A system snapshot creates a compressed file that contains information that can be used by Technical Support for troubleshooting purposes.

To generate a system snapshot

- 1 Open XAdmin. See [Opening XAdmin](#) on page 71.

The XAdmin Status and Options page appears.

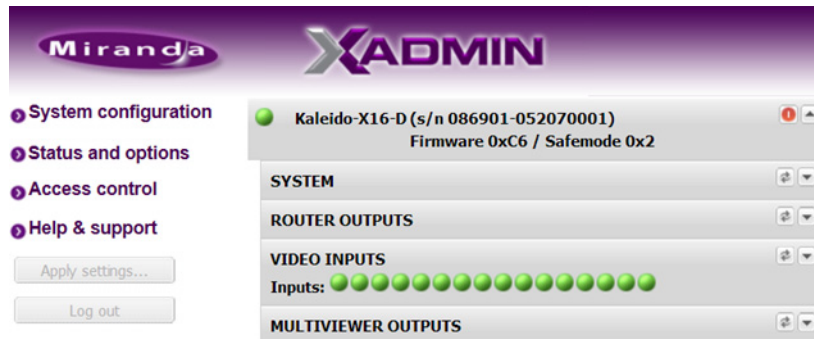

- 2 Click the **Help & support** link in the navigation pane.

The Technical Support page appears.



- 3 Click **system snapshot**.

The system snapshot generation may take a few moments, after which your browser prompts you to save the resulting compressed folder to your hard drive.

- 4 Browse to the location where you want to save the ZIP file, and then click **Save**.

Upgrading the Multiviewer

The Kaleido Software version currently loaded into a KMX-4911 card must meet the minimum Kaleido Software version number required by the multiviewer into which the KMX-4911 card is going to be installed. Otherwise, a the card will have to be individually upgraded (see [About Swapping KMX-4911 Cards into the Multiviewer](#), on page 128). The minimum Kaleido Software version number varies according to the multiviewer's capacity. For more information, see [Kaleido Software Minimum Version Compatibility](#), on page 19.

Whenever possible, upgrade the multiviewer to use the latest Kaleido Software version number to take advantage of the latest bug fixes and stability enhancements. See the Kaleido Software Release Notes for more information about a Kaleido Software release.

IMPORTANT

Back up your system database

Before upgrading the multiviewer system, make sure you have a backup of the current system database. Refer to *Creating a Backup* in the Kaleido Software User's Manual, for details.

Cluster systems

All multiviewers that are part of a cluster system must use the same Kaleido Software version. For cluster systems, Kaleido Software versions 8.70 and 6.50 introduce a hard compatibility break with previous Kaleido Software versions.

Cluster backups you create with version 8.70 and 6.50 (or higher), cannot be restored by using an earlier version of XEdit. Grass Valley recommends you make a backup of the individual databases for every cluster member, *before upgrading* from a pre-8.70 or pre-6.50 version, to version 8.70 or 6.50 (or higher) respectively.

The upgrade is performed from your PC by using the Densité Upgrade Manager application, which is part of iControl, and iControl Solo. Refer to the iControl Solo User Guide, or to the iControl User Guide, for more information. See [Related Documentation](#), on page 11 and [Software and Firmware Updates](#), on page 12.

Installing the Kaleido Software Upgrade

Upgrade packages are available by download. See [Software and Firmware Updates](#), on page 12. The upgrade package contains:

- the Kaleido Software Upgrade Manager application is required to upgrade the KMX-4911 multiviewer.
- one or more Kaleido Software operating system (.os, .zip, or .run) files.
- iControl drivers that are needed to update the card.
- upgrade documentation.

If you do not have the upgrade package, contact Grass Valley Technical Support (see [Grass Valley Technical Support](#), on page 138).

Loading the upgrade package into the Densité Upgrade Manager

- 1 From iControl Navigator, or iControl Solo, open Densité Upgrade Manager.
- 2 In **Densité Upgrade Manager**, click **Upload files**.
A file browser window opens.
- 3 Navigate to the upgrade package (e.g., KMX4911-8.7.0-BUNDLE-4-upgrade-package.zip), select it, and then click **Open**.
A progress indicator window appears.
- 4 Click **Upload**, to transfer the upgrade package to the Densité manager.
- 5 Once the operation has completed, click **Close**.

- 6 In the **Available package** column of **Densité Upgrade Manager**, expand the appropriate list to verify that the new upgrade package is present.

Upgrading the KMX-4911 multiviewer

When upgrading a multi-card KMX-4911 multiviewer system (for example, a multiviewer with more than one KMX-4911 card), you should select *all* multiviewer cards in Densité Upgrade Manager, so that they are all upgraded simultaneously and only one multiviewer reboot will be required.

- 1 Locate the KMX-4911 card(s) that belong to the multiviewer system you are upgrading.

TIP

If you have more than one KMX-4911 system in the GV Node frame, click the **Physical view** tab, where you can locate the multiviewer cards by their slot number.

- 2 For each card to be upgraded, select the upgrade package you uploaded in [step 3](#) (in [Loading the upgrade package into the Densité Upgrade Manager](#), on page 127) from the corresponding list, under **Available package**.
- 3 Make sure to set the check boxes under **Select/Bypass** for all the card(s) being upgraded.
- 4 Click **Upgrade**.
- 5 When prompted to confirm, click **Yes**.

During the upgrade, a progress bar appears in the **Install progress** column. Once the upgrade operation has completed, a message appears in the Install progress column. The multiviewer will reboot and the current KMX-4911 card Kaleido Software version will be shown under **Installed firmware** column.

About Swapping KMX-4911 Cards into the Multiviewer

The following instructions applies to a multiviewer that uses two or more KMX-4911 cards:

When you want to swap a KMX-4911 card into the multiviewer, the Kaleido Software version that was loaded onto this card may be unknown. If the card's Kaleido Software version is not supported by the multiviewer's capacity, according to the [Kaleido Software Minimum Version Compatibility](#) table, the card may not be recognized by the multiviewer.

When this happens:

- The swapped-in KMX-4911 card will not recognize the multiviewer's rear panel and will not communicate with other multiviewer cards.
- The swapped-in KMX-4911 card will not automatically upgrade / downgrade to the Kaleido Software version used by other KMX-4911 cards in the multiviewer.
- The multiviewer will not be fully functional. Streams that depend on the swapped-in card will not be available.

To know the KMX-4911 card's current version, insert the card into the GV Node frame and then find the card's Kaleido Software version through the frame's local control panel (see [Using the GV Node Frame Control Panel](#), on page 47) or through the Densité Upgrade Manager (launched from iControl Navigator, or iControl Solo).

If the card's Kaleido Software version is found to be too old, the card's Kaleido Software will have to be upgraded in order to make the multiviewer fully functional. The following options are available:

- Upgrade the KMX-4911 card to use the same Kaleido Software version that the other multiviewer KMX-4911 cards are currently using.
- Upgrade all multiviewer KMX-4911 cards to the latest Kaleido Software version. See [Software and Firmware Updates](#), on page 12.

To upgrade the multiviewer, see [Installing the Kaleido Software Upgrade](#), on page 127.

Troubleshooting

Troubleshooting with the card's front edge USB connector

A USB mouse can be directly connected to the multiviewer card for troubleshooting purposes (as opposed to connecting the mouse to a Kaleido-RCP2, for instance) with the following conditions.

- The pointer can only travel between the displays supported by that card.
- When more than one display is connected to the card, the required mouse movement to go between displays does not always follow the wall layout set in XEdit. For example, you will have to move the mouse pointer horizontally or vertically in order to go from one display to the next.

Dashboard Messages

The following tables explain messages that may appear in the *Status dashboard* (lower right corner) and in the *Upgrade dashboard* (lower left corner), on the Monitor wall.

Status dashboard messages

Message	Description
Duplicate IP Address Detected	Another equipment on the network shares the same IP address as an output card.
Duplicate frame IP address	Another equipment on the network shares the same IP address as the multiviewer system (in a multiple output card setup).
Ethernet Link Down	The output card to which this display monitor is connected has lost its network connection.
Card temperature critical	Card is overheating, which might result in decreased system performance (e.g., green dots, flickering, card not starting). You should halt operations until the overheating problem is resolved.
Card temperature high	Temperature warning; this indicates that the card is warmer than normal and that you should verify cooling and ventilation (e.g., check for anything obstructing the ventilation openings).
Hardware failure	Voltage, current or power is above or below their critical thresholds.
FPGA fan failed	FPGA fan failed

Status dashboard messages (*continued*)

Message	Description
Fan Fail	One of the input card's fan is running too slow or not at all.
Firmware status	Tells whether firmware is running properly on the card.

7 Specifications

This chapter lists equipment specifications for the KMX-4911 input, output, and companion cards, and their rear panels.

KMX-4911 Multiviewer Cards

Video

Audio / Video Inputs

Parameters	Value
Signal inputs	9 per KMX-4911 card
Formats (auto-detected)	525i59.94 625i50 720p50 720p59.94 1080i50 1080p50 1080i59.94 1080p59.94 Note: ASI and TICO formats are not supported by the KMX-4911.

Mosaic Outputs

Parameters	Value
Delay	Referenced: <ul style="list-style-type: none"> • 33 ms @ 59.94 Hz • 40 ms @ 50 Hz
Formats	<ul style="list-style-type: none"> • 1080p59.94 (level A) • 1080p50 (level A) • 1080i59.94 • 1080i50 • 2160p59.94 Square Division Quad Split (SDQS) over quad-link 3G • 2160p50 Square Division Quad Split (SDQS) over quad-link 3G • HDMI 2.0 2160p59.94 through an external quad-link 3G to HDMI converter • HDMI 2.0 2160p50 through an external quad-link 3G to HDMI converter
Audio Monitoring	Embedded on mosaic outputs

HDMI SFP (optional)

Parameters	Value
Number of outputs	1 per SFP module
Connector	HDMI type D
Signal	HDMI V1.4
Format	1920x1080p 50 Hz or 59.94 Hz

SDI Coaxial SFP (optional)

Parameters	Value
Number of outputs	Up to 2 per SFP module
Connector	DIN 1.0/2.3
Signal HD	SMPTE ST 292-1 (1.485, 1.485/1.001 Gb/s)
Signal 3G	SMPTE ST 424 (2.97, 2.97/1.001 Gb/s) Level A
Formats	1080p59.94, 1080p50, 1080i59.95, 1080i50

Fiber SFP (optional)

Parameters	Value
Number of outputs	Up to 2 per SFP module
Formats	1080p59.94, 1080p50, 1080i59.95, 1080i50 For more SFP fiber options refer to http://www.grassvalley.com/products/sfp_optical_plugin_cartridges . See also Grass Valley's DXF-300 Optical AV Media Extender.

GV Node Frame

See [GV Node webpage](#) for full specifications.

Electrical

Power consumption (without SFP Module)

Multiviewer Capacity	Multiviewer Cards	KMX-4911 rear panel	Power consumption
9 × 1	1 × KMX-4911-9X1	KMX-4911-9X2-4SRP	28.5 W total
9 × 2	1 × KMX-4911-9X2	KMX-4911-9X2-4SRP	28.5 W total
18 × 1	2 × KMX-4911-9X1	KMX-4911-18X4-4DRP	57.0 W total
18 × 2	2 × KMX-4911-9X2	KMX-4911-18X4-4DRP	57.0 W total
18 × 4	2 × KMX-4911-9X2	KMX-4911-18X4-4DRP	57.0 W total
27 × 1	3 × KMX-4911-9X1	KMX-4911-27X4-4TRP	87.0 W total
27 × 2	3 × KMX-4911-9X2	KMX-4911-27X4-4TRP	87.0 W total
27 × 4	3 × KMX-4911-9X2	KMX-4911-27X4-4TRP	87.0 W total
36 × 1	4 × KMX-4911-9X1	KMX-4911-36X4-4QRP	117.0 W total
36 × 2	4 × KMX-4911-9X2	KMX-4911-36X4-4QRP	117.0 W total
36 × 4	4 × KMX-4911-9X2	KMX-4911-36X4-4QRP	117.0 W total
54 × 1	6 × KMX-4911-9X1	KMX-4911-54X4-4HRP	147.0 W total
54 × 2	6 × KMX-4911-9X1	KMX-4911-54X4-4HRP	147.0 W total
54 × 4	6 × KMX-4911-9X1	KMX-4911-54X4-4HRP	147.0 W total

Each optional SFP module typically consumes 1.5 W maximum.

Physical

Environment

Parameters	Value
Full specification temperature range	0–40°C (32–104°F) (ambient)
Maximum storage humidity	90% RH non-condensing
Maximum functional humidity	65% RH non-condensing

Weight (without SFP Module)

Multiviewer Capacity	Multiviewer Cards	KMX-4911 rear panel	Weight
9 × 1	1 × KMX-4911-9X1	KMX-4911-9X2-4SRP	305.1 g total
9 × 2	1 × KMX-4911-9X2	KMX-4911-9X2-4SRP	305.1 g total
18 × 1	2 × KMX-4911-9X1	KMX-4911-18X4-4DRP	612.6 g total
18 × 2	2 × KMX-4911-9X2	KMX-4911-18X4-4DRP	612.6 g total
18 × 4	2 × KMX-4911-9X2	KMX-4911-18X4-4DRP	612.6 g total
27 × 1	3 × KMX-4911-9X1	KMX-4911-27X4-4TRP	899.4 g total
27 × 2	3 × KMX-4911-9X2	KMX-4911-27X4-4TRP	899.4 g total
27 × 4	3 × KMX-4911-9X2	KMX-4911-27X4-4TRP	899.4 g total
36 × 1	4 × KMX-4911-9X1	KMX-4911-36X4-4QRP	1186.2 g total
36 × 2	4 × KMX-4911-9X2	KMX-4911-36X4-4QRP	1186.2 g total
36 × 4	4 × KMX-4911-9X2	KMX-4911-36X4-4QRP	1186.2 g total
54 × 1	6 × KMX-4911-9X1	KMX-4911-54X4-4HRP	1759.9 g total
54 × 2	6 × KMX-4911-9X1	KMX-4911-54X4-4HRP	1759.9 g total
54 × 4	6 × KMX-4911-9X1	KMX-4911-54X4-4HRP	1759.9 g total

Each optional SFP module typically weighs 75 g or less.

Installing the SFP Output Module

Introduction

Installing and removing the SFP output interface cartridge requires special care. This annex describes the process.

Rear panels incorporate one or two SFP interface(s). The interface consists of two parts:


- A socket on the rear panel into which an SFP interface module is plugged
- An SFP (Small Form-factor Pluggable) module that performs output medium translation to which connections are made for optical fibers, coaxial copper, and so on.

CAUTION


- SFP fiber Transmitter modules contain a class 1 laser, which emits invisible radiation whenever the module is powered up. Because the SFP is hot-swappable, the module may be powered up as soon as it is installed.
- DO NOT LOOK INTO AN OPERATING SFP FIBER MODULE'S CONNECTORS, AS EYE DAMAGE MAY RESULT.
- The SFP module is sensitive to electrostatic discharge (ESD). It is recommended that you use an ESD-preventive wrist strap grounded to the GV Node chassis while handling the SFP module.
- SFP modules are subject to wear, and their useful lifetime is reduced each time they are inserted or removed. Do not remove them more often than is absolutely necessary.
- Never remove or install an SFP fiber module with the fiber optic cables connected. Damage to the cables could result.
- The presence of dust and debris can seriously degrade the performance of an optical interface. It is recommended that you insert a dust plug into the SFP fiber module whenever a fiber optic cable is not connected.

Installing an SFP module


- 1 Make sure that the bale clasp lever is in the closed position.

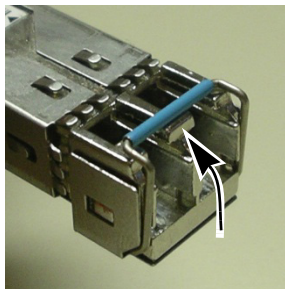

- 2 Position the SFP module so that the recessed slot is lined up with the tab side of the socket.

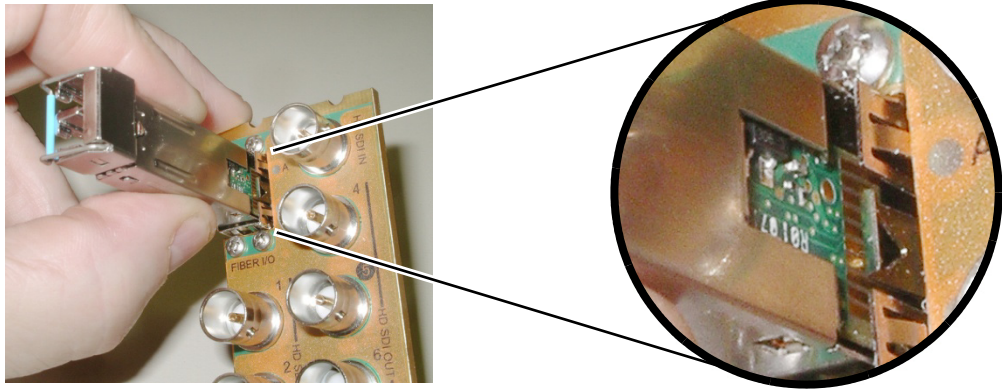

- 3 Slide the module straight into the socket, and push gently until it clicks into position.

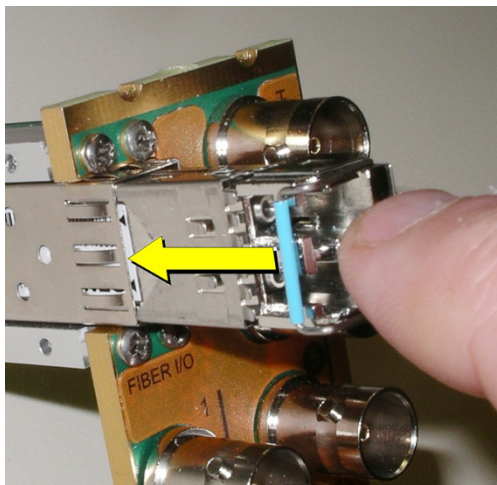

Connecting the fiber optic cables


- 1 Remove the dust plug from the SFP module if present
- 2 Verify that the exposed end of the optical fiber in the LC connector is clean
 - Carefully remove any debris if necessary.
- 3 Plug the LC-terminated fiber optic cable into the SFP module

Removing the fiber optic cables


- 1 Grasp the LC fiber optic connector that is plugged into the SFP module, and pull it straight out to disengage the optical fiber from the SFP.
 - Never pull the fiber optic cable itself, as irreversible damage may occur.
- 2 Insert a dust plug into the SFP module.

Removing the SFP module

- 1 Move the bale clasp lever to the open position.

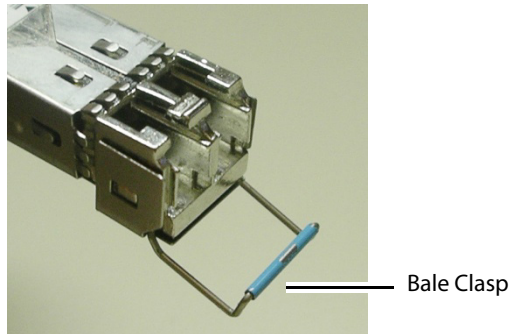

- 2 Grasp the SFP module between your thumb and forefinger, and pull it straight out of the slot.

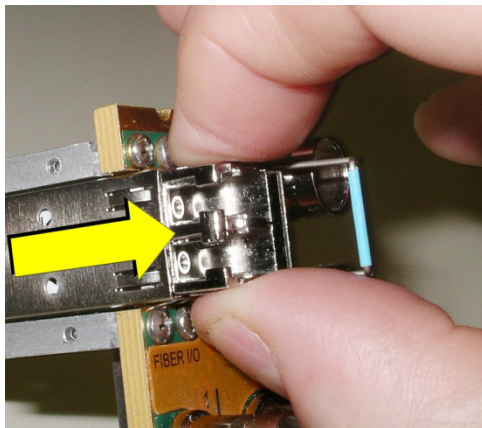

- Do NOT pull on the bale clasp lever to remove the module, as it is easily damaged.
 - You may find that you need to wiggle the module, or perhaps push it into the slot a bit, before it will release and slide out.
- 3 For fiber optic models, insert a dust plug into the SFP module.



Grass Valley Technical Support

For technical assistance, contact our international support center, at 1-800-547-8949 (US and Canada) or +1 530 478 4148.

To obtain a local phone number for the support center nearest you, consult the Contact Us section of Grass Valley's website (www.grassvalley.com).

An online form for e-mail contact is also available from the website.

Corporate Head Office

Grass Valley
3499 Douglas-B.-Floreani
St-Laurent, Quebec H4S 2C6
Canada
Telephone: +1 514 333 1772
Fax: +1 514 333 9828
www.grassvalley.com